

AC-24-12(006) Volvo FH(4) & FM(4) Camera connection

- Vehicle must have Volvo Video switcher installed. Video switcher will be found below the central fuse box in the centre of the dashboard.
- 30 way Blue connector may be required (Volvo Part number 3962003).
- Video switcher may require programming by Volvo to enable cameras.



Rear view of Connector

Pin No	Function	AC-24-12(006) wire colour
1	Not Connected	N/A
2	Cam 4 Video	Yellow
3	Cam 3 Video	Yellow
4	Cam 2 Video	Yellow
5	Cam 1 Video	Yellow
6	Not Connected	N/A
7	Not Connected	N/A
8	Cam 1 Logic	Blue
9	Cam 1 Power	Red
10	Cam 4 Power	Red
11	Cam 4 Logic	Blue
12	Cam 3 Power	Red
13	Cam 2 Power	Red
14	Cam 2 Logic	Blue
15	Not Connected	N/A
16	Cam 4 GND	Black
17	Cam 3 GND	Black
18	Cam 2 GND	Black
19	Cam 1 GND	Black
20	Not Connected	N/A
21	Not Connected	N/A
22	Not Connected	N/A
23	Not Connected	N/A
24	Cam 3 Logic	Blue
25	Not Connected	N/A
26	Not Connected	N/A
27	Not Connected	N/A
28	Not Connected	N/A
29	Not Connected	N/A
30	Not Connected	N/A