

BACKCHAT speaking ATTACK ALARM

Fitting Instructions . All models


- The **Backchat** attack alarm should be fitted on the vehicle in a secure and un-obstructed position, making sure it faces the area of the vehicle where you wish the sound to be loudest, *do not cover the speaker opening*. The **Red** switch should be mounted in an easy to operate position i.e. the dashboard, the **Black** switch should be mounted out of sight, where only the driver/operator can access it.
- **Operation: Four wire model:** this unit is in permanent standby, a momentary press of the Red (start) push button starts the attack alarm, the message will be continuously repeated until the internal 5 minute output timer expires, or a momentary press of the Black (stop) push button will silence the message.
- **Operation: 2 wire model:** apply power, the message will be output and continuously repeated until the power is removed or the internal 5 minute output timer expires.

BC-AA (Two wire)

- I. Connect Red wire to positive via control system.
- II. Connect Black wire to Vehicle negative /earth.

BC-AA (Four wire)

- I. Connect Red wire to permanent positive.
- II. Connect Blue wire to via **start** PB to positive.
- III. Connect Brown wire via **stop** PB to negative
- IV. Connect Black wire to Vehicle negative/earth.

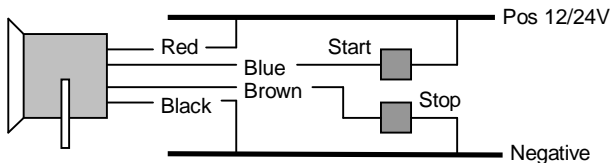

The **Backchat** conforms to EMC regulations set out in 89/336/EEC 
(Backchat is a registered Trademark)

Brigade Electronics PLC Brigade House, The Mills, Station Road, South
Darenth, Kent, UK. DA4 9BD Tel: 0870-774-1502