

# BACKCHAT ATTACK ALARM

## Fitting Instructions . All models


- The **Backchat** attack alarm should be fitted on the vehicle in a secure and un-obstructed position, making sure it faces the area of the vehicle where you wish the sound to be loudest, *do not cover the speaker opening*. The **Red** switch should be mounted in an easy to operate position i.e. the dashboard, the **Black** switch should be mounted out of sight, where only the driver/operator can access it.
- **Operation: Four wire model:** this unit is in permanent standby, a momentary press of the Red (start) push button starts the attack alarm, the message will be continuously repeated until the internal 5 minute output timer expires, or a momentary press of the Black (stop) push button will silence the message.
- **Operation: 2 wire model:** apply power, the message will be output and continuously repeated until the power is removed or the internal 5 minute output timer expires.
- This product should be suitably fused at source.

### BC-AA (Two wire)

- Connect Red wire to positive via control system.
- Connect Black wire to Vehicle negative /earth.

### BC-AA (Four wire)

- Connect Red wire to permanent positive.
- Connect Blue wire to via **Start** PB to positive.
- Connect Brown wire via **Stop** PB to negative
- Connect Black wire to Vehicle negative/earth.

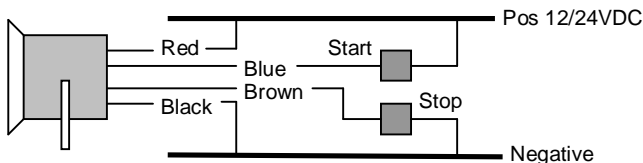

**Backchat** conforms to EMC regulations set out in 2014/30/EU

(Backchat is a registered Trademark)



**Brigade Electronics PLC** Brigade House, The Mills, Station Road,  
South Darenth, Kent, UK. DA4 9BD Tel: 01322 420 347 Issue: 02