

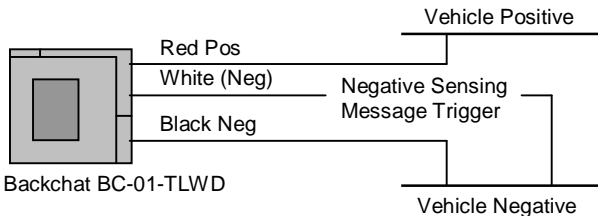
BACKCHAT® SPEAKING BACKALARM

Fitting Instructions BC-01-TLWD



- Bolt the **Backchat** in a suitable location near to user in any attitude except speaker grille facing up.
- For better sound projection the **Backchat** speaker should face towards the user, do not obstruct the speaker grille.
- The **Backchat** must be permanently powered, to operate, remove the negative source (Ground/0v) from the message trigger wire, the message will be repeated until the trigger is reconnected to a negative source or for however many message repeats have been set at time of manufacture.

BC-01-TLWD (Single message)

- Connect Red wire to permanent positive 12/24VDC.
- Connect Black wire to Vehicle negative /earth.
- Connect the White trigger wire to ground via appropriate control switches or devices, the trigger input is N/C negative sensing.
- This product should be suitably fused at source.
- This product is normally fitted with 3 way Superseal connector.



Typical Installation

Backchat conforms to EMC regulations set out in 2014/30/EU  
(Backchat is a registered Trademark)

Brigade Electronics PLC Brigade House, The Mills, Station Road,
South Darenth, Kent, UK. DA4 9BD Tel: 01322 420 347

Issue: 02