

BACKCHAT SPEAKING BACKALARM

Fitting Instructions - All Models


- Bolt the **Backchat** to any convenient position at the rear of the vehicle, in any attitude except speaker grille facing up.
- For better sound projection the **Backchat** speaker should face towards the rear of the vehicle, do not obstruct the speaker grille.
- To operate, apply power, message will be repeated until the power is removed.
- The **NS Backchat** models have an integral cut out, which silences the unit if required. To operate, double engage reverse gear within 1 second. (Restricted hours 11.30pm . 7.30am)

BC-01 (Single message)

- Connect Red wire to reversing light positive
- Connect Black wire to Vehicle negative /earth.

BC-02 (Dual message)

- Connect Red wire to reversing light positive.
 - Connect Blue wire to Tail Lift motor positive.
 - Connect Black wire to Vehicle negative/earth.
- If required the **Backchat** can be cut out during restricted hours using our **TCO-47** timed cut out switch (available separately).
 - This product should be suitably fused at source.

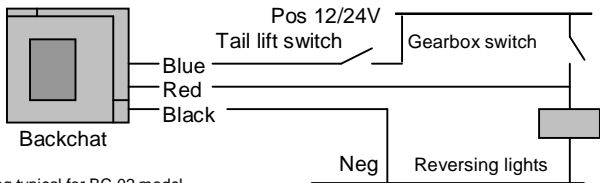

Wiring typical for BC-02 model

Backchat conforms to EMC regulations set out in 2014/30/EU

(Backchat is a registered Trademark)



Brigade Electronics PLC Brigade House, The Mills, Station Road,
South Darenth, Kent, UK. DA4 9BD Tel: 01322 420 347

Issue: 02