





# Mobile Digital Recorder

**MDR 600 Series**

**MDR-641XX-X-XXX(XX)**

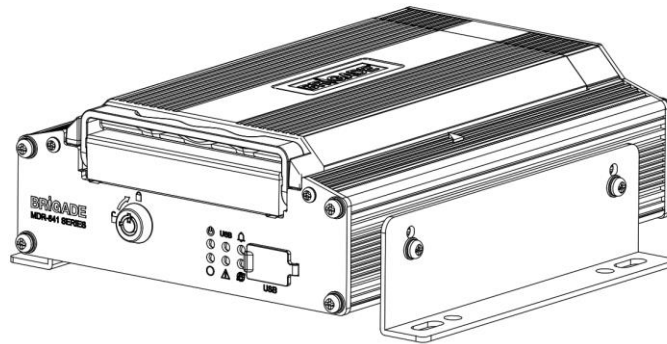

**MDR-644XX-X-XXX(XX)**

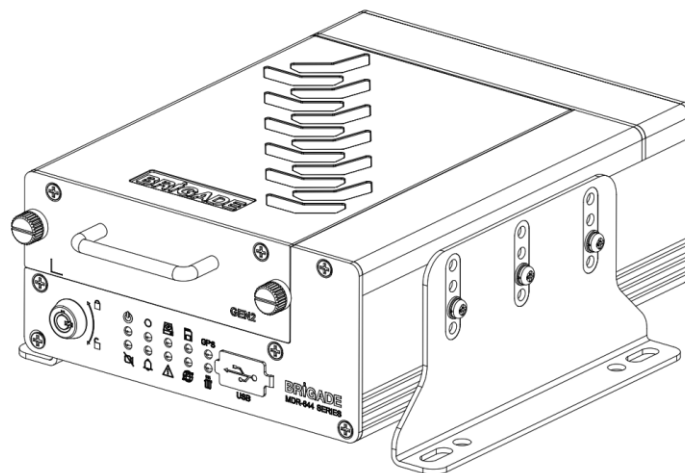

## Installation and Operation Guide

Please refer to [www.brigade-electronics.com](http://www.brigade-electronics.com) for the latest version of this manual

## Table of Contents

1	Introduction to MDR 600 Series Technology	3	8.2.1	Mobile Network	42
1.1	Product Features	4	8.2.2	Wi-Fi	42
1.1.1	General Specification of MDR 600 Series	4	8.2.3	GPS	43
1.1.2	Common Features of MDR 600 Series	4	8.3	Server Status	43
2	Kit Contents	4	8.4	Environment	43
2.1	MDR 600 Series Kits	4	8.5	Storage	43
2.1.1	MDR-644XX-X-XXX(XX)	4	8.6	History	44
2.1.2	MDR-641XX-X-XXX(XX)	5	9	MDR-Dashboard 6.0	44
2.1.3	Common Accessories	5	9.1	PC System Requirements	44
2.1.4	MDR 641 Series Accessories	5	9.2	Retrieving HDD Data (Quick Guide)	44
2.1.5	MDR 644 Series Accessories	5	9.3	Installing MDR-Dashboard 6.0	45
2.2	Optional Accessories	6	9.4	Connecting the MCU to the PC	46
2.2.1	Remote Status & Interface Panel	6	9.4.1	Pre-Connection Procedure (Preferred)	46
2.2.2	MCU Reader	6	9.4.2	MCU Connection Procedure (Required)	46
2.2.3	MDR SmartController	6	9.4.3	Connection Confirmation	46
2.2.4	Adapter Cables	6	9.5	Loading from HDD/SD	47
2.2.5	Optional Secondary Storage Medium	6	9.6	MDR-Dashboard 6.0 Local Mode	48
3	Hardware Installation	7	9.6.1	Channel Info	48
3.1	Front View	7	9.6.2	Events and Graphs	49
3.1.1	MDR-641XX-X-XXX(XX) Front View	7	9.6.3	Frame Information	50
3.1.2	MDR-644XX-X-XXX(XX) Front View	7	9.6.4	Sensor Status	51
3.2	Rear View	8	9.6.5	Map Tracking	51
3.2.1	MDR-641XX-X-XXX(XX) Rear View	8	9.7	Loading from a USB flash drive or Folder	51
3.2.2	MDR-644XX-X-XXX(XX) Rear View	8	9.8	Reading Data	52
3.3	Mobile Caddy Unit (MCU Contains HDD)	9	9.9	Exporting Videos	54
3.3.1	MDR-641-X-MCU-XXX	9	9.10	Saving Snapshots	55
3.3.2	MDR-644-X-MCU-XXX	9	9.11	User and System settings	55
3.4	USB Mouse	9	10	MDR-Player 6.0	56
3.5	MDR-641XX-X-XXX(XX) Connection Diagram	10	10.1	Exported MDR-Player 6.0	57
3.6	MDR-644XX-X-XXX(XX) Connection Diagram	11	10.2	Setting up MDR-Player 6.0	57
3.7	Mobile Caddy Unit Removal	12	10.3	Basic Operations	57
3.7.1	MDR-641XX-X-XXX(XX) MCU Removal	12	11	Advanced Ethernet Configurations	60
3.7.2	MDR-644XX-X-XXX(XX) MCU Removal	12	11.1	Ethernet Setup	60
3.8	SD Card Removal	13	11.2	Ethernet Operation	61
3.8.1	MDR-644XX-X-XXX(XX) SD Card Removal	13	11.3	Ethernet Maintenance	62
3.9	SIM Card Installation	13	11.4	Ethernet Log	63
3.9.1	MDR-641XX-X-XXX(XX) SIM Card Installation	13	11.5	Ethernet Configuration	63
3.9.2	MDR-644XX-X-XXX(XX) SIM Card Installation	13	12	On-screen Display Map	63
3.10	Antennas Installation	14	12.1	Rec Search	63
3.10.1	GPS antenna Installation (Included)	14	12.1.1	Rec Search	63
3.10.2	Wi-Fi antenna (Depending on Model)	14	12.2	SYSTEM INFO ⓘ	64
3.10.3	Mobile Network antenna (Depending on Model)	14	12.2.1	Version Info ⓘ	64
4	MDR On-Screen Display (OSD)	14	12.2.2	Modules ⓘ	64
4.1	Quick Menu	14	12.2.3	Server Status ⓘ	65
4.2	Login	15	12.2.4	Environment ⓘ	66
4.3	Logout ⓘ	16	12.2.5	Storage ⓘ	66
5	Setup ⓘ	16	12.2.6	History ⓘ	66
5.1	Basic Setup ⓘ	16	12.3	LOG SEARCH ⓘ	66
5.1.1	Register Information	16	12.4	SETUP ⓘ	67
5.1.2	Time Setup	17	12.4.1	Basic Setup ⓘ	67
5.1.3	Power	17	12.4.2	Surveillance ⓘ	71
5.1.4	User Setup	19	12.4.3	Events ⓘ	75
5.1.5	HDD Key	19	12.4.4	Alarms ⓘ	77
5.1.6	Network	20	12.4.5	Maintenance ⓘ	86
5.1.7	Application	23	12.5	LOGOUT ⓘ	87
5.1.8	Other Setup	23	12.5.1	Logout Prompt	87
5.2	Surveillance ⓘ	24	13	Help Button ⓘ	88
5.2.1	Live View	24	14	Mounting Dimensions	89
5.2.2	Record	25	14.1	MDR-641XX-X-XX-XXX(XX)	89
5.2.3	IP Camera Setup	28	14.2	MDR-644XX-X-XX-XXX(XX)	89
5.3	Events ⓘ	29	15	Appendices	89
5.3.1	General	29	15.1	Video Quality Table	89
5.3.2	Snapshots	30	15.2	MDR Storage Calculator	90
5.4	Alarms	31	15.3	User Log Description	90
5.4.1	General	31	15.4	MDR-Dashboard 6.0 Silent Installation	90
5.4.2	Video	33	15.5	MDR-Dashboard 6.0 Additional PowerShell Switches	91
5.4.3	Advanced	36	15.6	Events Table	91
5.4.4	AI	37	16	Testing and Maintenance	91
5.5	Maintenance	37	16.1	Operator Instructions	91
5.5.1	Configuration	37	16.2	Maintenance and Testing	92
5.5.2	Metadata	38	17	General Antenna Guidelines	92
5.5.3	Upgrade	38	18	Troubleshooting	93
5.5.4	Storage	39	18.1	MDR Unit	93
5.5.5	Reset	39	18.2	MDR Fireproof Box	93
6	Record Search ⓘ	40	19	Specifications	94
7	Log Search ⓘ	41	20	Approvals	97
8	System Information	42	21	Glossary	98
8.1	Version Information	42	22	Disclaimer	99
8.2	Modules	42			

# 1 Introduction to MDR 600 Series Technology

Brigade's MDR 600 Series are advanced Mobile Digital Recorders (MDRs) designed to record and playback various channels. The system uses Analog High Definition (AHD), Phase Alternating Line (PAL) or National Television System Committee (NTSC) television systems. The resolution can be CIF, WCIF, HD1, WHD1, D1, WD1, 720P, 960P or 1080P. Information related to recording parameters, alarms and trigger status can be recorded along with speed, location and G-Force data. In addition, data related to the unit itself such as voltage and temperature are recorded and plotted graphically in MDR Software (MDR-Dashboard 6.0 and MDR-Player 6.0). This information is called metadata.

Recordings can be searched, viewed and exported (clipped and saved locally) using MDR-Dashboard 6.0 software. This allows users to access all the vehicle's travel information, including route tracking. Recordings can be easily exported in three different ways: as a simple audio/video MP4 file playable by consumer media players; as native proprietary format clips or as a password protected .exe file with an embedded MDR-Player 6.0.

The main storage unit is a large capacity Conventional Magnetic Recording Hard Disk Drive (CMR HDD) or Solid-State Drive (SSD). The secondary storage is an internal SD (Secure Digital) card for sub-stream, HDD mirror (simultaneous) or alarm recording. The SD card stores video data and frame information only in chosen image resolution and frame rate. This is useful in extreme scenarios where the primary storage media reaches its limitations (e.g., an HDD/SSD write error during a collision). The SD card availability is model dependent, refer to MDR Series Models table below.

Mobile network and Wi-Fi settings found in this manual relate to wireless products as described below. These features can be attained by upgrading the MDR 600 Series units. Current existing MDR 600 Series models allow for mobile network/Wi-Fi upgrades via the Ethernet port on the rear panel to support external network/Wi-Fi dongle.

To complete firmware upgrades, configuration imports/exports and video exports a bus-powered hub (minimum 2 ports) is required.

It is imperative that Brigade MDRs are fitted and commissioned by competent and trained technicians. The installers are responsible for the correct setup of the overall system and must adhere to relevant regulations and legislation.

Table 1: Description of MDR 600 Series Models:

#	MODEL	NUMBER OF CHANNELS	HDD CAPACITY	SD CAPACITY	GPS	MOB. NET	WI-FI
(1)	MDR-641-0.5-CMR	4 (Analogue) + 1(IP)	500GB	-	✓		
(2)	MDR-641G-0.5-CMR	4 (Analogue) + 1(IP)	500GB	-	✓	✓	
(3)	MDR-641GW-0.5-CMR	4 (Analogue) + 1(IP)	500GB	-	✓	✓	✓
(4)	MDR-641G-0.5-CMR(NA)	4 (Analogue) + 1(IP)	500GB	-	✓	✓	
(5)	MDR-641GW-0.5-CMR(NA)	4 (Analogue) + 1(IP)	500GB	-	✓	✓	✓
(6)	MDR-641-1-CMR	4 (Analogue) + 1(IP)	1TB	-	✓		
(7)	MDR-641G-1-CMR	4 (Analogue) + 1(IP)	1TB	-	✓	✓	
(8)	MDR-641GW-1-CMR	4 (Analogue) + 1(IP)	1TB	-	✓	✓	✓
(9)	MDR-641G-1-CMR(NA)	4 (Analogue) + 1(IP)	1TB	-	✓	✓	
(10)	MDR-641GW-1-CMR(NA)	4 (Analogue) + 1(IP)	1TB	-	✓	✓	✓
(11)	MDR-641-1-SSD	4 (Analogue) + 1(IP)	1TB	-	✓		
(12)	MDR-641G-1-SSD	4 (Analogue) + 1(IP)	1TB	-	✓	✓	
(13)	MDR-641GW-1-SSD	4 (Analogue) + 1(IP)	1TB	-	✓	✓	✓
(14)	MDR-641G-1-SSD(NA)	4 (Analogue) + 1(IP)	1TB	-	✓	✓	
(15)	MDR-641GW-1-SSD(NA)	4 (Analogue) + 1(IP)	1TB	-	✓	✓	✓
(16)	MDR-641-2-SSD	4 (Analogue) + 1(IP)	2TB	-	✓		
(17)	MDR-641G-2-SSD	4 (Analogue) + 1(IP)	2TB	-	✓	✓	
(18)	MDR-641GW-2-SSD	4 (Analogue) + 1(IP)	2TB	-	✓	✓	✓
(19)	MDR-641G-2-SSD(NA)	4 (Analogue) + 1(IP)	2TB	-	✓	✓	
(20)	MDR-641GW-2-SSD(NA)	4 (Analogue) + 1(IP)	2TB	-	✓	✓	✓
(21)	MDR-644-1-CMR	4 (Analogue) + 8 (IP)*	1TB	64GB	✓		
(22)	MDR-644G-1-CMR	4 (Analogue) + 8 (IP)*	1TB	64GB	✓	✓	
(23)	MDR-644GW-1-CMR	4 (Analogue) + 8 (IP)*	1TB	64GB	✓	✓	✓
(24)	MDR-644G-1-CMR(NA)	4 (Analogue) + 8 (IP)*	1TB	64GB	✓	✓	
(25)	MDR-644GW-1-CMR(NA)	4 (Analogue) + 8 (IP)*	1TB	64GB	✓	✓	✓
(26)	MDR-644-0.5-SSD	4 (Analogue) + 8 (IP)*	500GB	64GB	✓		
(27)	MDR-644G-0.5-SSD	4 (Analogue) + 8 (IP)*	500GB	64GB	✓	✓	
(28)	MDR-644GW-0.5-SSD	4 (Analogue) + 8 (IP)*	500GB	64GB	✓	✓	✓
(29)	MDR-644G-0.5-SSD(NA)	4 (Analogue) + 8 (IP)*	500GB	64GB	✓	✓	
(30)	MDR-644GW-0.5-SSD(NA)	4 (Analogue) + 8 (IP)*	500GB	64GB	✓	✓	✓
(31)	MDR-644-1-SSD	4 (Analogue) + 8 (IP)*	1TB	64GB	✓		
(32)	MDR-644G-1-SSD	4 (Analogue) + 8 (IP)*	1TB	64GB	✓	✓	
(33)	MDR-644GW-1-SSD	4 (Analogue) + 8 (IP)*	1TB	64GB	✓	✓	✓
(34)	MDR-644G-1-SSD(NA)	4 (Analogue) + 8 (IP)*	1TB	64GB	✓	✓	

(35)	MDR-644GW-1- SSD(NA)	4 (Analogue) + 8 (IP)*	1TB	64GB	✓	✓	✓
(36)	MDR-644-2-SSD	4 (Analogue) + 8 (IP)*	2TB	64GB	✓		
(37)	MDR-644G-2- SSD	4 (Analogue) + 8 (IP)*	2TB	64GB	✓	✓	
(38)	MDR-644GW-2- SSD	4 (Analogue) + 8 (IP)*	2TB	64GB	✓	✓	✓
(39)	MDR-644G-2-SSD(NA)	4 (Analogue) + 8 (IP)*	2TB	64GB	✓	✓	
(40)	MDR-644GW-2-SSD(NA)	4 (Analogue) + 8 (IP)*	2TB	64GB	✓	✓	✓

\*8x IP channel input including 4x direct connect on MDR rear panel and another 4x channels require external 4-Port PON Switch.

**Warning: Prior to attempting the system setup, please ensure the MDR 600 Series Installation & Operation Guide is thoroughly read and understood. Brigade will not be responsible for any failures due to incorrect installation or operation. Ensure your anti-virus software has exclusions in place to allow the MDR software package to function properly.**

## 1.1 Product Features

### 1.1.1 General Specification of MDR 600 Series

MDR-641XX-X-XXX(XX)	MDR-644XX-X-XXX(XX)
500GB / 1TB / 2TB HDD or SSD with anti-vibration mounting (2TB maximum)	500GB / 1TB / 2TB HDD or SSD with anti-vibration mounting (2TB maximum)
Not Applicable	Industrial grade 64GB (256GB maximum) internal SD card for mirror, sub-stream and alarm recording
Simultaneous 5 channel recording up to: Analogue: 1080P @ 11fps (PAL) / (NTSC) for 4 channels  IP (direct connection only): 1080P @ 30fps for 1 channel	Simultaneous 8 channel recording up to: Analogue: 1080P @ 11fps (PAL) / (NTSC) for 4 channels  IP (direct connection only): 1080P @ 30fps for 4 channels  IP (with direct connection and an extra 4-Port PON Switch) 1080P @ 30fps for 8 channels
5x Select video connectors typical to camera inputs with audio	8x Select video connectors typical to camera inputs with audio
Weight: 2.9Kg on average	Weight: 3.7Kg on average

### 1.1.2 Common Features of MDR 600 Series

- Internal anti-vibration mount for the HDD or SSD
- Embedded super-capacitor for finalisation of recording after unexpected power interruption (up to 10 seconds)
- Individual channel configurations for recording resolution, frame rate and quality
- Anti-tampering feature – using digital code
- Display split 1/4/9 channels
- Optional EIA/TIA 485 (RS485) for external Remote Status & Interface Panel
- Operation log files for troubleshooting
- Built-in 6-axis G-Sensor
- External GPS for location monitoring and tracking with antenna
- I/O: 8x trigger input (trigger voltage 9V which can be set to trigger at low/high); 2x trigger output (12V max. 500mA)
- Pre-alarm recording 30 seconds to 60 minutes and Post-alarm recording 0 to 60 minutes.
- Video quality selectable at 8 different levels for recording
- Video/Audio compression H.264/H.265/ADPCM/G711U/G711A
- Normal, Alarm or Timer recording modes
- Alarm recordings configurable for trigger, speed, G-Force, video loss, motion detection, blind detection, panic button, geo-fencing and HDD/SD errors
- Low voltage protection with configurable shut-down delay and minimum restart voltage
- Ethernet 10/100M RJ45 port for configuration, live view, playback and video download
- Mouse for configuration and recording/event search'
- Shut-down delay configurable from 0 seconds to 24 hours or never
- 8.5-36V Power Input
- Network Protocols supported: TCP/IP, UDP, DHCP, TFTP, FTP, HTTP/HTTPS, SNMP, ONVIF, RTSP

## 2 Kit Contents

### 2.1 MDR 600 Series Kits

#### 2.1.1 MDR-644XX-X-XXX(XX)



MDR 600 Series 8 Channel Control Unit with 500GB / 1TB / 2TB SSD or HDD, 4G, Wi-Fi & 64GB SD Card (Depending on model)

### 2.1.2 MDR-641XX-X-XXX(XX)



MDR 600 Series 5 Channel Control Unit with 500GB / 1TB / 2TB SSD or HDD, 4G & Wi-Fi (Depending on model)

### 2.1.3 Common Accessories



MDR GPS Antenna  
MDR-ANT-GPS-03



MDR Mobile Network Antenna  
MDR-ANT-MOB-01  
(Depending on model)



MDR Wi-Fi Antenna  
MDR-ANT-Wi-Fi-01  
(Depending on model)



MDR Mouse (for reference)  
MDR-MOUSE-01



MDR Security Key  
MDR-KEY-01



MDR 600 Series Short Installation  
and Operation Guide  
MDR-600-SIG-EN



Fitted with Brigade®  
Mobile Digital Recorder  
brigade-electronics.com

MDR Vehicle Warning Sticker  
MDR-VWS

### 2.1.4 MDR 641 Series Accessories



MDR Input / Output Cable  
MDR-IO-03



MDR Power Cable  
MDR-PWR-02



MDR Brackets  
MDR-BKT-02



4x MDR Bracket Fixing Screws  
MDR-BKT-FIX-02



CMS Adapter Cable  
AC-075

### 2.1.5 MDR 644 Series Accessories



MDR Input / Output Cable  
MDR-IO-02



MDR Power Cable  
MDR-PWR-01



MDR Brackets  
MDR-BKT-01



7x MDR Bracket Fixing Screws  
MDR-BKT-FIX-01



MDR USB A to B Cable (USB 3.0)  
MDR-USB-B-02

## 2.2 Optional Accessories

### 2.2.1 Remote Status & Interface Panel



MDR Remote Status & Interface Panel  
MDR-RP-02-P



MDR 4m Cable for Remote Status & Interface Panel  
MDR-04RPC



MDR Adapter Cable for Remote Panel  
MDR-AC-ACC-01  
(only needed for MDR 641 Series)

### 2.2.2 MCU Reader



MDR MCU Reader  
MDR-MCU-R-01-R  
(only needed for MDR 641 Series)



MDR USB 3.0 Cable, Type A to Type A Connectors  
MDR-USB-A-01  
(only needed for MDR 641 Series)

### 2.2.3 MDR SmartController



MDR SmartController  
MDR-SMACON

### 2.2.4 Adapter Cables



MDR Adapter Cable for Hazard Warning Unit  
MDR-AC-HWU-01  
(only needed for MDR 641 Series)



MDR CAN Cable  
MDR-CAN-01  
(for future use with MDR 644 Series when CAN functionality is available)

### 2.2.5 Optional Secondary Storage Medium



64GB Industrial Grade SD Card Class 10  
SD-64GB-IND



MDR Fireproof Box with 32GB SD Card  
MDR-400-FPB-32  
(only needed for MDR 644 Series)


### 3 Hardware Installation

#### Warning

- Connecting any input or output wires to high voltages may damage the product. Brigade will not be responsible for any damage caused due to negligence.

#### 3.1 Front View


##### 3.1.1 MDR-641XX-X-XXX(XX) Front View

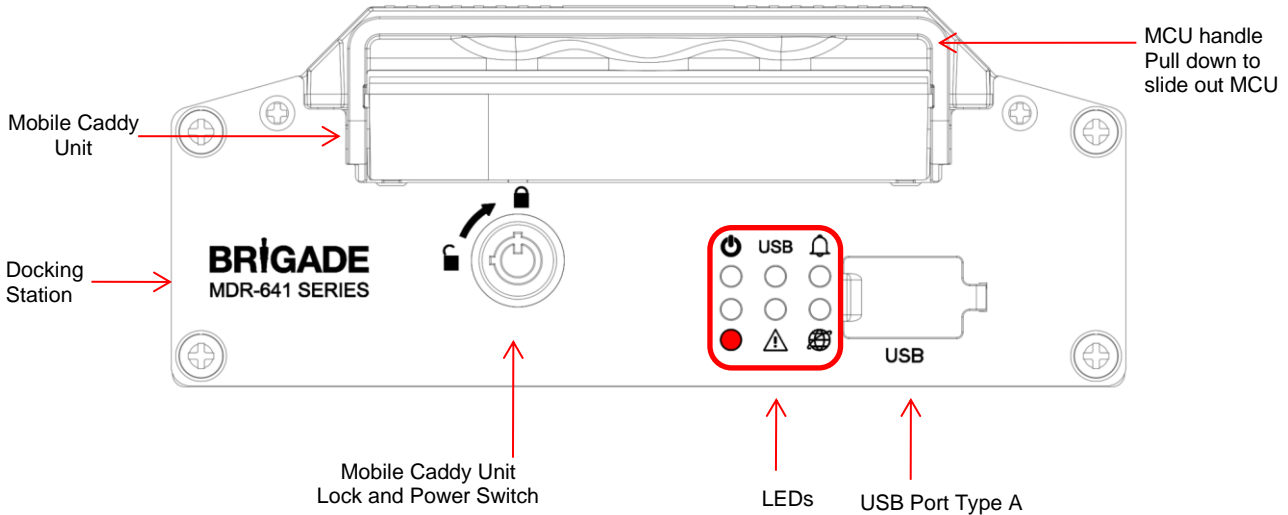







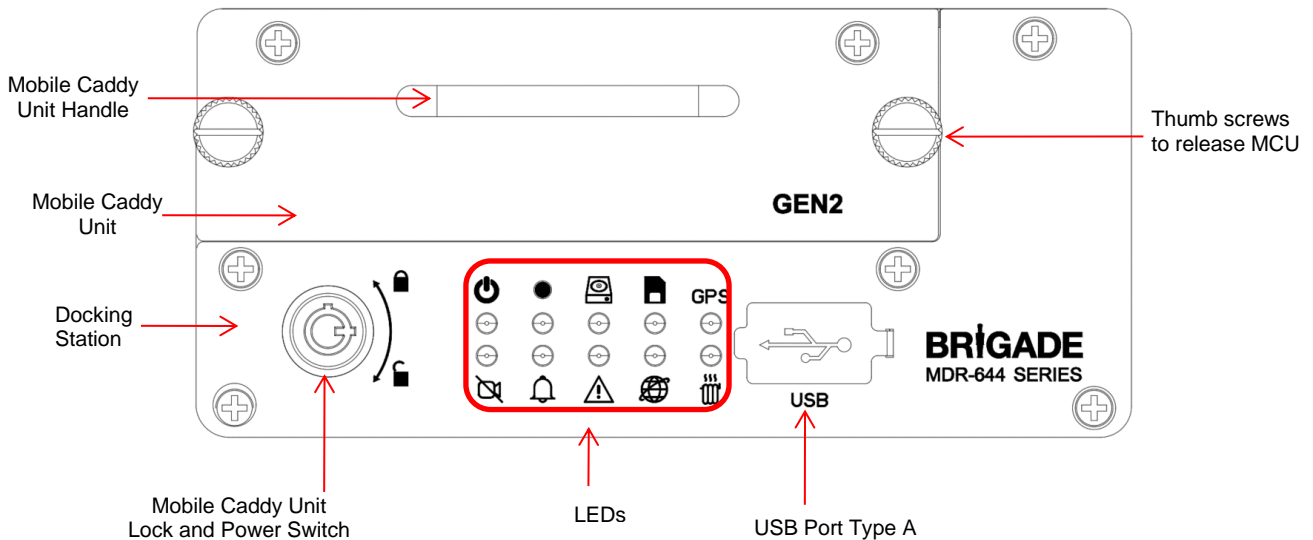



MDR-641XX-X-XXX(XX) Front View Figure 1

<p><b>Power - Blue LED</b>  <b>ON:</b> Power on or sleep mode  <b>OFF:</b> Power off</p> <p><b>USB - Yellow LED</b>  <b>ON:</b> External storage medium detected  <b>OFF:</b> No external storage medium detected</p> <p><b>Alarm - Red LED</b>  <b>ON:</b> When an alarm is triggered, lasts for entire alarm duration  <b>OFF:</b> Alarms not triggered or only events have been triggered</p>	<p><b>Recording – Yellow LED</b>  <b>Flashing:</b> HDD recording  <b>OFF:</b> HDD not recording</p> <p><b>Error - Orange LED</b>  <b>ON:</b> HDD/INTERNAL SD not formatted; HDD/INT SD not installed; HDD/INTERNAL SD been damaged  <b>OFF:</b> MDR working normally</p> <p><b>Network - Green LED</b>          (MDRs with mobile network and/or Wi-Fi functions)  <b>ON:</b> Mobile network module detected  <b>Flashing:</b> Mobile network module dialled up (has data transmission)  <b>OFF:</b> Mobile network is not detected</p>
--	---

##### 3.1.2 MDR-644XX-X-XXX(XX) Front View




MDR-644XX-X-XXX(XX) Front View Figure 2

	<b>Heater - Yellow LED</b> <b>ON:</b> HDD Heater is on <b>OFF:</b> HDD Heater is off		<b>Power – Blue LED</b> <b>ON:</b> Power on or sleep mode <b>OFF:</b> Power off
	<b>HDD - Blue LED</b> <b>ON:</b> HDD detected <b>Flashing:</b> HDD is reading or writing <b>OFF:</b> HDD is not detected		<b>Recording – Yellow LED</b> <b>Flashing:</b> HDD recording <b>OFF:</b> HDD not recording
	<b>SD - Yellow LED</b> <b>ON:</b> SD card detected <b>Flashing:</b> SD card is reading or writing <b>OFF:</b> SD card is not detected		<b>GPS – Green LED</b> <b>ON:</b> GPS module is detected <b>Flashing:</b> GPS module transmitting data <b>OFF:</b> GPS module is not detected
	<b>Network - Green LED</b> (MDRs with mobile network and/or Wi-Fi functions) <b>ON:</b> Mobile network detected <b>Flashing:</b> Centre Server is connected (Data transmission to the Server) <b>OFF:</b> Mobile network is not detected		<b>Alarm – Red LED</b> <b>ON:</b> When an alarm is triggered, lasts for entire alarm duration <b>OFF:</b> Alarms not triggered or only events have been triggered
	<b>Error - Orange LED</b> <b>ON:</b> HDD/INTERNAL SD not formatted; HDD/INT SD not installed; HDD/INTERNAL SD been damaged <b>OFF:</b> MDR working normally		<b>Video Loss – Red LED</b> <b>ON:</b> When a video loss occurs on an enabled channel <b>OFF:</b> All enabled channels have a video signal





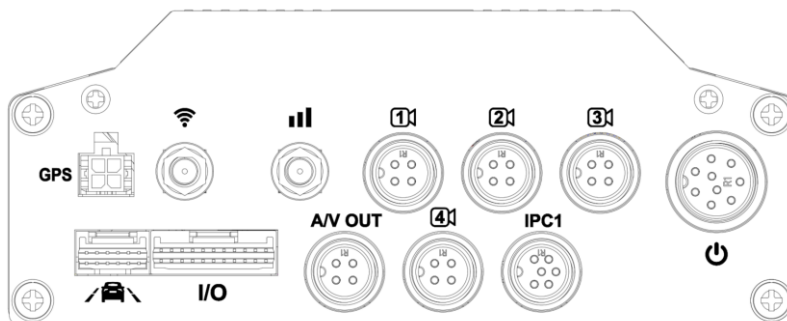




### 3.2 Rear View

#### 3.2.1 MDR-641XX-X-XXX(XX) Rear View




**MDR-641XX-X-XXX(XX) Rear View Figure 3**

**Rear Panel:**

	Mobile Network Antenna Connector		Analogue Camera 1 Connector
	Wi-Fi Antenna Connector		IP Camera 1 Connector
	GPS Antenna Connector		Input / Output Cable Connector
	Power Cable Connector		Audio / Video Output Cable Connector
	Hazard Warning Unit (reserve for future)		

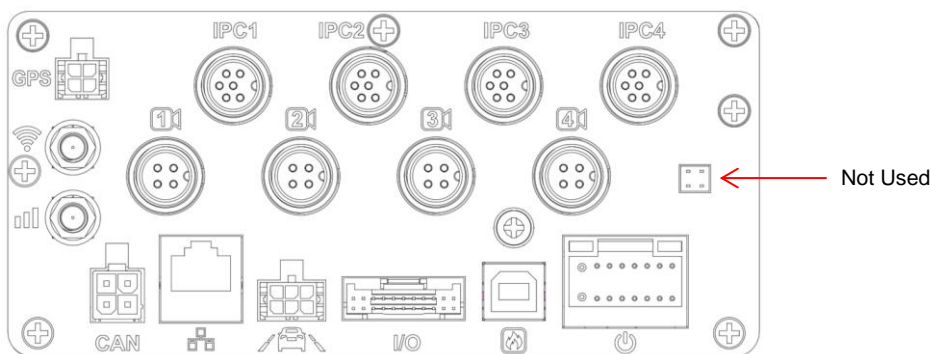










#### 3.2.2 MDR-644XX-X-XXX(XX) Rear View



**MDR-644XX-X-XXX(XX) Rear View Figure 4**




**Rear Panel:**

	Mobile Network Antenna Connector		Fireproof Box Connector
	Wi-Fi Antenna Connector		Ethernet Connector
	GPS Antenna Connector		Input / Output Cable Connector
	Power Cable Connector		Analogue Camera 1 Connector
	Hazard Warning Unit (reserve for future)		CAN Bus Cable Connector
	IP Camera 1 Connector		

**3.3 Mobile Caddy Unit (MCU Contains HDD)**

**3.3.1 MDR-641-X-MCU-XXX**

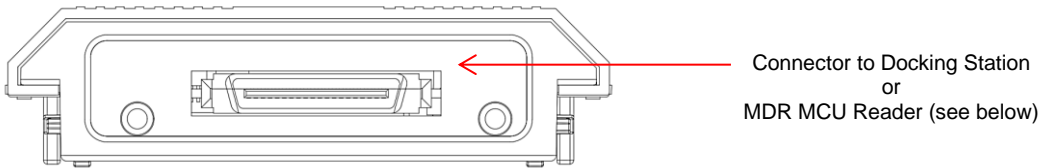


**MDR-641-X-MCU-XXX Figure 5**



**MDR-641-X-MCU-XXX Connection with MCU Reader Figure 6**


**3.3.2 MDR-644-X-MCU-XXX**

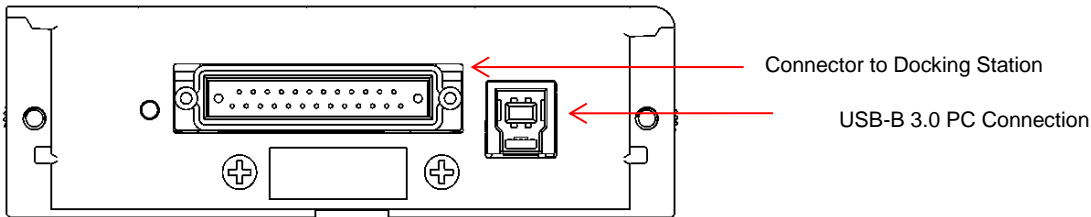

**MDR-644-X-MCU-XXX Figure 7**


**3.4 USB Mouse**

Navigation buttons are used browsing the OSD. Left Mouse Button

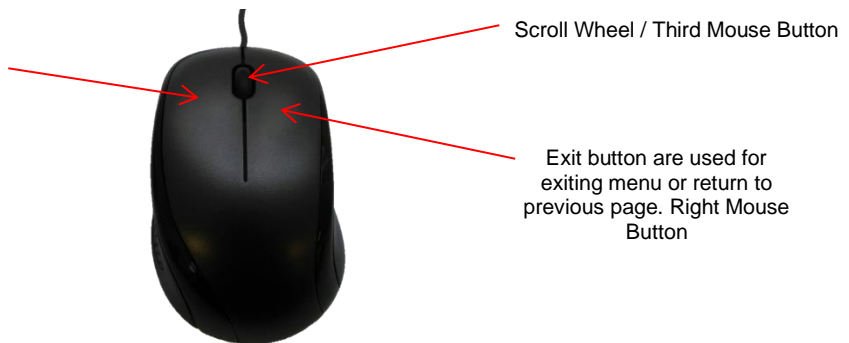

**MDR-MOUSE-01 Figure 8**

### 3.5 MDR-641XX-X-XXX(XX) Connection Diagram

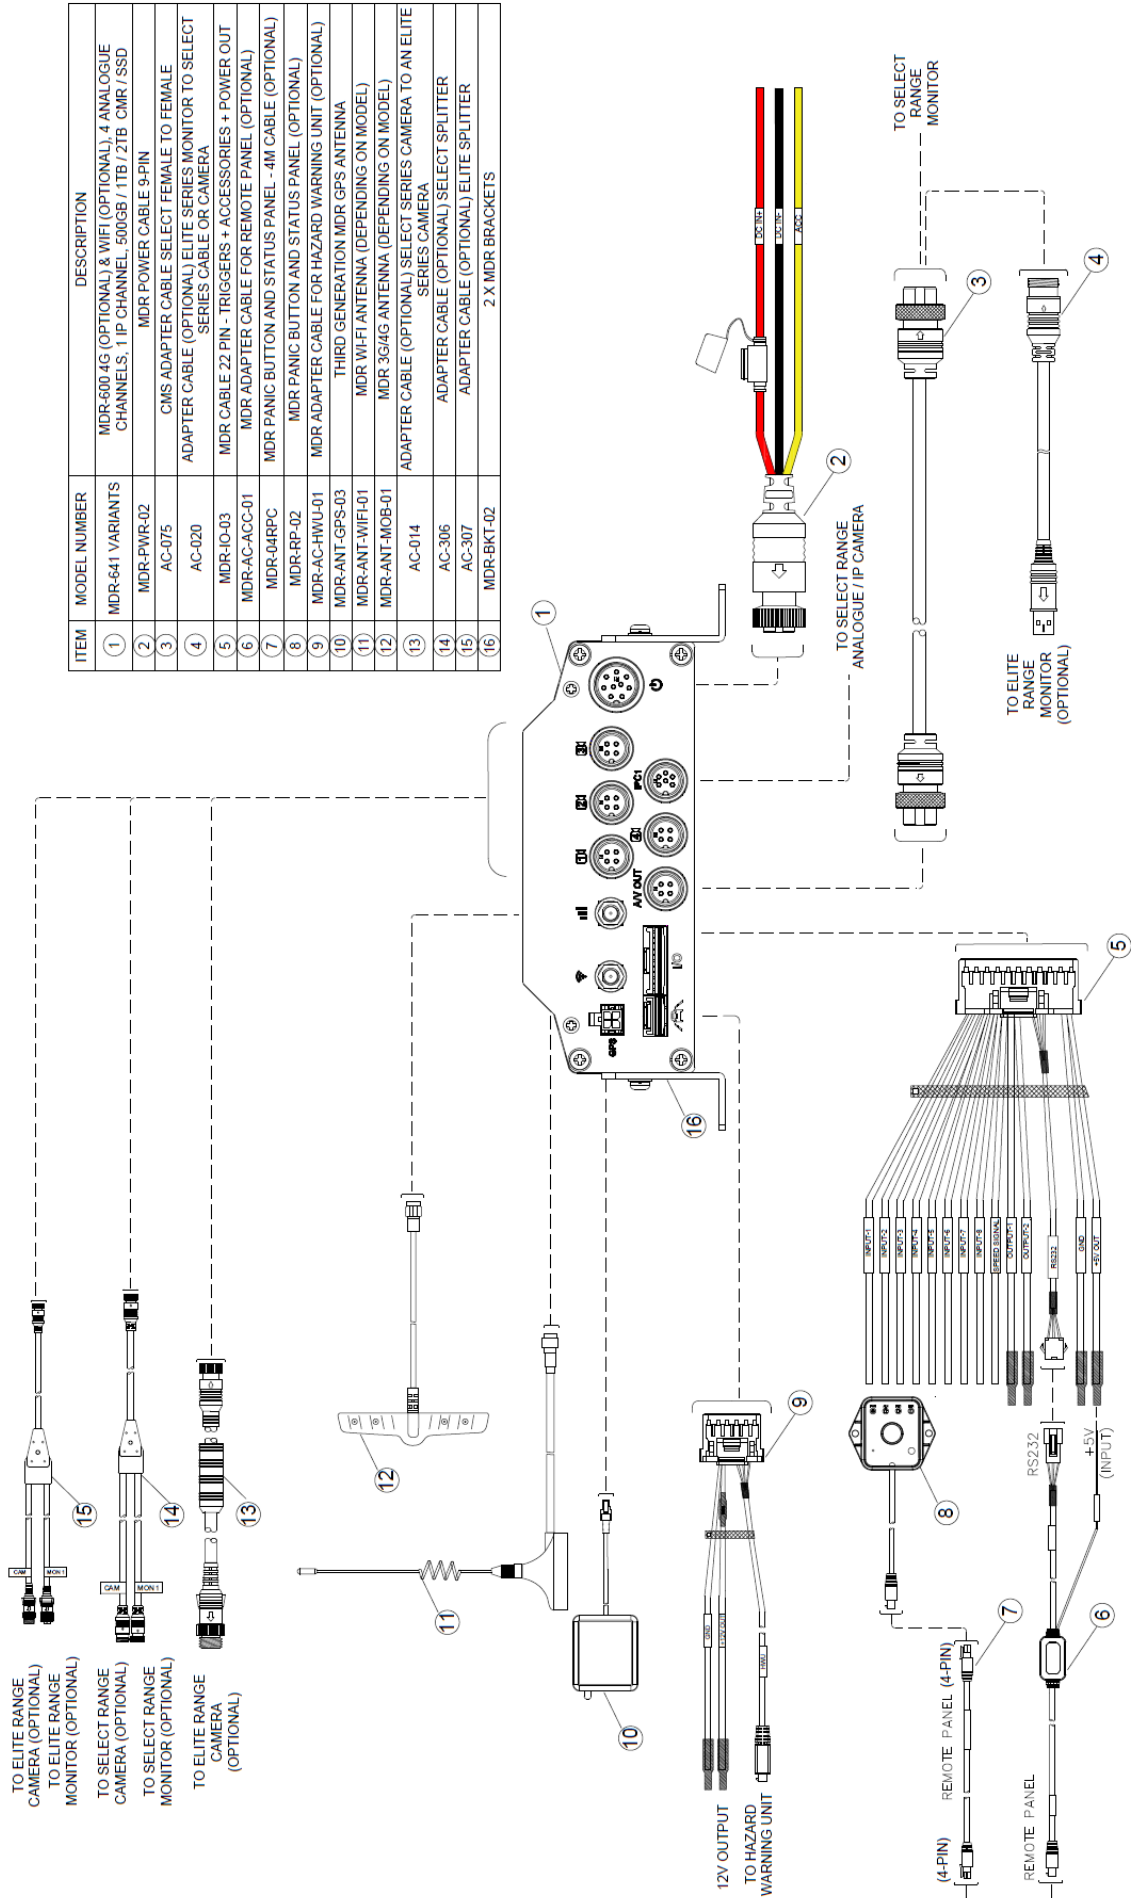

MDR-641XX-X-XXX(XX) Connection Diagram Figure 9



### 3.7 Mobile Caddy Unit Removal

**Warning:** Follow the removal steps shown below. Failure to do so **will damage** the HDD. Ensure that the PWR LED indicates the MDR is OFF prior to removal. Make sure to format HDD/SD card after swapping, different MDR generations use different file systems which are not compatible with each other and will cause recording loss if not formatted in advance.

#### 3.7.1 MDR-641XX-X-XXX(XX) MCU Removal

**Step 1**  
Unlock the MCU using the key

**Step 2**  
Confirm that the  
**PWR LED is OFF**

**Step 3**  
Pull down the MCU handle, slide  
the MCU out

Note: If space is limited, the MCU can be  
removed in an upright direction



*MCU Removal for MDR-641XX-X-XXX(XX) Figure 11*

#### 3.7.2 MDR-644XX-X-XXX(XX) MCU Removal

**Step 1**  
Unlock the MCU using the key

**Step 2**  
Confirm that the  
**PWR LED is OFF**

**Step 3**  
Completely undo the two thumb  
screws (anti-clockwise)

**Step 4**  
Gently pull the MCU by holding the front  
handle

Note: If space is limited, the MCU can be  
removed in an upright direction




*MCU Removal for MDR-644XX-X-XXX(XX) Figure 12*

### 3.8 SD Card Removal

**Note:** To remove an SD card from an MDR, the MCU needs to be removed first. Make sure the MDR is powered off before removing any storage medium. Failure to do so **will damage** the HDD/SD card. (See SD Card removal for MDR-644XX-X-XXX(XX) Figure 13)

#### 3.8.1 MDR-644XX-X-XXX(XX) SD Card Removal

- Step 1**  
Unlock the MCU using the key and confirm the PWR LED is OFF
- Step 2**  
Slide out MCU. Push the clip away from you while lifting the lid.
- Step 3**  
The SD Card is placed in a SD card slot. Remove and discard the plastic tape covering the SD card. Push and depress the SD card to remove the card from its slot.

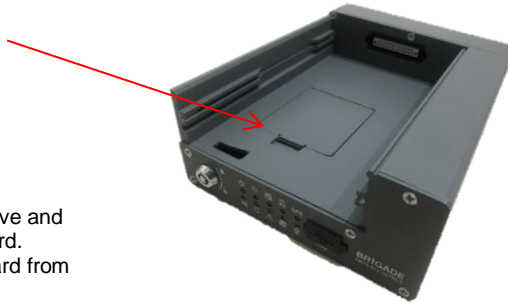

**SD Card removal for MDR-644XX-X-XXX(XX) Figure 13**

### 3.9 SIM Card Installation

#### 3.9.1 MDR-641XX-X-XXX(XX) SIM Card Installation



- Step 1**  
Remove the MCU unit. This will allow you to access the SIM card slot. Make sure the PWR LED is OFF before removing the MCU. Failure to do so **will damage** the HDD.



- Step 2**  
Use the clip to flip the door open. Ensure an earthing strap is worn to prevent any damage to the PCB. Remove the film that is placed over the SIM card slot. Insert the SIM card with the contact pins face down. Push the SIM to lock the SIM securely in place.

**MDR-641XX-X-XXX(XX) SIM card Installation Figure 14**

#### 3.9.2 MDR-644XX-X-XXX(XX) SIM Card Installation



- Step 1**  
Remove the MCU unit. This will allow you to access the SIM card slot. Make sure the PWR LED is OFF before removing the MCU. Failure to do so **will damage** the HDD.



- Step 2**  
Use the clip to flip the door open. Ensure an earthing strap is worn to prevent any damage to the PCB. Remove the film that is placed over the SIM card slot. Insert the SIM card with the contact pins face down. Push the SIM to lock the SIM securely in place.

**MDR-644XX-X-XXX(XX) SIM card Installation Figure 15**

### 3.10 Antennas Installation

The information found in this sub-chapter may be found in the FCS1362:2016 UK CODE OF PRACTICE for the installation of mobile radio and related ancillary equipment in land-based vehicles. Please use this document for further details. Please see Appendix Chapter 17 General Antenna Guidelines for more information.

#### 3.10.1 GPS antenna Installation (Included)

The GPS module and antenna are embedded together. It needs to have an unimpeded view to the sky. The antenna positioning and orientation is critical to ensure effective operation. Horizontally mounted on a metal plate is optimum.

#### 3.10.2 Wi-Fi antenna (Depending on Model)

Before a magnetic mount antenna is fitted both the underside of the base and the selected body panel surface should always be cleaned to avoid damage to the paint work.

- They must be directly placed on a flat area of steel
- They should not have any other material inserted between the magnetic base and vehicle body other than a protective pad or boot supplied by the antenna base manufacturer. This is to avoid reduction in the magnetic retention strength and any effect on the coupling to the ground plane.

#### 3.10.3 Mobile Network antenna (Depending on Model)

On-glass antennas must be:

- securely fitted and fixed away from any metal which could deflect the signal
- located such that driver visibility is not impaired
- avoid heated screen elements
- mounted outside of the swept area of the windscreen

## 4 MDR On-Screen Display (OSD)

This chapter describes the configuration of the MDR.

Brigade's 600 Series MDR displays a start-up screen. See *MDR Initialisation Screen Figure 16*. During this period, the MDR completes a disk check which helps in identifying any file errors or bad sectors. In doing so, the MDR will avoid writing to these sectors to maintain data integrity.

If required, the MDR will attempt to repair any bad sectors prior to entering its recording state. The MDR 600 Series takes approximately 60 seconds to enter a recording state once ignition has been applied.

**Warning:** To guarantee MDR is recording properly, please wait at least 3 minutes after ignition is applied. Brigade will not be responsible for any events not recorded during this start-up period. There are three ways in which a user can tell if the MDR is recording: a visible blue HDD and a green SD card on each channel; MDR REC LED will be on; Remote Panel REC LED will be on (optional accessory).



MDR Initialisation Screen Figure 16

### 4.1 Quick Menu

After initial ignition on the MDR, it displays a quad view for Channel 1 – 4 by default. See *Start-up Screen Figure 17*.

To access the quick menu, use the right button on the mouse



Right click the mouse to show the Quick Menu. Clicking this button again will make any currently displayed OSD disappear. The right button can also be used as a quick exit button.


By default, the quick menu appears on the bottom of the display area.

Three different view options are available in the quick menu: **Single**, **Quad** and **9-Split**. See *Start-up Screen Figure 17*, *Single View Figure 19* and *9-Split View Figure 20*. Since MDR 600 Series support various channels, by turning page, keep clicking the view options button. E.g., MDR displays 1 – 4 Channel under quad view, click the “Quad” button again, the display switches to 5 – 8 Channel. This applies for the other two view modes.


**Playback** directly supports playback recordings after clicking. It requires login details and HDD Key (if set) to access.

Note: It starts playback recording from 2 minutes ahead of current time. If the MDR does not have any recording during that period, the direct playback will fail and show “Failed to open playback stream segment!” warning. For accessing full recordings, recommend using Playback feature in Chapter 6 *Record Search*.

**Sys Info** will be covered in Chapter 8 System Information.

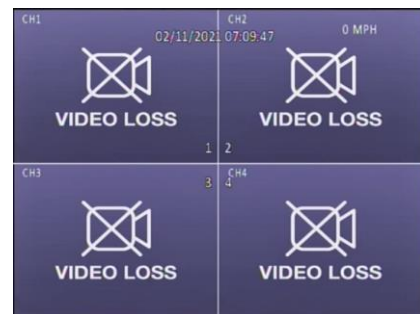

Start-up Screen Figure 17

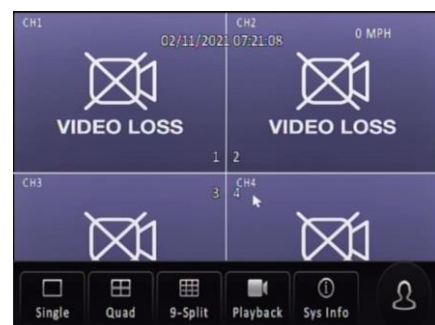

Quick Menu Figure 18



Single View Figure 19



9-Split View Figure 20

## 4.2 Login

By default, there are two user accounts: admin and user. The default password for the **admin** account is *admin*; for the **user** account is *user*.

Brigade recommend changing the password after first login which must be documented and controlled by your company. The new password should contain minimum 8 characters, with uppercase, lower case, numbers and special characters. If want to keep current password, simply click "Cancel" the window will exit immediately and never shows up again. Refer to *MDR Change Password Figure 22*.

Monitors should scale the MDR video output automatically, but some monitors do not do this. If your screen is being partially cut-off, the MDR output margins can be manually adjusted by navigating to **Setup -> Surveillance -> Live View -> Preview -> Margins Setup**. Ensure all white borders are visible. See *5.2.1.1 Preview* for further details.

Note: When accessing the menu, recording continues without any interruptions.

Once the login is successful, the OSD menu is displayed. See *Menu Structure Figure 24*. The menu is navigated using mouse movement and the left button. See *MDR-MOUSE-01 Figure 8* for further information.

Prior to using the MDR please set the MDR to default settings and clear all history information.

Default settings are achieved by: **Setup -> Maintenance -> Reset -> Factory Settings -> Restore**.

Clear history information by: **System Info -> History -> Clean**.

A complete OSD map is found in Chapter 12 *On-screen Display Map*.

**Language** is supported in current MDR firmware versions. 9 language options in total, which are English, German, Italian, Portuguese, Spanish, French, Polish, Dutch, Russian.



MDR Login Screen Figure 21




MDR Change Password Figure 22




MDR Language Options Figure 23

Once you have logged in, the menu structure will be displayed as shown in *Menu Structure Figure 24*.

This menu consists of: Recordings Search, System Information, Log Search, Setup and Logout.

There are help buttons  found throughout the MDR OSD menu. These buttons contain additional information to help explain features, settings and functions.

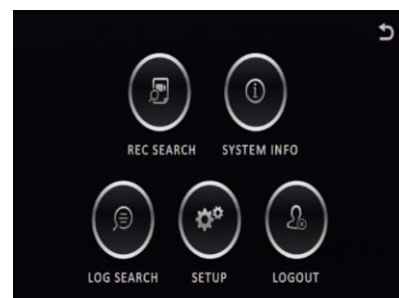

Menu Structure Figure 24

### 4.3 Logout

**Logout** is used to log off a user account that is used to access the MDR menu. Ensure that you log off once you have finished your configurations. See *Logout Figure 25*



## 5 Setup

This chapter describes the setup of the MDR. Settings related to basic setup, surveillance, events, alarms and maintenance. All settings are contained in the MDR Docking Station (DS). This means that Mobile Caddy Unit (MCU) swapping is easily supported if vehicle registrations are completed.

### 5.1 Basic Setup

Use **SAVE** which is located at the bottom of each page after making any changes.

**Warning: Leaving a page prior to saving will cause changes to settings to be lost.**

#### 5.1.1 Register Information

##### 5.1.1.1 Vehicle Information

**Vehicle Registration** is an important field which should always be populated. The vehicle registration is stored on the docking station and is then copied onto the current MCU recordings. This helps in identifying which vehicle the MCU was in at the time of recording. This is vital information if a fleet of vehicles swap MCUs.

**Vehicle Number** is typically used in fleet/bus applications where a vehicle has an associated fleet number. This can be captured in this field to assist in identifying the vehicle.



##### 5.1.1.2 Driver Information

**Driver Number** is typically used in fleet/bus applications where a driver has an associated number. This can be captured in this field to assist in identifying the driver in the event of an incident.

**Driver Name** may be populated which would make it easier in linking a driver's name with their number.



##### 5.1.1.3 Company Information

**Company Name** can be used in various type of fleets. The name filled in this blank will be synchronized to display on MDR-Dashboard software vehicle information section, which is under the vehicle fleet window.

**Company Branch** will make the vehicle information more detailed. Also, this will be displayed in the MDR-Dashboard software as well.





## 5.1.2 Time Setup


### 5.1.2.1 General

**Date Format** can be set to either DAY/MONTH/YEAR, YEAR-MONTH-DAY or MONTH/DAY/YEAR. By default, it is set to DAY/MONTH/YEAR.

**Time Format** can be either 24 Hours or 12 Hours. By default, it is set to 24 Hours.

**Time Zone** includes worldwide time zone options. By default, this is set to (GMT) DUBLIN, EDINBURGH, LONDON.

**Default** is found on most settings pages. This allows you to easily restore the factory settings for those settings

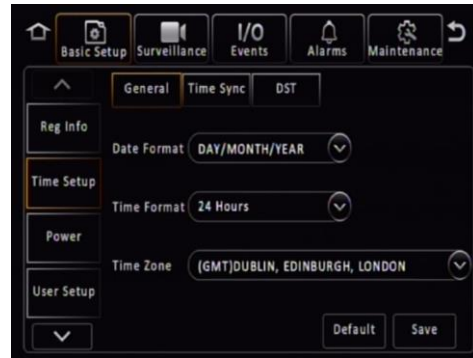

Time Setup Figure 29

### 5.1.2.2 Time Sync

**Date/Time** can be entered manually here.

**GPS** should be ticked and the GPS antenna should be mounted in a vehicle location where signal can be achieved easily. This is the simplest and more reliable option.

**NTP sync** refers to network time protocol that is used to synchronize time with NTP Server PC time. This should only be used for mobile network or Wi-Fi MDR units.

**Center Server** allows to synchronize the time with current connected MDR servers.

Note: When GPS, NTP sync and Center Server are enabled simultaneously, GPS takes highest priority. The priority between them is GPS>NTP sync>Center Server.



Time Sync Figure 30

### 5.1.2.3 Daylight Saving Time (DST)

Allows users to enter the date and time in which the Daylight-Saving Time will be activated. In the U.K, it starts on the last Sunday of March at 1:00 AM and ends on the last Sunday of October at 2:00 AM. Enter the correct time and date of the country in which the vehicle will be utilised. Whenever **DST** is not in use, turn this option to off.

**DST Enable** is enabled by default. This setting determines whether daylight savings time is active.

**Start** represents the month, date, day and time at which DST begins. By default, this is set to UK DST. If the time zone has been changed to another country, other than the UK, then the DST settings will need to be amended to reflect the selected country.

**End** represents the month, date, day and time at which DST finishes.



Daylight Saving Time Figure 31

## 5.1.3 Power

### 5.1.3.1 On/Off

**On/Off Mode** has three different modes: IGNITION, TIMER and IGNITION OR TIMER.

This option determines the conditions for which the MDR will power up. By default, it is set to **IGNITION**, which means that the MDR only turns on when an ignition signal is applied (yellow wire).

Note: Timer mode must not be used for extended periods of time – this will damage your vehicle's battery.

**Non-stop** allows the MDR to record infinitely. Enabling this will disable Shutdown Delay.

**Warning: Using the MDR for prolonged periods of time without ignition (vehicle running) can drain the vehicle's battery. Recommend that the Low Voltage Protection feature is enabled. See 5.1.3.2 Voltage for details.**

**Shutdown Delay** refers to the period the MDR will remain on and recording once the ignition has been turned off. The range is 0 to 86399 seconds (24 hours). By default, this is 600 seconds (10 minutes).



On/Off Figure 33

Note: MDRs are required to be continuously on for approximately 6 minutes, this period is called "Protection Time". If try to turn off the MDR before it is running continuously for 6 minutes, MDR will judge between current running time and Shutdown Delay setting.

1) If Shutdown Delay (60s) < remaining Protection Time (3min out of 6min), The MDR will count down the remaining Protection Time (3min) before shutdown.

2) If Shutdown Delay (600s) > remaining Protection Time (3 min out of 6min), the MDR will count down the Shutdown Delay value before shutdown.

In all, MDR always choose the longer value to count down to protect itself from damaged by abrupt shutdown.

**Shutdown Recording Delay** allows MDR to stop recording during shutdown delay period. Considering after ignition off, the recording during this shutdown period may not be useful in some aspect, user can set MDR to stop recording and save storage space. The Shutdown Recording Delay range is between 0 to the value user set for Shutdown Delay. This maximum value changes when the Shutdown Delay value change. See *Shutdown Recording Delay Value Change Figure 32*

**Timer From** becomes active once an On/Off Mode that includes timer is chosen.

### 5.1.3.2 Voltage

**Low Voltage Protection Enable** is off by default. This feature is important to use to protect your vehicle's battery from damage. Ensure this feature is activated when using the non-stop shutdown delay feature.

**Low Voltage** is the voltage level which is a dangerously low value. For a 24V vehicle, the limits are from 21V to 23.5V. For a 12V vehicle, the limits are from 8V to 11.5V. If power supply voltage is lower than the set value, MDR will start the low voltage protection process.

**Start-up Voltage** refers to the minimum voltage the MDR must receive before powering on. For a 24V vehicle, the limits are 24V to 26V. For a 12V vehicle, the limits are 12V to 14V.

Note: If MDR shutdown because of low voltage, the next time supply voltage must higher than the Start-up Voltage value, or MDR will not boot up.

**Observe Time** is the amount of time the low voltage value must be observed. This is to ignore any sudden dips in voltage that recover. The MDR will be forced to shut down if voltage does not recover during Observe Time.

**Low Volt Upload** can only be used if a wireless or mobile network MDR is used. MDR Server software is a requirement for this feature. Once the MDR detects a low voltage level, it will send this data back to the MDR Server where it gets stored. This can then be reviewed later. Depending on MDR model.

Proposed Low Voltage Protection Settings for lead-acid batteries (Note: Please check if these are suitable for your vehicle):

12V Vehicles	24V Vehicles
Low Voltage:11.7V	Low Voltage:23.7V
Voltage of Start:12.5V	Voltage of Start:24.5V
Observe Time:15 minutes	Observe Time: 15 minutes
Shut Down Delay:5 minutes	Shut Down Delay:5 minutes

### 5.1.3.3 Sleep

**Sleep** is a temporary standby status which enables MDR to automatically wake up from time to time to complete MDR-Dashboard platform issued Auto-download tasks. While the device is in Sleep mode, GPS, 4G, RTC are still working.

By default, this is off. This feature aims for saving vehicle battery consumption while MDR is lined up waiting for its turn to download footage to MDR server.

**Sleep Duration** is MDR will stay in sleep mode for how many hours.


**Periodic Wake-up** represents after how many minutes the MDR will wake up (boot up) to start the auto-download tasks.

**Note:**

1. **3-time check-up:** If MDR cannot detect auto-download (ADS) tasks (likely no task assigned), it will wake up after ignition off only 3 times to check with the platform then shut down completely, ignoring the Sleep



**Shutdown Recording Delay Value Change Figure 34**



**Shutdown Recording Delay Value Change Figure 35**



**Voltage Figure 36**



**Low Voltage Shutdown Delay Figure 37**



**Sleep mode Figure 38**

Duration settings for better saving vehicle battery. If MDR has ADS tasks, after task completed, it still has the 3-time check-up before shutdown.

2. If Sleep Duration time ends before ADS task started, MDR will end the sleep mode and shut down completely.

3. If Sleep Duration (1 hour) set value less than Periodic Wake-up (65 min), MDR will wake up at 65 minutes, and act differently when:

- a. There's an ADS task but it's not its turn to start download: MDR will shut down because the sleep duration is over.
- b. There's an ADS task and Wi-Fi available for download: MDR will complete the task then shut down, no 3-time check-up needed because the sleep duration is over.
- c. There's no ADS task: MDR will shut down because the sleep duration is over.

#### 5.1.4 User Setup

**Menu Idle Time** refers to the period for which the menu will remain active and logged in. Once this period finishes, the MDR will automatically log off the user.

**Username** is the name you use to log onto the MDR. By default, there are two usernames: **admin** and **user**.

**User Group** represents the level of access to the MDR OSD. There are only two types: Admin and Normal User. Admin has access to all settings and features. Normal User has restricted access: sys info, playback and export logs and videos.

**Add** is used to create additional user accounts. A maximum of three user accounts can exist.

**Edit** is used to change existing user account details.

To remove any password requirements, save the user account with a blank password (this is not recommended and will be automatically change back to default password if tick the "Check Password").

**Check Password** is used to allow MDR check the login password complexity. If the password is default, a notification window will pop up every time after MDR boot up to notify driver to change the password to a more complex combination. By default, it is on.

**Note:** if click "Cancel" on the start-up screen notification window, it will automatically disable the Check Password and prevent the notification to show up again. Refer to *MDR Change Password Figure 22*.



User Setup Figure 39

#### 5.1.5 HDD Key

**HDD Key** used for encrypting stored data while doing MDR playback or using MDR-Dashboard to read the MCU via USB cable. By default, it is off.

After enabling this feature:

- 1) If try to playback recordings on MDR, it will ask for correct password input before proceeding.
- 2) The MDR-Dashboard client will have a verification window pop up before loading video data. See *MDR-Dashboard Input HDD Password Figure 42*. The HDD key cannot be wiped out by formatting the MCU, and it also not packed in MDR config file for security purpose.

**Storage Name** choose between HDD and SD(Internal) if it is available. HDD represents main storage medium such as hard disk drive and solid-state drive. SD(Internal) represents SD card installed inside MDR Docking Station).

**Storage Protected Enable** by default set to off.

**HDD Password** is used to setup a new password or reset current password. Password combination must contain numbers, capital and lower-case characters.

**Old Password** is used for confirming previous password before reset to a new password or disable the protection. If user did not input the old password or typed it incorrectly, the reset process or disable setup will be unable to proceed.

HDD Key feature auto adapted to every installed MCU/SD card. Swapping MCU will not affect its current setting. If the



HDD Key Figure 40




MDR Playback Requires HDD Key Figure 41

MCU previous enabled the HDD key feature, then in this section, the Storage Protected Enable will be ticked automatically, but password section has no value for data security purpose. If the MCU does not enable the HDD key feature previously, after installed on the Docking Station, the HDD key section will display feature disabled.

Note: The HDD Key cannot be removed by formatting the HDD or SD card. It is not saved in Config File, therefore users must setup the Key for individual MDRs.

If the HDD Key has been forgotten, please contact Brigade, a 1-day serial number-bounded key can be provided to the user to reset the HDD key.

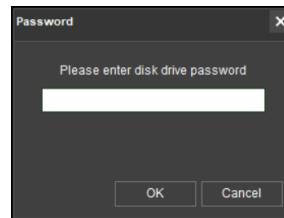

MDR-Dashboard Input HDD Password Figure 42

## 5.1.6 Network

### 5.1.6.1 Ethernet

There are two modes available for Ethernet adaptor addressing, DHCP and Static.

**DHCP Mode** refers to the Ethernet adaptor of the MDR obtaining an IP address automatically from the network.

**Static IP** is used to specify the exact network details you would like the MDR Ethernet adaptor to use.

**IP Address** refers to the internet protocol address of the Ethernet adaptor. This address is used to access the MDR Ethernet menu via LAN cable. Recommended to ask your internal IT for information and assistance.

**Subnet Mask** is used to identify network address of an IP address. By default, this is 255.255.255.000.

**Gateway** helps route the network traffic. By default, this is 192.168.001.254.

**Obtain DNS Automatically** refers to the domain name system. A DNS server takes the website addresses that you type in and resolves them into the actual IP address of the site. While MDR attempts to get an IP address for itself from the DHCP server, it will simultaneously attempt to resolve address.

**Use Following DNS** the MDR will use these DNS addresses regardless of what the DHCP server is using.

**Preferred DNS Server** by default, this is 008.008.008.008.

**Alternate DNS Server** by default, this is 008.008.004.004.


### 5.1.6.2 Ports

**Web Port** is used for when a PC is connecting to the MDR Ethernet page. If this is incorrect, the web page will not open. By default, this is 80.

**RTSP Port** is used for Real Time Streaming feature which can be configured in MDR Ethernet page. Changing this port will result in the Real Time Streaming feature not working properly. By default, this is 554.



Ethernet 1 Figure 43

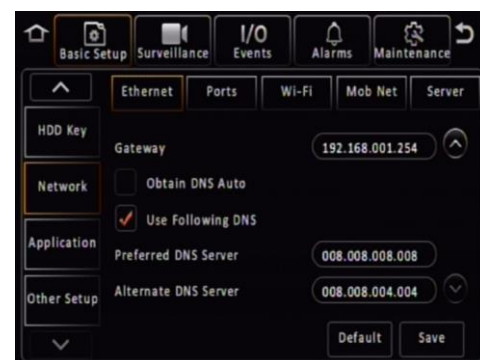

Ethernet 2 Figure 44



Ports Figure 45

5.1.6.3 Wi-Fi

These settings are dependent on your MDR model. This requires a wireless MDR model or any MDR model with external Wi-Fi dongle connected through Ethernet port.

**Enable** is used to turn the Wi-Fi module to 3 different statuses, Off, On and SmartController. Once choose on or SmartController, the settings found below will become active.

**Enable (On)** activates the Wi-Fi module and act as a Wi-Fi client, the MDR will have the ability to connect to any valid Wi-Fi signal for data transmission.

**Enable (SmartController)** activates the Wi-Fi module and act as a Wi-Fi hotspot which will provide a Wi-Fi signal for any mobile device to connect, but only use for MDR SmartController App. Mobile device cannot get online access by connecting to MDR hotspot.

Note: under **Enable (On)** mode, when the MDR is booting up, for the first 3 minutes it will stay in **Enable (SmartController)** mode for user to quickly access the menu and adjust settings. After 3 minutes, it will switch back to **Enable (On)** mode for activating Wi-Fi connectivity and communicate with MDR Server through Wi-Fi data.

**SSID** is the service set identifier.

**SSID (On)** It is used to identify a wireless LAN and is usually unique to an area. This is where you will enter the name of the wireless network that the MDR will connect to.

**SSID (SmartController)** is to set the name of the MDR wireless network hotspot which mobile device can look for when it trying to connect.

**Encryption** refers to protocols used to protect your network.

**Encryption (On)** supports WEP, WPA/WPA2-PSK and WPA2\_Enterprise. This is case-sensitive.

**Encryption (SmartController)** supports None, WEP and WPA. None means no password needed when trying to connect to this hotspot. WEP and WPA need minimum 8 characters password, or the hotspot will not show up on the Wi-Fi list properly.

**User Name** is only valid when **Encryption** choosing **WPA2\_Enterprise** (the username and password will be provided with the Wi-Fi router). Otherwise, this field is greyed-out and is uneditable.

**Password** is the wireless network password; this should be entered carefully as it is case-sensitive.


**Static IP** is used to turn the Wi-Fi module off or on. Once enabled, the settings found below will become active.

**IP Address** refers to the internet protocol address of the Wireless module. This address is used to join the wireless network.


**Subnet Mask** is used to identify network address of an IP address. By default, this is 255.255.255.000.

**Gateway** helps route the network traffic.

**\*Share Network** - MDR Wi-Fi Network can shared with other devices after connecting with Ethernet cable. The second device local IP address should set to 10.100.100.xxx (from 2 – 254 and avoid IP camera address if use any). Subnet Mask: 255.255.255.0. Gateway: 10.100.100.1. DNS: 8.8.8.8 or other public DNS servers.

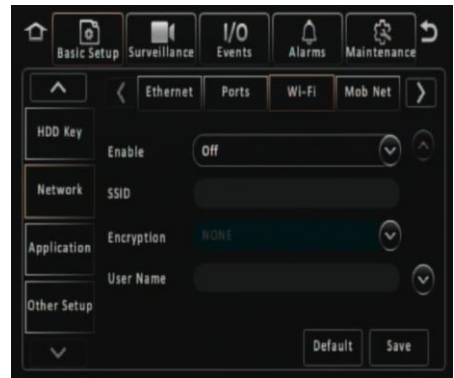


Wi-Fi 1 Figure 46

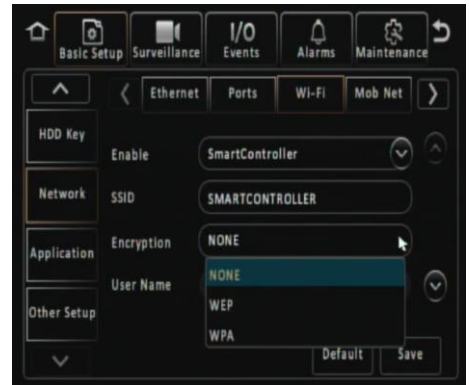

SmartController Wi-Fi Setup Figure 47



SmartController Wi-Fi Hotspot Figure 48

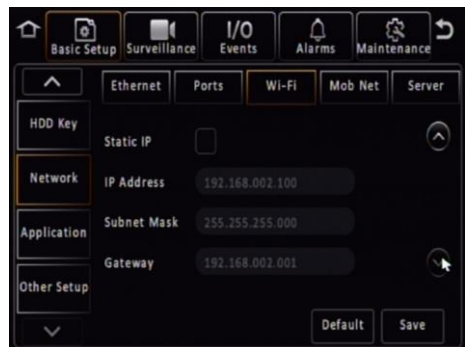

Wi-Fi 2 Figure 49

5.1.6.4 Mobile Network

These settings are dependent on your MDR model. This requires a mobile network MDR model or any MDR model with external 4G dongle connected through Ethernet port.

**MTU** is used to adjust MTU (Maximum Transmission Unit).value for optimize your network transmission. By default, set to 1500.

**Enable** is used to turn the mobile network module off or on. Once enabled, the settings found below will become active.

**Server Type** is an auto-populated field, indicates the mobile network connection type.

**Network Type** refers to the type of mobile network connection that is used by the MDR to connect to the internet. Default is set to **Mix** which works for both 3G and 4G network.

**APN** refers to Access Point Name. This information is dependent on your mobile carrier network.



Mobile Network 1 Figure 50

**Username** obtain from your SIM card provider.

**Password** obtain from your SIM card provider.

**Access Number** refers to the dial up phone number needed to connect to the network. By default, this is set to \*99#

**Certification** refers to the authentication mode, can be set to either CHAP (Challenge Handshake Authentication Protocol) or PAP (Password Authentication Protocol). CHAP should be chosen as this is a more secure authentication protocol. This is chosen by the network operator.

**Active Mode** provides different connection type of Mob Net. By default, the connection mode is Always which represents the MDR will immediately connecting to mobile network as long as this feature enabled. Another option is Phone/SMS which can let the MDR stay under no connection status until certain phone call or message comes in.


**Number1/2/3** link with above Active mode. If choose Phone/SMS in active mode, users can fill in 3 different mobile numbers here. When these number calls or send message to the MDR sim card, the Mob Net connection will be built and MDR can start using mobile data for online features.

Note: There's a sub-feature. If a user calls in, the MDR will display caller number and options to pick up or hang up the call. If picking up, the MDR will be able to audio-communicate with the caller.

**\*Share Network** - MDR Mobile Network can shared with other devices after connecting with Ethernet cable. The second device local IP address should set to 10.100.100.xxx (from 2 – 254 and avoid IP camera address if use any). Subnet Mask: 255.255.255.0. Gateway: 10.100.100.1. DNS: 8.8.8.8 or other public DNS servers.



Mobile Network 2 Figure 51

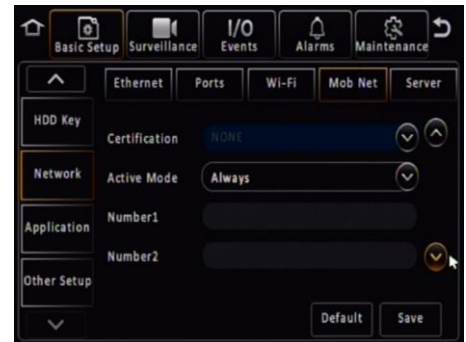

Mobile Network 3 Figure 52

#### 5.1.6.5 Server

**Centre Server** refers to the MDR Server PC. A maximum of 6 centre servers can be saved.

**Add** adds another centre server, a new blank page is displayed with a new number.

**Delete** removes the currently displayed centre server.

**ON** enables the current centre server.

**Protocol Type** refers to the protocol used by the MDR unit to send its data (video and metadata) to the MDR Server. By default, this is set to MDR6. Maximum supports connect to 4x MDR6 server simultaneously.

**Network Mode** refers to the network communication module used for to communicate with the MDR Server. The options are Ethernet, Mobile Network and Wi-Fi. This is discussed in further detail in *MDR 600 Series Network Connectivity SW&Infrastructure Manual*. This can be found on the Brigade website.

**Register Server IP** Public IP address of the firewall which forwards any traffic to the server PC or IP address of the server PC hosting the MDR Wi-Fi Server. (Domain name also supported)

**Register Server Port** is used for device access to server. By default, is 5556.

**Media Server IP** should be the same as MDR Server IP.

**Media Server Port** should be the same as MDR Server Port. By default, is 5556.



Server 1 Figure 53



Server 2 Figure 54

## 5.1.7 Application

### 5.1.7.1 FTP Server

**FTP Enable** is for set up an FTP server for storing snapshots. The FTP is used for building up a channel between software and MDR hardware, which allows users to download footage or snapshot through MDR-Dashboard software. Recommend enabling it all the time.

**Server** is filled in by default, recommend not to change.

**Port** is set by default, recommend not to change.

**User name** is for the FTP server login.

**Password** is for the FTP server login, void by default.



FTP Server Figure 55

## 5.1.8 Other Setup

### 5.1.8.1 Algorithm

**ADAS Camera Install Height** reserve for future use.

**Unit Type** chose between **CM** and **Inch**, reserve for future use.

**AI Voice Enable(ALL)** reserve for future use.

**R-Watch Voice Enable(ALL)** reserve for future use.



Algorithm Figure 56

### 5.1.8.2 Calibration

**Channel**, reserve for future use.

**Channel Uses** supports options of NONE, ADAD and DSM, reserve for future use.

**Mode Type** support between Normal and Calibration, reserve for future use.



Calibration Figure 57

## 5.2 Surveillance

### 5.2.1 Live View

#### 5.2.1.1 Preview

Note: The MIRROR and FLIP VERTICAL feature affects both the live and recorded views.

**Live Audio** is used to send real-time audio from a microphone enabled camera to a speaker enabled monitor. By default, this is disabled.

**Image Setup** is used to control BRIGHTNESS, CONTRAST, COLOUR and SATURATION. By default, this is set to mid-point (31). Each channel can be setup individually. All Settings (except mirror and flip vertical) can easily be duplicated across all channels by using

the COPY TO button. A MIRROR  and FLIP VERTICAL  button may also be configured per channel.

**Margins** is used to adjust the MDR displayed output, this is a key feature to adjust. By default, MARGIN-TOP is 20, MARGIN-BOTTOM is 20, MARGIN-LEFT is 45 and MARGIN-RIGHT is 45.

**Start-up Screen** refers to the configuration the MDR will display once it has fully booted up. The options are SINGLE, QUAD and 9-SPLIT. By default, MDR will have quad view.

**Channel** controls which channels that you want to view when MDR boot up. If the Start-up Screen set to Quad, user can choose any 4 channels to display on the first page. This feature can help user to view wanted channels without operate the MDR all the time.



Preview Figure 58



Image Setup Figure 59




Margins Figure 60

#### 5.2.1.2 Autoscan

**Autoscan Enable** must be ticked to enable all the options.

**Screen** is used to identify the different **Autoscan** views.

 **Delete** removes **Autoscan** views.

 **Edit Screen** is where **Autoscan** views are setup.

**Mode** refers to layout options, such as single, quad, 9-split (8CH only).

**Layout** is where you choose your channel arrangement.

**Duration** refers to time displaying the **Autoscan**. 1-300 seconds.



Autoscan Figure 61



Edit Screen Figure 62

#### 5.2.1.3 Live OSD

This refers to information that is displayed on the live monitor view at all times.

The options are: Date/Time, Vehicle Reg, Alarm, Vehicle Num, Recording State, Speed, GPS, Channel name and G-Force.

You can change the position of each live OSD by using the **Setup** button. Recording states' position is fixed and cannot be changed. This will be displayed in the setup screen.



Live OSD Figure 63



Live OSD Position Figure 64



### 5.2.1.4 RTSP (Real Time Streaming Protocol)

This feature only available in Ethernet page. It provide RTSP streaming link for third party media player user.

**Select Module** to choose which communication method MDR will be used for streaming transmission. 3 options available: Ethernet, Wi-Fi and Mob Net.

**Enable** to allow which channel can pull video stream to third party media player. Main stream and Sub-stream available. (Main stream and Sub-stream parameters setting see 5.2.2 Record) Remember to click on the **Save** button to save current RTSP setup, or these settings will be lost after exit the web page.

**Channel** automatically adapt to MDR models. 6 channels available for MDR 504, 16 for DR 508.

**RTSP Address** used for input to third party player to obtain live streaming.



RTSP Figure 65

## 5.2.2 Record

### 5.2.2.1 General

**Video Format** is used to choose the output video format. The options are PAL - AHD or NTSC - AHD. By default, PAL is chosen. This will be the same for all camera inputs.

Note: Brigade's monitors have automatic detection of these standards.

The MDR also supports single ended TVI camera, which can be mixed with CVBS / AHD cameras together. However, due to the cameras' individual features, please test with small amount of TVI camera with MDR before official using.

**HDD/SD Overwrite** refers to when an HDD and SD cards will overwrite its stored data. The options are BY CAPACITY, BY DAYS and NEVER. By default, BY CAPACITY has been selected which means once the HDD has 4GB of space remaining (1GB for SD card), older recordings are erased and replaced by newer recordings except locked files. The NEVER option is when overwrite is deactivated. The MDR will stop recording when the HDD reaches 2GB of free space. The user must either replace the storage or manually delete recordings.

**Note:** If records time conflicts, for example, crossing time-zone which cause time change 1 hour ahead. Records during the overlapping timeline won't be covered or erased, still saved in the storage medium, but can't be playback by MDR. Recommend exporting the conflicting video out through USB port on front panel then use MDR-Player 6.0 to playback the certain footage as needed. Refer to *Conflict Footages Show in Computer* Figure 67

**Locked File Retention** This represents the length of time (in days) for which alarms cannot be overwritten by the MDR. When the retention expires, the locked files will automatically be unlocked and deleted.

**Alarm Pre-recording** This value specifies the length of time prior to an alarm recording. This will be added before the actual alarm. For example, if ALARM PRE-REC is set to 10 minutes and an alarm of 5 minutes is triggered at 4:00pm and ALARM POST REC is 180 seconds, the alarm recording will begin at 3:50pm and will end after 4:08pm. See Chapter 5.4 *Alarms* for more information.

**Enable Live View** controls whether to display live view for each channel on the screen. By default, all channels have been enabled. If disable certain channel, which will stop live view by displaying a black image. This setting will not affect recording functionality. Refer to *Disabled Channel 2 Live View* Figure 69.

**SD Record Mode** options are **Sub-stream**, **HDD (Main Stream)**, **Alarms (HDD)** and **None**. By default, sub-stream is chosen. Turn this option to **NONE** when an SD card is not present in the unit. SD card data includes frame information only. Once the record mode has been chosen, tick the channel to be recorded to the SD card.


The sub-stream option enables the user to customise audio function, set resolution, frame rate and quality. Easily copy to all channels with the **Copy To** button.



Record Figure 66

- CH01-20190610-083959-095025.264
- CH01-20190610-085008-095959.264
- CH02-20190610-083959-095025.264
- CH02-20190610-085008-095959.264

Conflict Footages Show in Computer Figure 67



Record 2 Figure 68

**HDD (Main Stream)** mode will mirror record HDD settings onto SD card.

**Alarms (HDD)** only the alarms will be recorded onto the SD card.


Note: When SD cards/HDDs are replaced, they must be formatted before using the MDR.

**SD Write Resource Ratio** calculated by (Stream bitrate / SD card full write speed). Bitrate determined by resolution, framerates and quality; SD card full write speed is a fixed value of Brigade SD card (12Mbps). This is a reference value for user to see and configure settings accordingly. Recommend this is set to value lower than 80%, in case the data rate exceeds SD card writing speed and results in data loss.

Note: This value cannot reflect correct status if using a 3<sup>rd</sup> party SD card.

**Record Storage** options are Internal SD or fireproof box. A fireproof box (optional accessory) is connected to the MDR via its USB-B port on the rear. By default, internal SD is chosen.

**Sub-Stream CH** by default enables all available channels. If the IP camera dedicated channels have not been enabled in **IPC Setup** (explained in chapter 5.2.3 IP Camera Setup), the channel box is greyed-out and unable to operate.

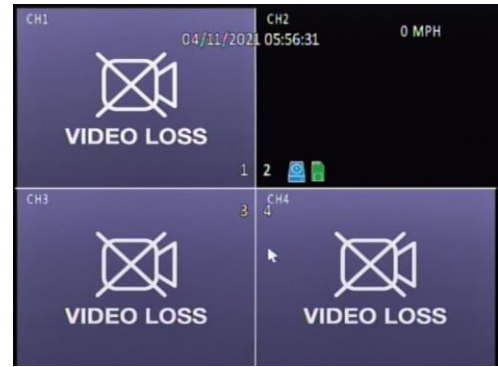

Disabled Channel 2 Live View Figure 69



Record 3 Figure 70

#### 5.2.2.2 HDD

These settings are used to set the resolution, frame rate and quality per channel independently for main stream which stored in HDD/SSD.

**Channel** is used to identify the channel.

**Channel Name** is used for an 8-character name which each camera channel can be associated with. These can include lower/upper alphanumeric characters. This is displayed on the live OSD.

**Enable Recording** allows the activation/deactivation of the camera channel. This should be used if not all camera channels are utilized to avoid video loss errors. For IP camera channels, all the settings will be grey-out and unable to set, users need to enable them firstly in IPC Setup page.

**Resolution** allows users to choose the resolution for each channel. The options auto adjust based on camera inputs. The options are CIF (lowest), WCIF, HD1, WHD1, D1, WD1 and AHD (720p, 960p and 1080p) (highest). For MDR-644 series models, you can set FULL HD 1920x1080 @12fps (PAL) / (NTSC) or HD 1280x720 @25fps (PAL) / 30fps (NTSC). By default, it is D1. If the set resolution higher than camera's actual resolution, the setting cannot be saved. Refer to 19 Specifications for further information on each resolution.

**Encode Standard** options are H.265 and H.264. By default, set to H.264.

Note: For IP camera channels, since IP camera has its own setting embedded, after connecting to MDR, the MDR channel setting will automatically change to IP camera itself settings. Users may need to manually adjust the setting after connected.

**Frame Rate** allows users to choose different frame rates for different channels depending on resolution settings. Options are 1 to 25 for PAL and 1 to 30 for NTSC. By default, it is 20.

**Quality** has 8 levels. Level 1 is the best quality whereas level 8 is the lowest quality. The value beside **Quality** represents stream data bitrate based on current setting (**Resolution, Framerate, Quality, Encode Standard**). This value can help users to estimate the video file size.

**Record Mode** has three modes available – all modes require the **IGNITION** signal to be applied, or timer auto-boot to be set up:



HDD 1 Figure 71



HDD 2 Figure 72

- **NORMAL** - allows continuous recording after powering up until the device shuts down. Alarm recording is included in this mode.
- **ALARM** - allows users to record only when an alarm has been triggered. Alarms can be configured to be activated by triggers or other alarms (such as under/over speed, G-Force, Panic Button, etc.)
- **TIMER** - allows users to specify timeframes in which the recording will be activated. Refer to the OSD map to program these timeframes.

**Record Mode – Timer - Schedule** allows users to choose schedules based on different days.

Click on the day and choose the desired day of the week. Then setup the Start Time, End Time and Video Type.

**Video Type** can be Normal or Alarm.

Note: This record mode timer prevents an MDR from turning off, but this timer is unable to control when an MDR turns on. This has a higher priority than the ON/OFF TIMER.


**Audio** activation allows users to enable/disable the audio recording from the camera channels individually. This setting depends on the utilised cameras having microphones. There are 3 options, **Always Audio** (main Stream recordings can have audio, whether alarm recording has it or not, depending on alarm recording setting), **No Audio** (main Stream recording has no audio), **Alarm Audio** (only main Stream alarm recording can have audio, whether alarm recording has it or not, again depending on alarm recording setting). See *Chapter 5.4.1 General*.

**Alarm Quality** has 8 levels. Level 1 is the best quality whereas level 8 is the lowest quality. Brigade recommends using a higher quality for Alarms for a higher level of image detail.

**Encode Mode** allows users to choose between Constant Bit Rate (CBR) and Variable Bit Rate (VBR). The difference is minimal as the Variable Bit Rate is not efficient as it involves more processing power and may introduce partial image distortion due to higher compression rates.

**Audio Coding Format** support 3 types of audio format: ADPCM, G711U, G711A. By default, set to ADPCM.

**Percentage of Main Stream** displays resource occupation which calculated based on each channel settings. Main stream resource and Sub stream resource are calculated separately, each of them can goes to 100%.

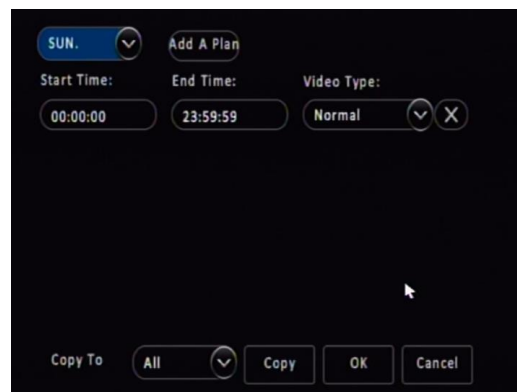

**Record Mode – Timer Figure 73**



**HDD 3 Figure 74**

### 5.2.2.3 SD

In this SD setup page, the parameters are for defining sub stream which is typically used for SD card or online **Live View** via MDR-Dashboard 6.0. If SD card used for alarm recording or HDD mirror recording, the SD card will take main stream parameters (in HDD tab).

**Channel** is used to identify the channel.

**Enable** this controls which channels you would like to sub-stream video and save to the SD card. When using a MDR 504, channel 5 and 6 is not accessible and grey-out (channel 9 – 16 for MDR 508) until they been enabled in IP Setup. See *IPC Setup Figure 78*.

**Encode Standard** options are H.265 and H.264. By default, this set to H.264.

**Audio** activation allows users to enable/disable the audio recording from the camera channels individually. This setting depends on the utilised cameras having microphones. There are 3 options, **Always Audio** (sub-stream recordings can have audio, whether alarm recording has it or not, depending on alarm recording setting), **No Audio** (sub-stream recording has no audio), **Alarm Audio** (only sub-stream alarm recording can have audio, whether alarm recording has it or not, again depending on alarm recording setting). See *Chapter 5.4.1 General*.

**Resolution** can be setup per channel. Options are CIF, HD1, D1. These options are dependent on input to MDR.



**SD Figure 75**

**Frame Rate** allows users to choose different frame rates for different channels depending on resolution settings. Options are 1 to 25 for PAL and 1 to 30 for NTSC.

**Quality** has 8 levels. Level 1 is the best quality whereas level 8 is the lowest quality. Brigade recommends using a higher quality for Alarms for a higher level of image detail. The value beside **Quality** represents stream data bitrate based on current setting (**Resolution, Framerate, Quality, Encode Standard**). This value can help users to estimate the video file size.

**Copy to** function is available to copy settings to all or individual channels.

**Percentage of Sub Stream** displays resource occupation which calculated based on each channel settings. Main stream resource and Sub stream resource are calculated separately, each of them can go to 100%.

Note: if this value exceeds 100%, MDR will notify the user and the setting cannot be saved.



SD 2 Figure 76

#### 5.2.2.4 Record OSD

**Record OSD** refers to information that will be “burned” onto the video image. This means that if AVI is used for the export option, then the enabled information will be shown on the image.

The options are: **Date/Time, Vehicle Reg, Channel Name, G-Force, Speed, GPS, Vehicle Num** and **Alarms**.

You can change the position of each live OSD by using the **Setup** button.

By default, DATE/TIME, VEHICLE REG, CHANNEL NAME, SPEED and ALARMS are enabled.



Record OSD Figure 77

#### 5.2.3 IP Camera Setup


MDR 600 Series support direct connection with IP camera via 6pin connector on the rear panel. Moreover, MDR-644 models support extra 4 IP camera channel through an external Power Over Network (PON) switch.

IP connection on rear panel is plug-and-play, IPC1 – IPC4 represent display channel 5 – 8 by default. After connected, the image will appear on the screen after approx. 20s without extra operations needed.

IP channels are also flexible compared to analogue channels. If connect an IP camera on physical connector IPC1, user can manually allocate it to any other channel in the IPC Setup page.

By default, the **LOCAL ADDRESS** for MDR itself is 10.100.100.1.

For more IP camera setup and operation, please refer to *IP Camera Operational Guide*.

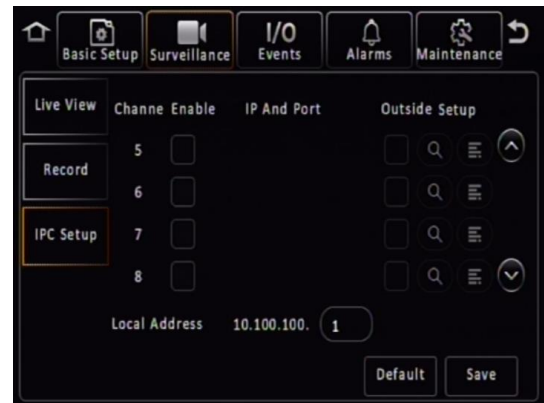

IPC Setup Figure 78

## 5.3 Events

### 5.3.1 General

#### 5.3.1.1 Peripherals

**Remote Panel** is an accessory that consists of 4 diagnostic LEDs, internal buzzer and a panic button. In a scenario where the MDR is installed in a box away from the driver or the MDR output is not being viewed, the remote panel LEDs and buzzer will alert the driver to any hardware or software faults. For MDR-641 models, The Remote Panel buzzer will work with Buzzer settings in Alarm Link Setup. See *Alarm Link Setup 2 Figure 90*.

The panic button can be used for varied scenarios. For example, when using a mobile network/Wi-Fi MDR, this button can be used to trigger real-time emails to the fleet manager.



**Remote Panel Figure 79**



**Peripherals Figure 80**

#### 5.3.1.2 Speed

**Unit** refers to the speed setting. This can either be in miles per hour (MPH) or kilometres per hour (km/h). By default, this is set to MPH.

**Source** has three options. GPS, Speed Pulse or CAN (for future use only). In majority of applications GPS signal is the simplest to use. Brigade's MDR comes as standard equipped with a GPS antenna.

Speed source from the pulse is recommended when the GPS signal is absent or poor (e.g., mines or major city centres). The vehicle speed signal may be a more reliable source. By default, GPS is the source used.




**Speed Figure 81**

**Speed Pulse - Calibration Mode** has two options, Input Manually and Auto Correct. Auto Correct is currently unused.

To use input manually, connect the speed cables on the IO cable then click save. Start the vehicle and then click start. Drive for at least a minute with a minimum speed of 40 km/h or 25 mph. Once you have stopped the vehicle, click the finish button. Now, you will have a mileage value (from your drive). Input the mileage value into the box and click calculate. Finally, your pulse ratio has been calculated. Also, this supports inputting the **Pulse Ratio** manually if the user can obtain correct value from vehicle manufacturer which should avoid further effort of driving and calculating. (This section can only be viewed by selecting "Speed Pulse" in the Source dropdown box).

**Start** is used to begin the analysis of your drive.

**Calculate** is used to obtain the pulse ratio once you have entered the mileage value.

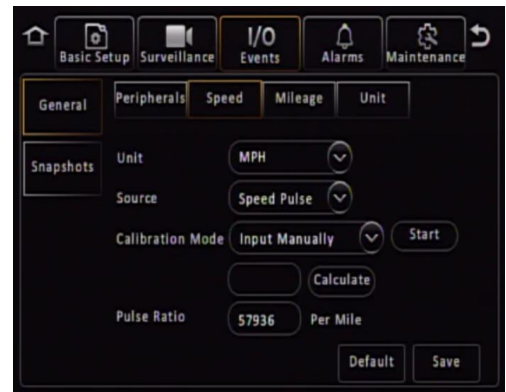

**Speed Pulse Figure 82**

#### 5.3.1.3 Mileage

**Total Mileage** displays the total mileage of the vehicle once it has been confirmed in mileage setup. The speed unit controls whether this value is displayed in miles or kilometres.

**Actual Mileage** is a field that is manually entered. Type the current value mileage value once the MDR is installed.

**Mileage Setup** is used to submit the mileage value to the MDR memory, click confirm once you are happy with the value. Click clear to zero the total mileage value. Prompts will display to ask for user confirmation.




**Mileage Figure 83**

5.3.1.4 Unit

**Temperature** defined which temperature unit to display on MDR OSD. Users choose from Celsius(°C) and Fahrenheit(°F). After change, the device temperature will switch the value accordingly.



Temperature Figure 84

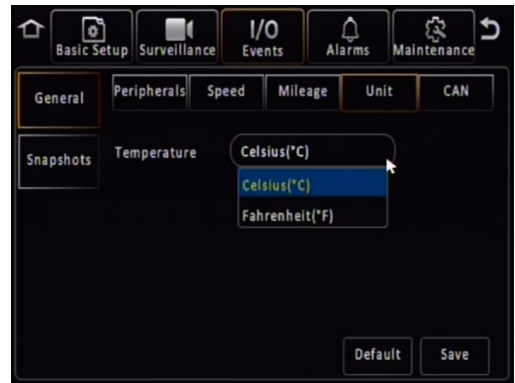

Unit Figure 85

5.3.1.5 CAN

This feature is reserved for future and is not currently available.

5.3.2 Snapshots

Snapshot refers to an image of the video data displayed on an MDR channel.

5.3.2.1 Time Snap

**Time Snap** must be ticked to enable all the options. You can have a maximum of 8 snap entries. By default, time snaps are disabled.

**Delete** removes a time snap entry. You cannot delete entry 1.

**Snap Link Setup** is where your time snap is setup.

**Start time** refers to the time you would like time snaps to start.

**End time** refers to the time you would like time snaps to end.

There is no limitation of the number of snaps, but this uses the same storage limit as recordings. If the storage is full, then the oldest snap will be written over. Snaps are stored by vehicle registration and time.

When exporting snaps to a USB flash drive. A folder named picture found in the following path F:\MDR-644\vehicle registration\date\picture will be created.

**Channel** is the channel that would like to setup a time snap for.

**Snap Enable** controls whether time snaps are enabled for that channel. To activate the other menu options, snap enabled must be ticked.


**Resolution** refers to the time snap resolution. The options are: CIF, WCIF, HD1, WHD1, D1, WD1 and AHD (720p, 960p and 1080p). This is dependent on the input resolution of the cameras connected to the MDR.

**Quality** represents the image quality of the snapshot. There are 8 levels. Level 1 is the best quality whereas level 8 is the lowest quality. By default, this is 1.

**Upload Type** support to save snapshot to FTP server which has been defined in Chapter 5.1.7.1 FTP Server.

**Snap Count** refers to how many snaps will be taken. A maximum of 3 snaps can be taken for a minimum of 5 seconds. By default, this is 1.

**Snap Interval** is the period between each snap which can be between 5 and 3600 seconds. By default, this is 5 seconds.

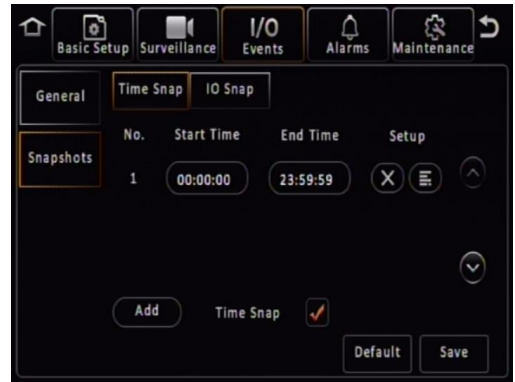

Time Snap Figure 86



Snap Link Setup Figure 87

5.3.2.2 IO Snap

**Alarm Snap Link Setup** are used for taking snaps based on triggered alarms only.

**Mobile App / Web Snap Link Setup** is unused currently.



IO Snap Figure 88

5.4 Alarms

5.4.1 General

There are various alarms that can be configured in the MDR. Such as speed, panic button, IO, video loss, motion detection, blind detection, G-Force, Geo-Fencing and HDD/SD Error. Alarms and events are different. Alarms are reported to the Centre Server (depending on MDR model). Events are stored but do not get reported to the Centre Server. (Please click into the Alarm Link before the following function can be viewed. See Speed Alarm Figure 92). **All alarms use the Alarm Link Setup page.** (See Alarm Link Setup 1 Figure 89)

**Channel** is used to choose which channels you would like to mark as alarm recordings. (Alarm recordings will show as red on playback time bar on both MDR OSD and MDR-Dashboard software). The options are all available channels.

**Audio** is used to determine whether this alarm recording will have audio recorded as well. This feature can help in audio-sensitive situations, users can enable/disable it based on their condition. (These audio settings have a lower priority than audio setting in Record->HDD setting and Record->SD setting, see HDD 3 Figure 74 and SD Figure 75). There might have different usage scenarios, consequences listed below:

1. If set to **Always Audio** in HDD Settings, but **Audio** is disabled in alarm settings, normal recordings will have audio but alarm recordings will not.
2. If set to **No Audio** in HDD settings, it does not matter if **Audio** is enabled or disabled, in alarm settings, both normal and alarm recordings will have no audio.
3. If set to **Alarm Audio** in HDD settings and **Audio** is enabled in alarm settings, only the alarm recording will have audio, normal recordings will not.

Other common scenarios:


1. If in two different types of alarms, one alarm enabled the audio, another alarm disabled for the same channel. When both alarm activate simultaneously, the alarm recording has audio.
2. If in two different types of alarms, both alarms enabled audio for the same channel, but set to different time length. When both alarm activate simultaneously, the alarm recording follows the longer time audio setting.

**Audio Duration** is to define keep record audio for how long after alarm happens. By default, this is 10 minutes.


**Post Record** specifies the period of recording appended at the end of an alarm. For instance, if a sensor is triggered for 1 sec and the alarm duration is 30 seconds and the post recording is 15 seconds, the total amount of recording time will be 45 seconds. By default, this is 10 minutes, the same as Audio Duration.

**Lock** represents whether an alarm cannot be overwritten by the MDR. When the retention expires, the locked files will automatically be unlocked and deleted. Refer to Chapter 5.2.2.1 General on how to set lock expiry timeframes.

**Alarm Output Link** refers to the 2 outputs found on the IO cable. These outputs can be activated based on a linked alarm. Enable this for a high on the alarm outputs.

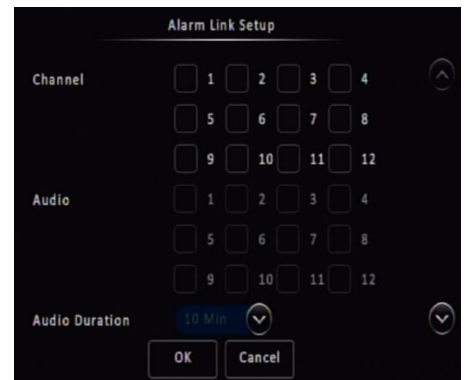

Alarm Link Setup 1 Figure 89

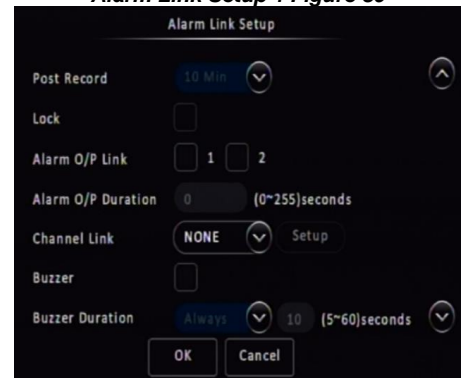

Alarm Link Setup 2 Figure 90


**Alarm Output Duration** represents the amount of time the alarm output will be active for. This can be between 0 and 255 seconds.

**Channel Link** can be used to display a single or quad configuration.

**Buzzer** refers to the built-in buzzer inside the MDR docking station or Remote Panel buzzer when using it with MDR 641 Series. Once this is enabled the duration can be configured.

**Buzzer Duration** can be configured in two ways depending on the type of alarm being triggered. The options are ALWAYS (the buzzer will sound continuously without interruption) or TIMER (the buzzer will sound for the defined period). Timer can be set between 5 and 60 seconds. For example, video loss is a catastrophic failure and Brigade suggests using ALWAYS for such an alarm.

**Alarm Snap** can be enabled, the settings are based on the alarm snap link setup. Refer to 5.3.1.4

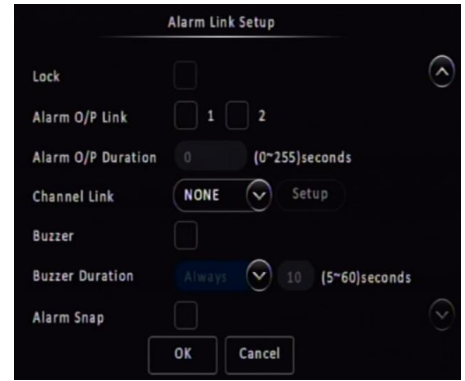

Alarm Link Setup 3 Figure 91

5.4.1.1 Speed Alarm

**Overspeed Enable** is used to activate overspeed alarms or events.

**Alarm Type** can either be alarm or event. Alarms are saved to the Centre Server (depending on MDR model, requires 4G/Wi-Fi) and are displayed in the alarm log in Live view in MDR-Dashboard 6.0 Server mode.

Events are stored but do not get saved to the Centre Server. Events are not displayed in the live view alarm log.

**Trigger Setup** is used to control the conditions for the trigger. (See Speed Trigger Figure 93)

For Alarm Link Setup details refer to 5.4.1 General.

**Early Difference** is an early warning for drivers to curb their speed. For example, if you set the speed to 70mph, and early difference is set to 5mph, then when your speed reaches 65mph, the MDR will sound a short beep to warn the driver. By default, early difference is set to 10 mph.


**Speed** refers to threshold value for which speed will be considered an overspeed and recorded as an alarm.

**Duration Time** specifies different lengths of time which allow for longer/shorter alarm durations. If the alarm duration is set to 30 seconds and a short 2 second alarm occurs, this would be treated as a 30 second alarm. Can be set between 0 to 255 seconds. By default, the duration time is 10 seconds.

**Alarm Off-Delay** is a period in which rapid activations/deactivations can occur, which must be ignored. This is applied when indicators or hazard lights are connected to an input trigger where the off-time is ignored. By default, this is 10 seconds.



Speed Alarm Figure 92

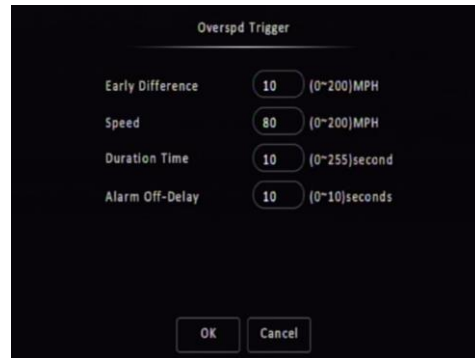

Speed Trigger Figure 93

5.4.1.2 Panic Alarm

**Panic Button Enable** refers to the panic button found on the external remote panel. This is connected to the MDR via the IO cable. By default, this alarm is enabled. Refer to Panic Alarm Figure 94

**Alarm Type** can either be alarm or event. Alarms are reported to the Centre Server (depending on MDR model). Events are stored but do not get reported to the Centre Server.


For Alarm Link Setup details refer to 5.4.1 General. Clicking Trigger Setup will display Panic Trigger Figure 95.

**Activation Period** refers to how long the panic button needs to be pressed for, to be considered an alarm (high). By default, this is 1 second.

**Alarm Off-Delay** is a period in which rapid activations/deactivations can occur, which must be ignored. By default, this is 10 seconds.



Panic Alarm Figure 94

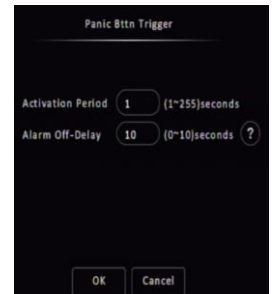

Panic Trigger Figure 95



5.4.1.3 IO Alarm

**IO Enable** allows users to set which trigger input wires are used. If a wire is not used, set enable to off. IO1 has the highest priority and IO8 has the lowest.


**Alarm Type** can either be alarm or event. Alarms are reported to the Centre Server (depending on MDR model). Events are stored but do not get reported to the Centre Server.

For Alarm Link Setup details refer to 5.4.1 General.

**Sensor Name** is filled in for input sensor information. This is usually completed by the installer to aid in identifying an input trigger in the future. Up to 8 alphanumeric characters can be used. This is an important field to be filled in, it is displayed under alarm description in the event log within MDR-Dashboard 6.0 software.

Alarm Descr	Time	Alarm Type
Rv	13:48:38 07-26-202	IO3
Rv	13:48:27 07-26-202	IO3
Ri	13:48:14 07-26-202	IO2
Li	13:48:04 07-26-202	IO1

**OSD Name** is a 2-alphanumeric character identifier. This is an important field to be filled in as this information is then carried over to the MDR-Dashboard 6.0 software. This is shown in frame information. It is also shown on the LIVE OSD and the RECORD OSD. By default, Brigade uses IO1 for left indicator (Li), IO2 for right indicator (Ri), IO3 for reverse (Rv) and IO4 for brake (Br). The IO wires have a priority with IO1 being the highest and IO8 the lowest.



It is possible to duplicate the field information to all 8 input triggers, but this is not advised as each trigger will be connected to varied sources.

**Sensor Uses** If **Reverse** is chosen, a mirror option appears under Channel Link setting when the user selects the link to single channel. See *IO Reverse Mirror Figure 98*. This aids the driver during manoeuvring. If **Privacy** is chosen, this IO will be used to trigger on/off **Privacy** mode. Further details please refer to *Chapter 5.4.2.4 Privacy Mode*. There are a few other options which are currently not in use, these are reserved for future development.

**Trigger Source** to define where the signal comes from. The user can choose between **Voltage**, **CAN** (not currently available for future use) and **Pulse**. Under **Voltage**, high/low voltage level can trigger the sensor. Under **Pulse**, some pulse signal such as left / right steering can trigger the sensor.


**IO Set** is a field that controls whether an input trigger will trigger on a low or high signal. Determines whether the trigger sensor is activated with a high or low voltage.

**Copy** please refer to Section 5.1.8 Surveillance for details.


**Alarm Off-Delay** is a period in which rapid activations/deactivations can occur, which must be ignored.



IO Alarm Figure 96

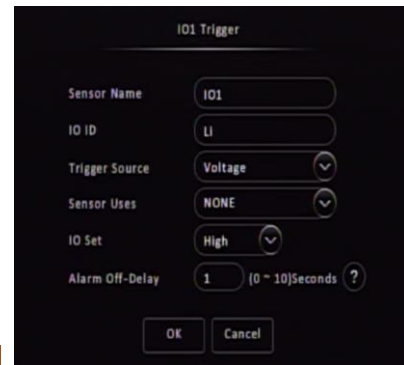

IO Trigger Figure 97

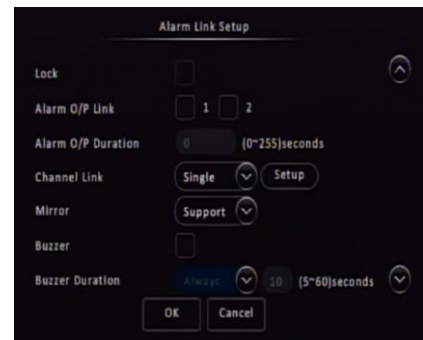

IO Reverse Mirror Figure 98

5.4.2 Video

5.4.2.1 Video Loss

**Video Loss Enable** is used to alert users to a loss of video signal on any of the enabled camera input channels. By default, this is enabled.

**Alarm Type** can either be alarm or event. Alarms are reported to the Centre Server (depending on MDR model). Events are stored but do not get reported to the Centre Server.

For Alarm Link Setup details refer to Chapter 5.4.1 General.

Note: Buzzer set to always on when Video Loss alarm happens.

**Channel** is used to choose which channels you would like the alarms to be triggered from. All channels ticked by default.

**Alarm Off-Delay** is a period in which rapid activations/deactivations can occur, which must be ignored. By default, this is 10 seconds.



Video Loss Alarm Figure 99



Video Loss Setup Figure 100

5.4.2.2 Motion Detection

**Motion Detection Enable** is used to analyse camera inputs for motion. By default, this is disabled.

**Alarm Type** can either be alarm or event. Alarms are reported to the Centre Server (depending on MDR model). Events are stored but do not get reported to the Centre Server.

For Alarm Link Setup details refer to 5.4.1 General.

**Channel** is used to choose which channels you would like the alarms to be triggered from.

**Sensitivity** each channel can have different sensitivities and different areas of detection. 1 represents most sensitive and 8 is the least sensitive.

**Area Setup** lets you choose the area of interest in the camera image. Green blocks are areas where motion will be detected. Using the mouse, drag and drop a yellow square to deactivate areas that you want to be ignored. To reactivate the area, use the mouse to drag and drop over the deactivated area.

**Activated** determines when motion detection will be active. The three options are **Shutdown Delay**, **Ignition On** and **Both**. Shutdown delay means that motion detection will only be active once the ignition has been turned off, the period depends on the shutdown delay settings. Ignition On means that motion detection will be active whenever the MDR has ignition applied. Both works for Shutdown Delay and Ignition On condition.

**Alarm Off-Delay** is a period in which rapid activations/deactivations can occur, which must be ignored. By default, this is 10 seconds.




Motion Detection Alarm Figure 101




Motion Detection Setup Figure 102



Area Setup 1 Figure 103

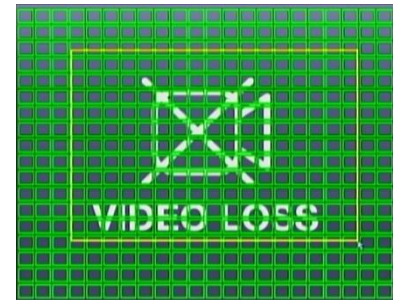

Area Setup 2 Figure 104

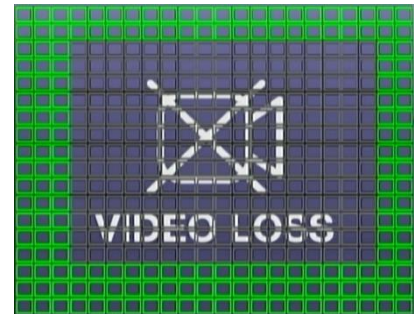

Area Setup 3 Figure 105

5.4.2.3 Blind Detection

**Blind Detection Enable** is used to analyse camera inputs for blind images. By default, this is disabled. Blind detection occurs when a camera is obstructed by a large object or deliberately. It is mostly used to tackle acts of vandalism.

Note: Rapid light changes will also cause Blind Detection triggered, therefore, it is not recommended when using cameras with infrared illumination.

**Alarm Type** can either be alarm or event. Alarms are reported to the Centre Server (depending on MDR model). Events are stored but do not get reported to the Centre Server.


For Alarm Link Setup details refer to 5.4.1 General.

**Channel** is used to choose which channels you would like the alarms to be triggered from.


**Sensitivity** has three options; High, Middle and Low.

**Duration Time** specifies different lengths of time which allow for longer/shorter alarm durations. If the alarm duration is set to 30 seconds and a short 2 seconds alarm occurs, this would be treated as a 30 second alarm. Can be set between 0 to 255 seconds. By default, this is 5 seconds.


**Alarm Off-Delay** is a period in which rapid activations/deactivations can occur, which must be ignored. By default, this is 10 seconds.

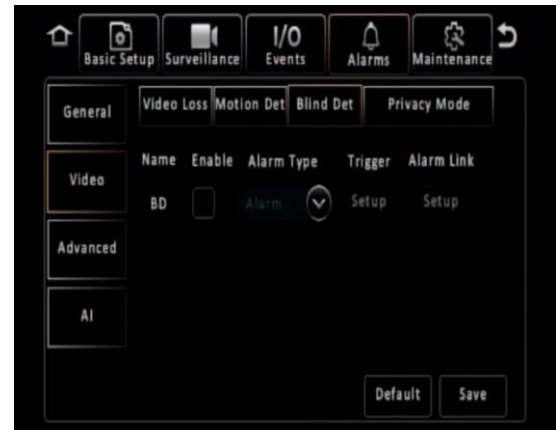

Blind Detection Alarm Figure 106

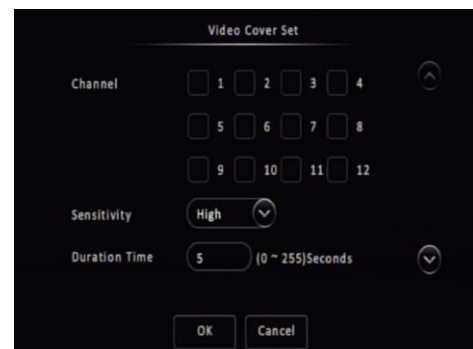

Blind Detection Setup Figure 107

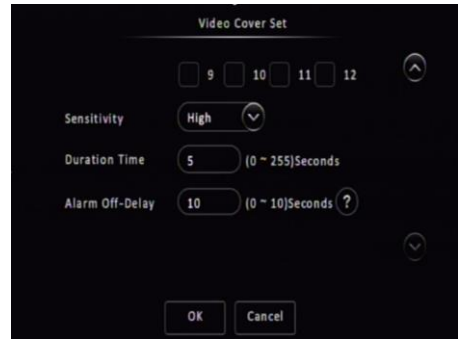

Blind Detection Setup 2 Figure 108

#### 5.4.2.4 Privacy Mode

**Privacy Mode** is used to close camera and stop recording when the driver does not want to be recorded. By default, this is off.

**Alarm Type** can either be alarm or event. Alarms are reported to the Center Server (depending on MDR model). Events are stored but do not get reported to the Center Server.

**Privacy Mode** does not have Alarm Link Setup.

**Channel** is used to choose which channels you would like to stop recording when privacy mode is activated.

**Privacy Method** has two options: **IO** and **Ignition OFF**.

If **IO** is selected the driver can activate the privacy mode by triggering the dedicated IO (the **Sensor Usage** in IO alarm must be set to privacy mode). In IO setup, the **Signal Type** can be chosen from **Short Signal** or **Long Signal**. If choosing **Short Signal**, trigger the IO once will enter the privacy mode no matter what happen to the IO afterwards. If choosing the **Long signal**, when the IO is triggered, the device will enter Privacy Mode, if IO is dismissed, device will exit privacy mode immediately.

If **Ignition OFF** is selected, the privacy mode will be activated when the ignition signal is cut off.


**Exit Method** defines how to deactivate the Privacy Mode and put camera(s) back to normal recording state. **Exit Method** can choose multiple conditions, if more than one method has been chosen, fulfilling either one of them will deactivate the **Privacy Mode**.

**Note:** The combination: **Ignition OFF** (enter) + **Long Signal IO** (exit) is not supported.


**Enable AI Mp3 Voice** currently not in use.

**Alarm Voice Enable** can be ticked to allow an audio notification audio for the user while enter or exit the privacy mode. If enter the mode, they will hear "Privacy Mode Enable", if exit the mode, they will hear "Privacy Mode Disable".


**Effective Time** works when **Privacy Method** is switched to **Ignition OFF**. It determines how many seconds before entering the mode. By default, this set to 10, which means after 10 seconds ignition off, the device will enter privacy mode.

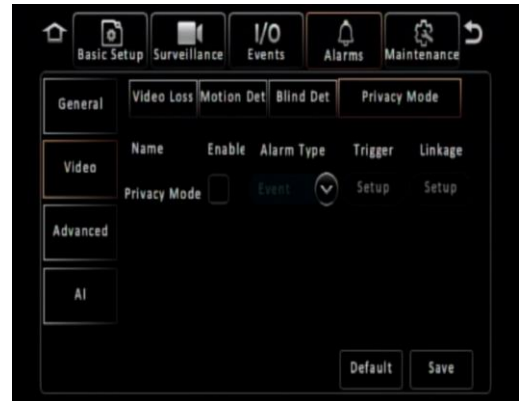

Privacy Mode Alarm Figure 109

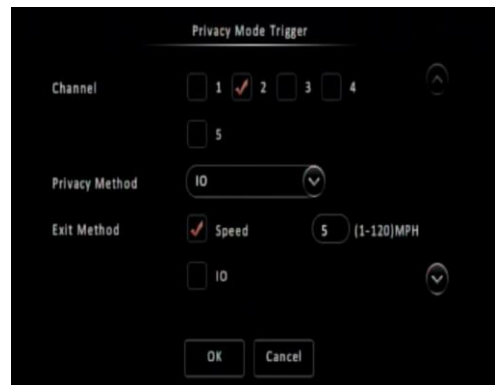

Privacy Mode Trigger - 1 Figure 110

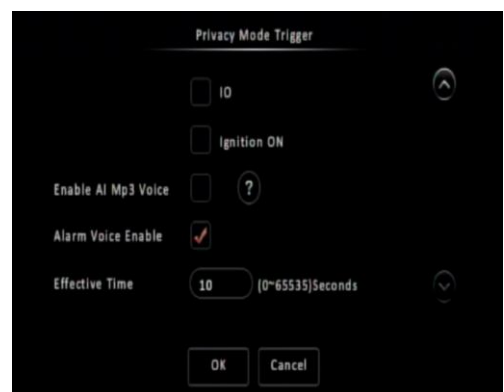

Privacy Mode Trigger - 2 Figure 111

5.4.3 Advanced

5.4.3.1 G-Force

**G-Force Enable** is used to analyse the MDR's g-force values. By default, this is disabled.

**Alarm Type** can either be alarm or event. Alarms are reported to the Centre Server (depending on MDR model). Events are stored but do not get reported to the Centre Server.

For Alarm Link Setup details refer to 5.4.1 General.

**Calibrate** internal G-sensor requires calibration before use. Once the unit is installed (on level horizontal ground) with the vehicle stationary (no vibrations/engine off) click the calibrate button. This will zero all three axes: X, Y and Z. Travelling forward with the MDR handle indicating the front and the connectors on the back indicating the rear; Y represents left/right; Z represents up/down.


**Threshold Value** refers to the G values for which it will be considered an alarm. This must be tested and determined for your specific vehicle.

**Alarm Off-Delay** is a period in which rapid activations/deactivations can occur, which must be ignored. By default, this is 10 seconds.

Note: G-Sensor values are digitally sampled and only provide an average indication of the shock data.



G-Force Alarm Figure 112

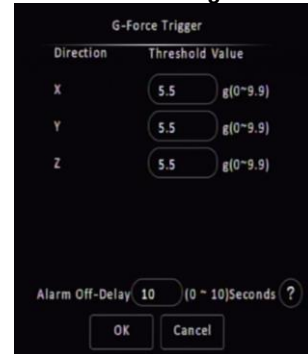

G-Force Trigger Figure 113

5.4.3.2 Geo-Fence

**Geo-Fence Enable** is used for mobile network MDR models. It must be enabled prior to using this feature.


Geo-fences are used to send an alarm if a vehicle leaves or enters a geographical region. This region is setup by the user in MDR-Dashboard software.

Geo-fences are setup in MDR-Dashboard - Server mode. Please refer to the Network Connectivity SW & Infrastructure Manual.

In **Geo-Fence Alarm** Link Setup, it supports a **Non-stop** feature for IO output. If Non-stop enabled, The Alarm O/P duration will be greyed out. This allows the MDR to keep a continuous high-level output if it is in the Geo-Fence area.



Geo-Fencing Alarm Figure 114

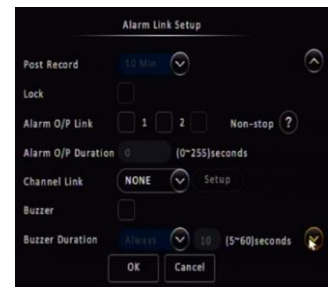

Non-Stop Feature Figure 115

5.4.3.3 HDD/SD Error

**HDD/SD Error Enable** is an alarm which indicates when the HDD/SD has a major malfunction where data can no longer be written to the storage medium.

**Alarm Type** can either be alarm or event. Alarms are reported to the Centre Server (depending on MDR model). Events are stored but do not get reported to the Centre Server.


For Alarm Link Setup details refer to 5.4.1 General.

Note: Internal Buzzer set to always on when Video Loss alarm happens.

**Alarm Off-Delay** is a period in which rapid activations/deactivations can occur, which must be ignored. By default, this is 5 seconds.



HDD Error Alarm Figure 116

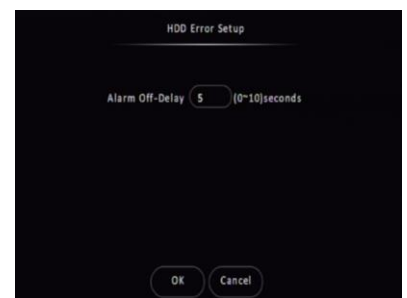

HDD Error Setup Figure 117

5.4.4 AI

5.4.4.1 ADAS & DSM

**ADAS** and **DSM** alarms are reserved for future uses.



ADAS Alarm Figure 118



DSM Alarm Figure 119

5.5 Maintenance

A bus-powered USB hub (minimum of 2 USB ports for USB mouse and USB flash drive) will be required to export/import configuration, network files and geo-fence files. Please note Config Files are created by the user.

5.5.1 Configuration

5.5.1.1 Config File

**Config File Export** creates a configuration file and saves this to a USB flash drive. This file includes all settings except network and geo-fence related settings. This file can only be read by an MDR 600 Series model.

A configuration file named CONFIG.CONFIG will be created on the root of the USB flash drive.

**Warning: Network settings and Register Info settings are not contained in a configuration file. To support MDR fleet setups with an identical configuration file.**

Note: If a configuration file with the same name is present, this will be overwritten.

**Config File Import** is used when you have an existing configuration file on your flash drive and wish to import those settings to the MDR.

**AI Config File Export** is reserved for future use.

**AI Config File Import** is reserved for future use.



Configuration File Figure 120

5.5.1.2 Network File

**Network File Export** creates a file that contains all network related settings, such as: server, ethernet, mobile network and Wi-Fi settings. This will be called NETWORK.CONFIG.

**Network File Import** is used when you have an existing network file on your flash drive and wish to import network settings to the MDR.




Network File Figure 121

5.5.1.3 Geo-Fence File

**Geo-Fence File Export** creates a file that contains geo-fence parameters. This file will be called GEO-FENCE.CONFIG.

**Geo-Fence File Import** is used when you have an existing network file on your flash drive and wish to import geo-fence settings to the MDR.

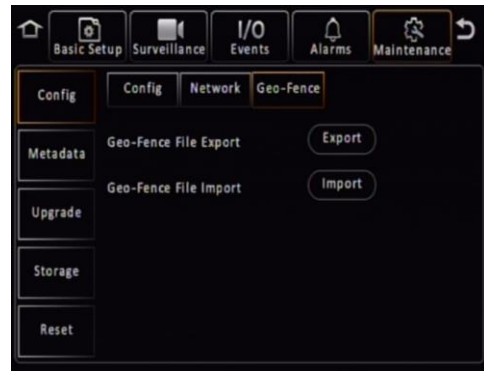

Geo-Fence File Figure 122

5.5.2 Metadata

Information related to recording parameters, alarms and trigger status can be recorded along with speed, location and G-Force data. In addition, data related to the unit itself such as voltage and temperature are recorded and plotted graphically in MDR Software (MDR-Dashboard and MDR-Player). This information is called metadata. Metadata will be saved in the MDR main storage medium for 6 months maximum. After 6 months, the oldest metadata will be overwritten by new ones.

5.5.2.1 Data Export

This area is used to export data to a USB Flash drive.


**All** will export all historical data for the chosen file type that the MDR has stored.

**Export Time** lets you choose a specific period which may be of interest. You can specify the date and time.

**File Type** allows you to choose the metadata that you would like to export. The options are Snapshots, GPS Data, G-Force Info, Mob Net Dial Log, Alarm Log, Operation Log, Blackbox data and Debug Log Information.

Note: Debug Log is auto-created every day by MDR for self-check. It can be used for troubleshooting process.

The storage location follows the format "\MDR unique serial number\MDR644\YYYY-MM-DD\log\log type" and can be read using Notepad™.

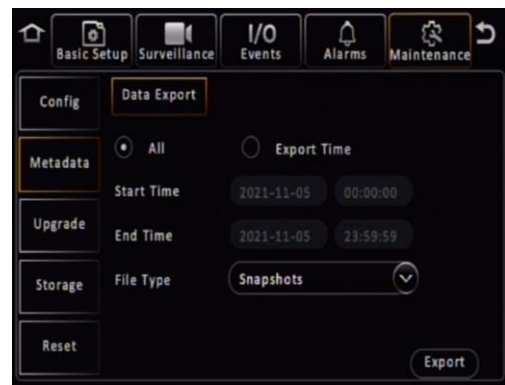

Data Export Figure 123

5.5.3 Upgrade

A bus-powered USB hub (minimum of 2 USB ports for USB mouse and USB flash drive) will be required for upgrade procedures.

**FMW/MCU Upgrade** is used to upgrade firmware and MCU (Microcontroller) version. Firmware contains MCU version (combined package) for an easier upgrade. Please check Brigade's website regularly for updates. Upgrades require a USB bus-powered hub which is then connected to the front of the MDR. Click upgrade to start the upgrade process, see *Upgrading Progress Figure 125*. After the upgrade, the MDR will restart and display *System Upgrade Figure 126*. Check if the firmware/MCU version has been upgraded successfully by checking system information.

MCU version is software related to MDR hardware functions.

Create a folder named **upgrade** in the root directory of your USB flash drive. Copy firmware files (combined FMW and MCU). Plug the USB flash drive into USB bus-powered hub which is then connected to the front of the MDR. Click upgrade to start the upgrade process, see *Upgrading Progress Figure 125*. After the upgrade, the MDR will restart and display *System Upgrade Figure 126*. Check if the firmware/MCU version has been upgraded successfully by checking system information.

**Automatic upgrades** can also be carried out. To complete this type of upgrade, create a folder named **autoupgrade** in the root directory of your USB flash drive. Plug the USB flash drive into USB bus-powered hub which is then connected to the front of the MDR. The process will begin a few seconds after. Make sure the MDR is on when you plug in the flash drive. If it does see a different firmware, then you will be shown *Autoupgrade Figure 127*. If the firmware version is the same version installed on the MDR then no upgrade will occur.

**Warning:** Do not connect an external HDD to the front USB port. Only USB Flash drives (which contain flash memory) is supported by this port. Brigade will not be held responsible for incorrect use of this port.


**Warning:** Ensure the flash drive is not unplugged from the MDR during this process. Power must be supplied to the MDR without any interruption. Both firmware and MCU upgrades are very sensitive operations and any power loss may permanently damage the MDR.

**IPC Upgrade** refers to IP camera upgrades. Refer to IP Camera Operational Guide.


**R-Watch Upgrade** currently not in use.




Upgrade Figure 124

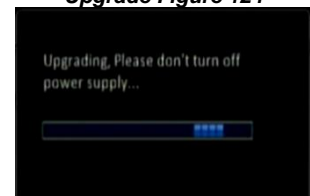

Upgrading Progress Figure 125

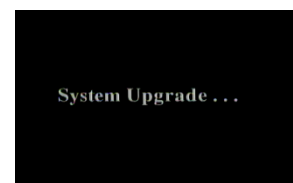

System Upgrade Figure 126

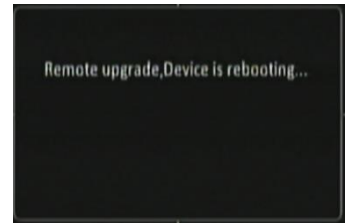

Autoupgrade Figure 127

#### 5.5.4 Storage

**Format** is used to remove data from the different storage types. It is possible to format **HDD**, **SD (Internal)**, **SD (Fireproof Box)** and **Front USB**. You will be asked to confirm if you would like to format prior to the MDR starting the format process.

To format the fireproof box, click format then choose MDR6. This will format the device into a proprietary format that the MDR can record to.

A USB flash drive that is plugged into the front USB of the MDR can also be formatted to MDR6 or FAT32 format.

**Warning:** Formatting the different storage types will delete all the data from that storage.

**Note:** This interface only displays storage medium which are currently installed or plugged in.



Storage Figure 128

#### 5.5.5 Reset

**Factory Settings Restore** use this feature to restore the configuration to its default factory settings. Any configuration will be lost, except video recordings and historical data (highest/lowest temperature, mileage etc.).

**System Restart** is used to force the MDR to restart.



Reset Figure 129

## 6 Record Search

**Rec Search** allows you to search based on source, type, channel, date, month, year and time.

**Source** can be selected to retrieve the data. This can be HDD, Sub-stream SD or Main Stream SD. By default, HDD is selected. HDD recording represents higher quality recordings found on the HDD. This is usually set to a better resolution than Sub-stream SD data. Sub-stream represents a lower resolution recording that is found on the SD card (optional). Main Stream SD represents recording the same data as the HDD, which is in high resolution and frame rates. SD data types will contain frame information only.

Once you have chosen the date, click **Next**.

Now the search results are shown, see *Search Results Figure 131*.

**Video type** options are All, Normal Alarm or Lock. If you are not certain of the type, choose All.



**Channel** lets you choose which channel video you would like to view. Each channel will be displayed in full screen.

Once you click **Search** the Video results are displayed. See *Video Results Figure 132*.

In this window, you will be able to choose a channel and time. Ticked channel boxes will load this data during playback.

If you click **Playback** it will automatically start playing the first channel displayed when the video data starts for that day.

Note: If playback of a video recording is in a different video format from the current settings (example NTSC or PAL), it cannot be played. Please, switch the video format. You do this by navigating to Setup -> Surveillance -> Record -> General -> Video Format.

You can click on the timeline to a desired time or choose the time using the number pad . You can move the button  to your chosen time, by clicking and dragging while left clicking.





is used to navigate earlier or later in that day.




is used to zoom in and out on the timeline.

During Playback, the following functions are available:

 Next Channel

 Previous Channel


 Rewind x2 x4 x8 x16


 Play / Pause


 Fast Forward x2 x4 x8 x16

 Slow Forward 1/2 1/4 1/8 1/16

 Step

 Back


 Volume Increase

 Volume Decrease


 Mute Volume



*Rec Search Figure 130*

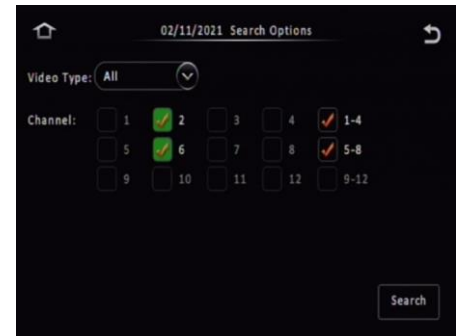

*Search Results Figure 131*

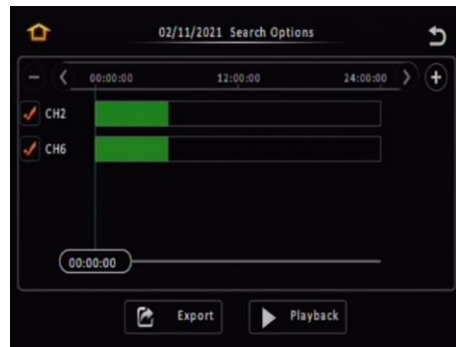

*Video Results Figure 132*



*Playback Figure 133*



Once you click **Export** in *Video Results Figure 132*, then *Start Time Export Figure 134* is displayed.


By default, the timeline for one whole day (24 hours) is displayed. Enter the start time of your export, once you are happy with the time, then click **Start time**. See *Start Time Export Figure 134*.

Enter the end time of your export and click **End time**. See *End Time Export Figure 135*. The duration and estimated capacity will be displayed. See *Export Estimate Figure 136*.


Once the start and end times are correct, insert a bus-powered USB hub into the MDR front USB. Then connect your mouse and USB Flash drive to this hub and click **Export**.

An export detail window will be shown, see *Export Details Figure 138*. Choose **Proprietary** or **AVI**. Proprietary is secure and contains metadata, it is played using MDR-Dashboard software. AVI is playable on industry media players such as Windows Media Player (WMP).


Errors can occur such as no external storage detected or a lack of memory space. If this does, unplug and replug the USB flash drive or insert a larger capacity flash drive. Click **OK**. Exporting progress will be shown in *Exporting Progress Figure 137*.

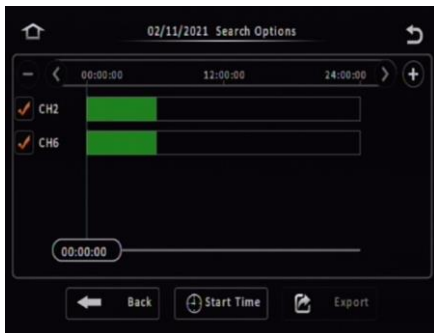

Start Time Export Figure 134

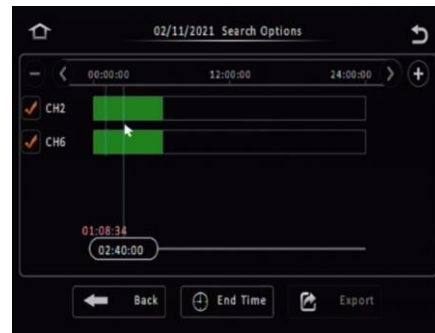


End Time Export Figure 135

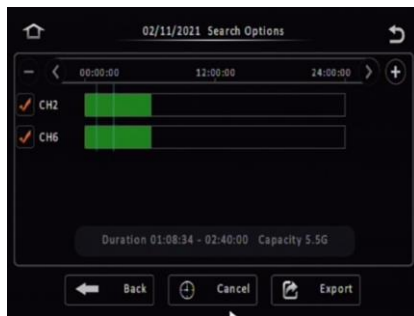

Export Estimate Figure 136



Export Details Figure 138

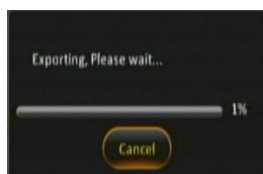

Exporting Progress Figure 137


## 7 Log Search

**Log Search** allows you to search based on type, date, month, year and time.


Click **Next** once you have chosen your required date.

In the next window, enter your **Start Time** and **End Time** of the period.

**Log Type** can be Alarm, Operation and Locked. Alarm logs contain logs related to Input/output triggers, Panic Button, Speed, G-Force, Video Loss, Motion Detection, Blind Detection, HDD/SD Error and Geo-Fence. Alarm logs can be filtered. Operation logs show all logs related to MDR functions, see *Operation Log Figure 141*. Locked logs show logs related to files that are locked by the user. This is configured by the user.

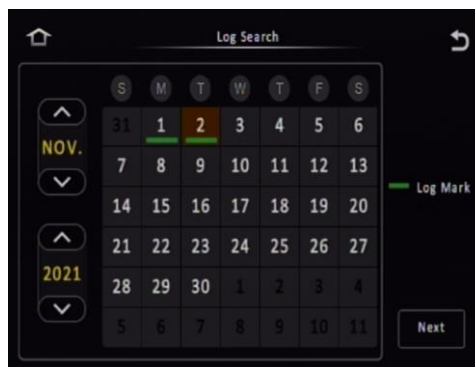

Log Search Figure 139

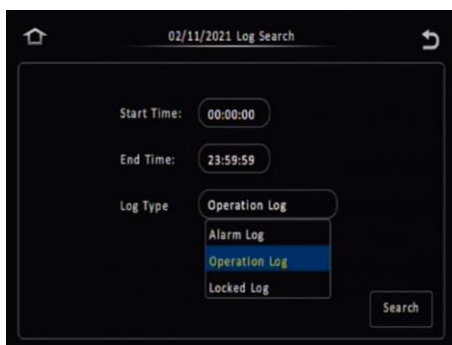

Log Details Figure 140



Operation Log Figure 141

## 8 System Information

### 8.1 Version Information

**Device Name** is a pre-populated field to help identify the MDR unit.

**Serial Number** is a unique identifier for each MDR unit. This information is used to connect a mobile network or Wi-Fi MDR to MDR-Dashboard. This is made up of 10 alphanumeric characters.

**MAC Address** refers to media access control address which is a unique identifier. This is assigned to network interfaces for communications at the data link layer of a network segment. This consists of 12 alphanumeric characters.

**Firmware Version** refers to the firmware which contains the OSD menu. The structure starts with MDR series model name.

**MCU Version** refers to microcontroller firmware which is installed in the MDR unit. This firmware controls all hardware operations. Such as the HDD heater.



Version Information Figure 142

### 8.2 Modules

#### 8.2.1 Mobile Network

This tab will only show if enabled and configured.

**Connection Type** shows the connection used to connect to network operators. The options are: GPRS/EDGE, CDMA, EVDO, WCDMA, TDSCDMA, FDD and TDD.

**Module Status** shows whether the MDR sees the presence of the mobile network module. This will either show module model names or "not detected".

**SIM Status** shows whether the MDR sees the presence of a SIM card. The statuses are detected, not detected, available, not available and busy.

**Dial Status** indicates the SIM's dial status, which can be dialled up, failed dial up and unknown error.

**Signal Level** will display the power level of the signal, this will be xxdBm format.

**IP Address** refers to the IP address obtained by the SIM from the network provider.

**IMEI** refers to International Mobile Equipment Identity number. This is made up of 15 alphanumeric characters.

**IMSI** refers to International Mobile Subscriber Identity number. This is made up of 15 alphanumeric characters. This will display correct number after sim card installed.




Mobile Network Figure 143

#### 8.2.2 Wi-Fi

This tab will only show if enabled and configured.

**Built-in Wi-Fi Status** indicates the current physical state of the internal Wi-Fi module. This can be detected, not detected, connecting, connection failed, connected and obtaining IP address (DHCP).

**Signal Level** will display the power level of the signal in a visual form . The more blue bars the better the signal level.

**IP Address** refers to the IP address obtained by the wireless module.

**MAC Address** refers to media access control address which is a unique identifier. This is assigned to network interfaces for communications at the data link layer of a network segment. This consists of 12 alphanumeric characters.

**SmrtCntrlr Wi-Fi Status** indicates the presents of SmartController dongle. If it connected on the USB port on MDR front panel, the status will show "Detected". Available statuses are **Not detected**, **Detected** and **Connected**.

**SmrtCntrlr SSID** displays the SmartController Wi-Fi name. Users can find this Wi-Fi in their mobile device Wi-Fi list and connect to it.

**SmrtCntrlr IP Address** refers to the IP address obtained by SmartController dongle.

**SmrtCntrlr MAC Address** refers to media access control address, which is a unique identifier, assigned by SmartController dongle.

For more SmartController features, please refer to SmartController product manual.



Wi-Fi Figure 144

### 8.2.3 GPS

**GPS Status** shows whether the MDR sees the presence of the GPS module. This will say detected or not detected. MDR 600 series use external GPS module which is embedded with antenna together. Therefore, before connecting GPS antenna, the MDR will display “**No GPS Module**” all the time.

**GPS Satellite Count** shows how many satellites the GPS module sees, the value can be between 1 and 24.

**Speed** indicates the current speed of the vehicle, obtained from GPS data.

**Note:** the metadata (including GPS) is saved in the main storage medium for 180 days.



GPS Figure 145

### 8.3 Server Status

**Centre Server #** displays the current server configuration details. A maximum of 6 centre servers can be stored.

**Server Status** shows connection state of the chosen server. This can either be connected or unconnected.

**Network Type** indicates the type of connection interface the centre server will use to attempt to communicate with the MDR Server. There are three options: Ethernet, Wi-Fi and mobile network.

**Server protocol type** shows the built-in proprietary communication protocol that will be used between the MDR unit and MDR Server.

**Server IP Address** displays the IP address of the MDR Server. This can either be internal or external IP address.

**Port** shows the port used for communication between the MDR and MDR server.



Server Status Figure 146

### 8.4 Environment

**Voltage (V)** indicates the current voltage level the MDR is receiving.

**Device Temperature (°C)** shows the physical temperature of the MDR unit.

**HDD Heater Status** indicates the current state of the heater. The heater is found on the HDD inside the MCU. The heater turns on automatically once the environment temperature goes down below 10°C and will keep heating to maintain device temperature around 10°C.

Note: The MDR will not recording while MDR warming up, until it reaches 10 °C and turn on properly.

**Ignition Status** indicates the current state of the ignition wire – yellow on MDR power cable.



Environment Figure 147

### 8.5 Storage

**Storage Type** refers to the medium of storage. By default, any installed storage medium should be displayed. **FRONT USB** may also be displayed here if a flash drive is connected to the front USB port, found on the docking station.

**Warning:** Do not connect an external HDD to the front USB port. Only USB Flash drives (which contain flash memory) is supported by this port. Brigade will not be held responsible for incorrect use of this port.

**Status** is an indication of the state of the storage medium. There are three states that can be shown: **Recording**, **Normal** or **Failed**. **Recording** refers to when the medium is currently being recorded on. **Normal** is when the medium is not currently being recorded on, but it has no errors/failures. If a state of **Failed** is displayed, the MDR should be restarted and the storage medium formatted or replaced.

**Free/Total** shows the capacity of the storage media. In all storage media, once formatted, some space will be lost due to binary math. In general, for each gigabyte, you'll have about 70MB less space.

**Remain Time** shows the remaining time on each storage media that is currently being recorded on.



Storage Figure 148

## 8.6 History

**Highest Speed** is displayed with the relevant date and time.

**Total Mileage** is an indication of the vehicle's mileage.

**Lowest Voltage** is displayed with the relevant date and time.

**Highest Voltage** is displayed with the relevant date and time.

**Lowest Temperature** is displayed with the relevant date and time.

**Highest Temperature** is displayed with the relevant date and time.

**Highest Information Clean** is used to clear all historic information shown on this page.



History Figure 149

## 9 MDR-Dashboard 6.0

MDR-Dashboard 6.0 software is used for local playback, analysis, clipping, GPS tracking, vehicle information and events/log display. Remote Device and Server playback is possible with mobile network and/or Wi-Fi enabled MDR models. MDR-Dashboard 6.0 has the following features:

- Real-time Preview (Depending on model and only available in conjunction with the MDR server)
- Multi Vehicle Monitoring (Depending on model)
- Playback of Server (Depending on model) and Local Video Data
- Clipping and Downloading Data
- Evidence Management (Depending on model)
- Auto Download Scheduling (Depending on model)
- Basic Data Management
- Alarm Centre (Depending on model)

It allows exporting video clips in three different ways:

- **STANDARD** - proprietary format (readable only by MDR-Dashboard 6.0 and MDR-Player 6.0)
- **EXPORT** - an executable file containing an embedded version of the MDR-Player 6.0
- **MP4** – industry generic video format (without metadata)

Aside from exporting features and event/log display, the MDR-Dashboard 6.0 can read directly from the MCU (Mobile Caddy Unit) or the internal SD card. These features are not available with MDR-Player 6.0.

### 9.1 PC System Requirements

For MDR-644 Series, a USB cable with USB standard type A plug to standard B plug is provided with the MDR which will connect the MCU to the PC. For MDR-641 Series, it requires an ancillary item called MCU Reader to connect the PC with MCU. For more details, please refer to Chapter 2.2.2 MCU Reader. The MDR-Dashboard 6.0 is compatible with Microsoft™ Windows™ 7, 8.x (32-bit or 64-bit version) and 10.x operating systems.

Note: To use the maps feature, an internet connection is required.

MDR-Dashboard 6.0 minimum requirements:

COMPONENT	MINIMUM REQUIREMENTS
CPU	Intel I5-6400 and above (4 Cores / 4 Threads)
Free Hard Disk Drive (HDD) space	4GB
Operating System	Windows 10
Web browser	Internet Explorer 10
Graphics Card	Integrated graphics card
Software	Flash player (up to date)
Resolution	1440x900 (minimum)
RAM	8GB

### 9.2 Retrieving HDD Data (Quick Guide)



Open the software by right-clicking on the icon. Select Run as administrator. This will allow the software to read information from the MCU. The default username: admin and "default password": LEAVE BLANK. Once users have filled in username (this must be lower case) click OK.


In Local mode you have two playback options, HDD and Directory. HDD - is active when the physical MCU (Mobile Caddy Unit) or SD Card is connected to your local PC.


Double-click the vehicle icon. This will display ALL calendar events. Double-click on the relevant calendar date this will display the pre-playback screen. Click on the CLIP button. Only accessible during while video is being played or paused. Click on the OK button.

The clip settings window will open. Double check start time and end time. Check the number of channels you want to download. The more channels you choose the bigger the file size.

Choose an option to download your file. Standard is for backing up/for users with the software installed. As it clips and creates video files in proprietary format (H264/H265). Export will export the footage into an executable when playing back you do not need Dashboard software installed. We recommend this option if you are sharing this file with a third party (file must not be larger than 1.5 GB). MP4 files playable by common players such as Windows Media Player (WMP™). Each channel is saved separately so unable to view all channels simultaneously.

This solution is the portability of the format. The disadvantage is the lack of protection and missing metadata information. Files can be played and edited by anyone. We do not recommend this option as it is not secure. Choose the path where to save your file then click OK.

Click the download button  to view active/historic downloads. The completed tasks automatically move to the Completed tab. Right-click a

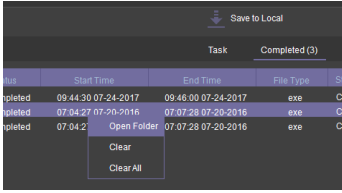

task and click open folder  This will automatically open the location of your downloaded data.


### 9.3 Installing MDR-Dashboard 6.0


- This operation is performed on the client PC. Right-click the installation file shown in *MDR-Dashboard 6.0 icon Figure 150* and click run as administrator.
- There may be a security warning pop-up which may be ignored. The software is verified to be virus-free. Click **YES**.
- The setup wizard window will then be displayed. Click **NEXT** to begin the installation.
- Users can choose preferred language display, which is listed in *MDR-Dashboard 6.0 Setup Figure 153*. installation windows will switch to the chosen language after clicking OK.

Note: this only applies for installation windows, not the MDR-Dashboard 6.0 client interface. The MDR-Dashboard 6.0 client language will follow the current computer's language. If you want to change the client interface, please refer to *System Settings Figure 221*.


- Users can configure the destination location (if there is not enough free disk space) which is shown in *MDR-Dashboard 6.0 Location Figure 154*. It is **NOT** recommended to change the default location.
- Users can then choose if a start menu folder should be created as shown in *Start Menu MDR-Dashboard 6.0 Figure 155*.

- Referring to *Desktop Icon MDR-Dashboard 6.0 Figure 156*, users can choose if a desktop icon is created.
- Users are now prompted to click **NEXT** to begin the installation. This is indicated in *MDR-Dashboard 6.0 Installation Figure 157*.
- In *MDR-Dashboard 6.0 Launch Step Figure 158* depicts the final step, users may choose to launch the software or open MDR Video Tutorial provided by Brigade Electronics. Tick the box and click **FINISH**.


 **MDR-Dashboard 6.0 SETUP.exe**  
*MDR-Dashboard 6.0 icon Figure 150*

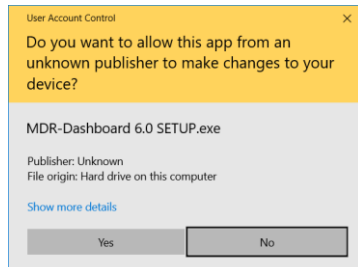


*MDR-Dashboard 6.0 Setup Figure 151*

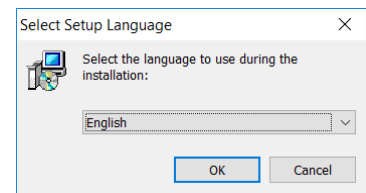


*MDR-Dashboard 6.0 Setup Figure 152*

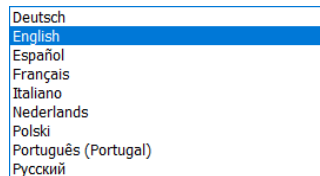


*MDR-Dashboard 6.0 Setup Figure 153*

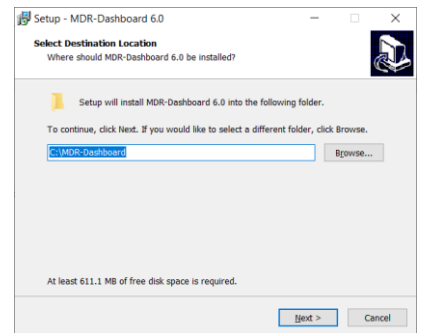


*MDR-Dashboard 6.0 Location Figure 154*

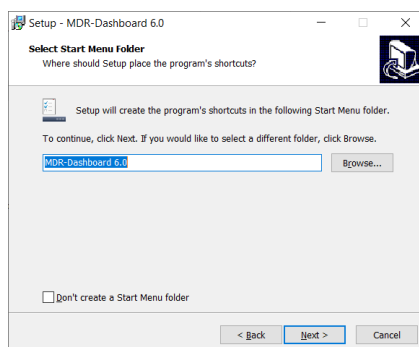


*Start Menu MDR-Dashboard 6.0 Figure 155*

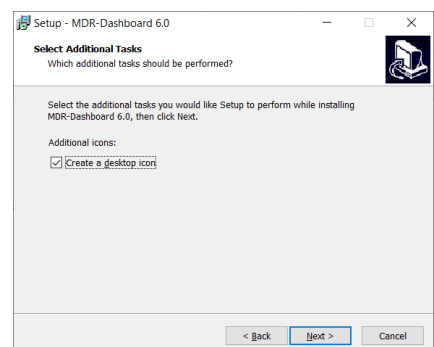

*Desktop Icon MDR-Dashboard 6.0 Figure 156*

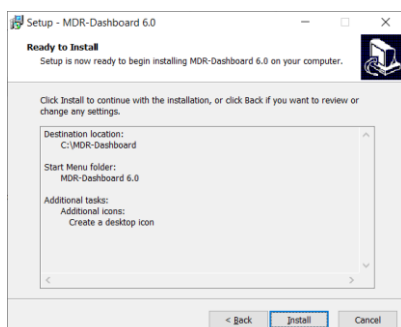

*MDR-Dashboard 6.0 Installation Figure 157*

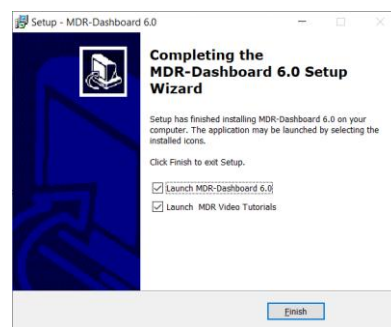


*MDR-Dashboard 6.0 Launch Step Figure 158*

## 9.4 Connecting the MCU to the PC

### 9.4.1 Pre-Connection Procedure (Preferred)


- Users may follow the below procedure if an internet connection is present.
- Run **Windows Update** to have the latest driver database available.
- PC must be up to date with **Windows Update**. Browse to **Control Panel** and then click on **Windows Update** to confirm this. See *Windows Update Figure 159*.

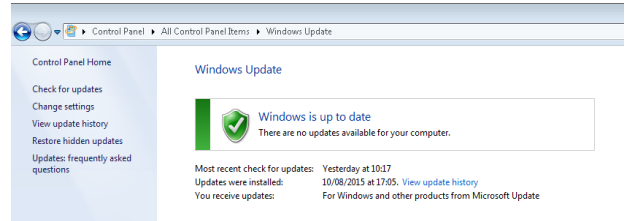


**Windows Update Figure 159**

### 9.4.2 MCU Connection Procedure (Required)

- Users must follow the procedure listed below to correctly mount the MCU to their PC.
- Connection method to PC is product specific: for MDR-644 connect the MCU to the PC using the Brigade USB cable provided as an accessory in the MDR-644 kit. For MDR-641 connect the MCU to the MCU reader (shown in Chapter 3.3.1) then connect the MCU reader to the PC via the Brigade USB cable provided along with the MCU reader. \*(The USB cables are different although have the same blue colour).
- Connect the USB-A (data and power) connector to a USB port on the PC. *Installing Device Driver Figure 160* will be displayed.
- Once *Device Drivers Installed Figure 161* is shown the two drivers and device have installed successfully.
- Users may now open MDR-Dashboard 6.0 and the HDD will now appear.



**Installing Device Driver Figure 160**




**Device Drivers Installed Figure 161**

**Warning:** Premature removal of the MCU USB-A cable from the PC (during driver installation process) will cause this process to fail. This will cause the HDD to not appear in the MDR-Dashboard 6.0.


### 9.4.3 Connection Confirmation

- Open Control Panel.
- Browse to Device and Printers, the device USB to ATA/ATAPI Bridge must be displayed as shown in *Devices and Printers Figure 162* as below.
- View the drivers associated with this device, right click the USB to ATA/ATAPI Bridge icon and browse to Properties.
- *General Properties Figure 163* will be presented which shows General and Hardware information.
- Two drivers must be listed under Hardware information, one that represents the USB interface and one for the HDD. See *Hardware Properties Figure 164*.

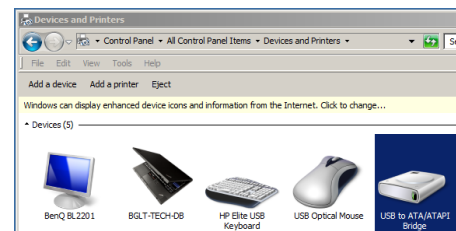


**Devices and Printers Figure 162**

Note: If failure occurs a manual removal of the drivers and a re-start of the PC is required. Please contact Brigade if support is needed.

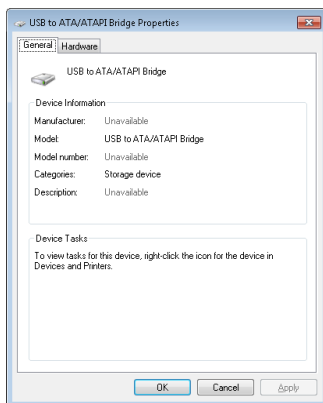


**General Properties Figure 163**

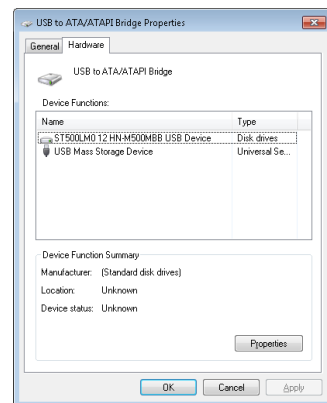

**Hardware Properties Figure 164**

## 9.5 Loading from HDD/SD


- Right-click the MDR-Dashboard 6.0 shortcut and **RUN AS ADMINISTRATOR**.
- The login screen will be displayed as shown in Local Login Figure 165.
- Default username: admin and there's no password, click Sign in.
- **Product Support** button directs to Brigade Support website, users can find video tutorials.
- The software will display a loading screen as shown in Loading Screen Figure 166.

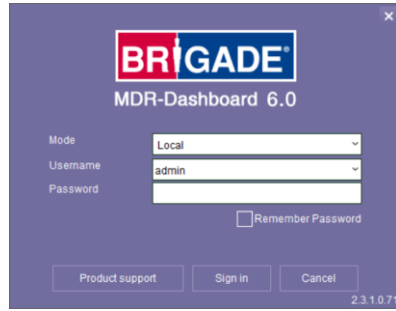

Local Login Figure 165

- This process allows users to load the content of either a connected HDD Caddy (using the USB cable) or a mirror recording from the internal/external SD Card.
- Reading these media storage devices may be slow depending on the amount of data recorded and the speed of the interface.


Note: HDD and SD cards are **not** hot pluggable, doing so may damage the HDD/SD card. To safely remove the storage medium, click on the Safe Removal icon at the bottom right of the Windows™ bar (see Eject Figure 167 and Cancel Format Disk Figure 168).

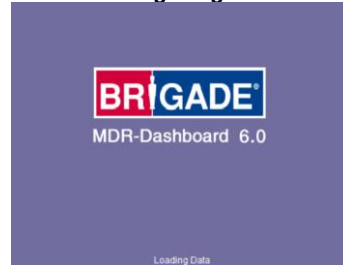


Loading Screen Figure 166

**Warning: After inserting SD cards into a SD card reader, Windows™ may request to format them as shown below (right). Click Cancel. Formatting SD card will delete the data from the SD card.**


- To retrieve data from the HDD, connect the MCU which contains the HDD to the local PC. If the MCU does not power on, then connect both USB-B cables. If MCU still does not power on, then switch to another USB port.
- Once the MCU has powered on,

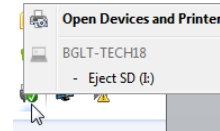


Eject Figure 167

click the refresh icon , the vehicle will appear as green to indicate it is available for browsing.

- The number of MCU's connected to the PC will be displayed under **HDD COUNT**. See HDD Count Figure 169.

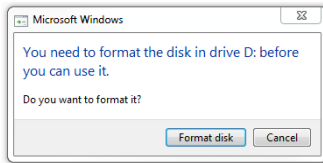


Cancel Format Disk Figure 168




HDD Count Figure 169

Note: If MDR enabled HDD Key feature for either HDD or SD card, when searching for recordings, a window will show up asking for correct HDD Key input, or the search cannot proceed.

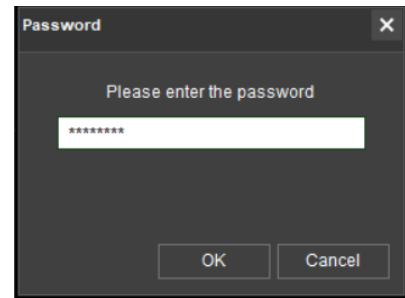

HDD Key Window Figure 170

## 9.6 MDR-Dashboard 6.0 Local Mode

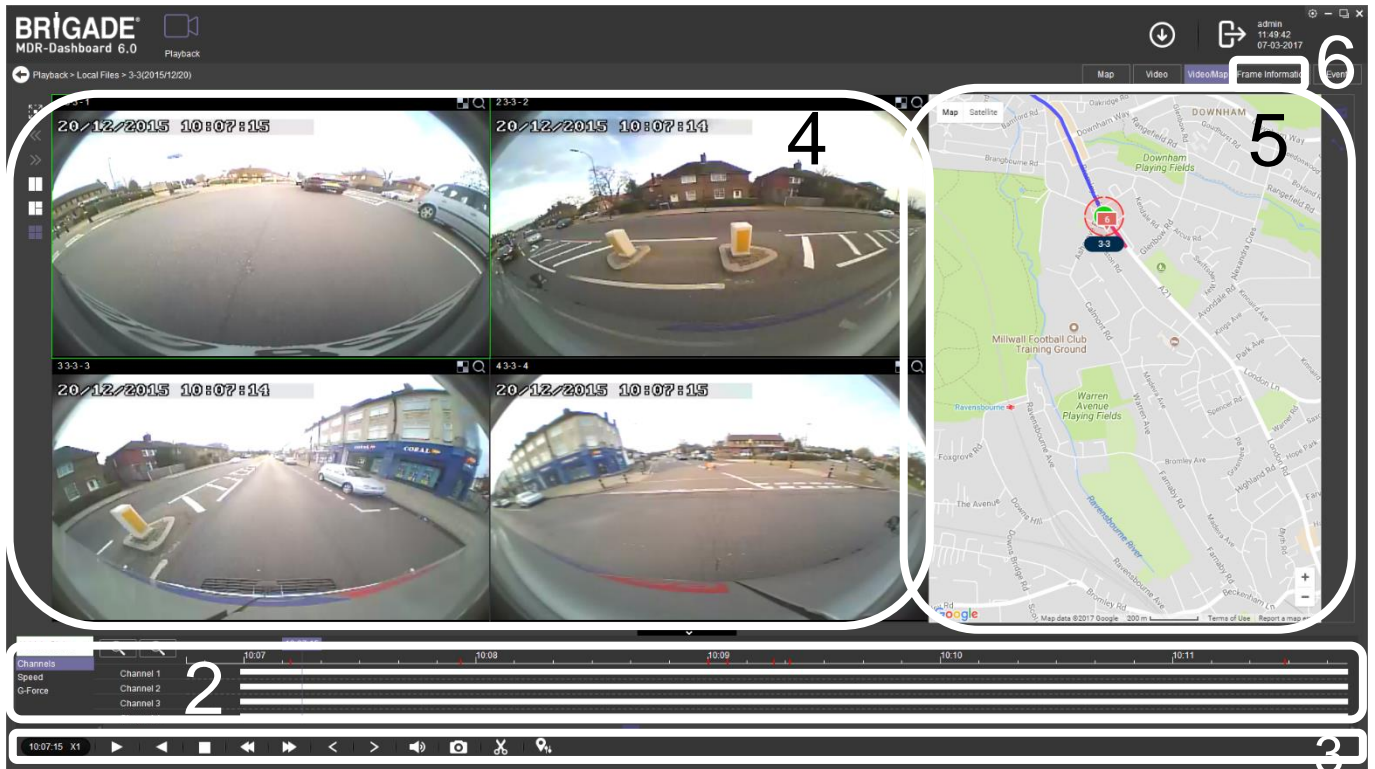


**MDR-Dashboard 6.0 User Interface Figure 171**

The MDR-Dashboard 6.0 user interface is sub-divided into several numbered areas as illustrated in *MDR-Dashboard 6.0 User Interface Figure 171*:

1. Data Source Access (*Data Source Figure 192*)
2. Graphs Panel
3. Controls Panel
4. Media Playback
5. Map
6. Frame Information

All the above areas are explained in greater detail in the following sections. During playback, users can zoom in/out on the timeline by either using the +/- buttons or the mouse scroll wheel. The vertical blue line can be positioned to the desired time by either dragging it or by clicking on the timeline directly.

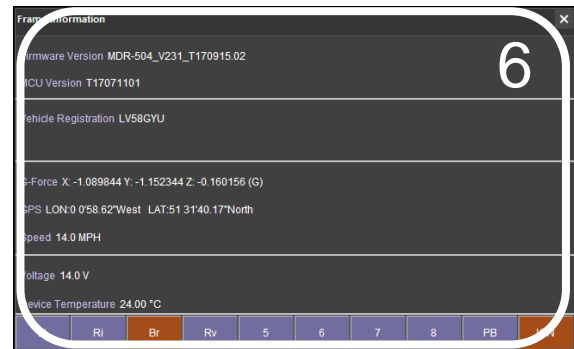



**Frame Information Figure 172**

### 9.6.1 Channel Info

- Information about resolution, frame rate and streaming bit rate are shown in all the 4 or 8 quadrants – only in full screen view (area 4).
- On the top left of each image, users can see the MDR-Dashboard channel number followed by the company number, vehicle registration and MDR channel number. *Channel Information Figure 173* shows: “4 3-3 - 4”.
- Access full screen mode of a single channel by double-clicking the desired channel. Exit a full screen view by double-clicking again.
- Audio playback is limited to one channel at a time, single-clicking a channel will access the audio feed – a green outer box visually confirms the current audio feed being accessed.



**Channel Information Figure 173**

- Each camera channel has two additional features, **BLUR**  and **ZOOM** .
- Users can use blur to create a mosaic setting of an area which will be blurred throughout video playback. See *Creating Mosaic for Blur Figure 174*, *Setting the Blur Area Figure 175* and *Blur Activated Figure 176*.
- **BLUR** can be applied to a channel for a clipping of a video segment. Click the delete button to remove a blur from a channel.
- **ZOOM** is used to create a magnified view of a selected area of a camera channel. Click the magnifying glass and then choose the desired box area. This is now the only area that will be visible during playback. To exit this view, double-click the camera channel. See *Choosing Zoom Area Figure 177* and *Zoom area Figure 178*.



**Creating Mosaic for Blur Figure 174**




**Setting the Blur Area Figure 175**



**Blur Activated Figure 176**



- **ZOOM** cannot be **applied** to a clipping – this feature is for viewing a critical area more closely.
-  is used to **ZOOM** in or out of the time scale. Maximum **ZOOM** in is 5 seconds and minimum **ZOOM** out is 24 hours.






Choosing Zoom Area Figure 177




Zoom area Figure 178

### 9.6.2 Events and Graphs

- Information about events can be viewed by clicking on the **EVENT** button as shown in *Extended View Settings Figure 179*. This will provide a list of all the events.
- Events can also be filtered by clicking on each tab shown in *Event Information Figure 180*. Users may use the arrows to access various tab options. Double-clicking a log in the event list will jump to that point in playback mode.
- OSD settings – the sensor 2-character names are displayed in the event list with brackets. See *Event Information Figure 180*.
- Events can also be ordered based on a user-specific hierarchy. Click on the  (*Event Information Figure 180*) icon to access and change the order. Use the  shown in *Event Hierarchy Figure 181*.




Extended View Settings Figure 179

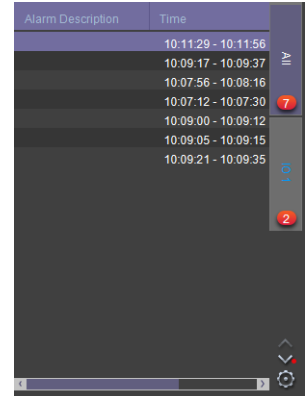



Event Information Figure 180

- See *Event Information Figure 180*. Event information consists of event names, event times and event descriptions (use horizontal scrollbar to view).
- Users can access vehicle information such as
  - Recorded channel data graph based on time
  - Speed graph based on time
  - G-force data graph based on time
- Double-clicking on a graphical point will jump to that time in playback.
- Click the drop-down menu shown in *Graph Options Figure 182* and choose **VEHICLE STATUS**.
- Once the vehicle status sub-menu has been opened as shown in *Vehicle Status Figure 183*, click on the desired option to view the graphical data.

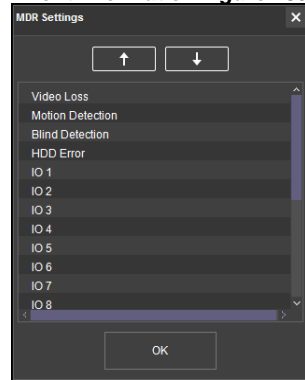


Event Hierarchy Figure 181


- Events are shown clearly using red vertical markers  on all graphs. Hovering over these markers provides users with additional information; see *Channel Graph Figure 185* for an example.

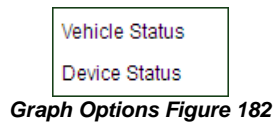

Graph Options Figure 182

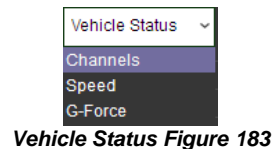


Vehicle Status Figure 183

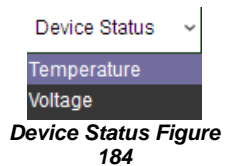


Device Status Figure 184

- White video channel bars represent normal recordings. Orange video channel bars represent alarm recordings.

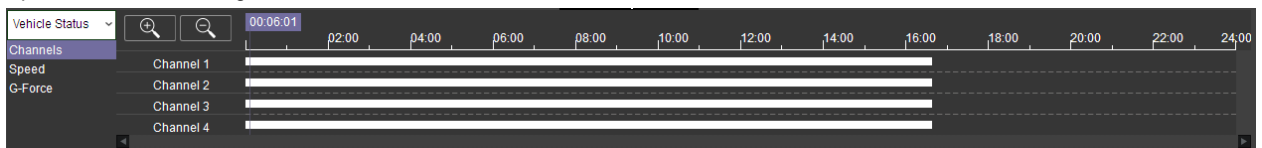

Channel Graph Figure 185

- Users can access device information such as:
  - Device temperature graph based on time – using the built-in temperature sensor
  - Environment graph based on time – not currently supported
  - Voltage graph based on time
- Click the drop-down menu shown in *Graph Options Figure 182* and choose **DEVICE STATUS**.
- Once the device-status sub-menu has been opened as shown in *Device Status Figure 184*, click on the desired option to view the graphical data.
- Wheel rotation speed is currently unused.

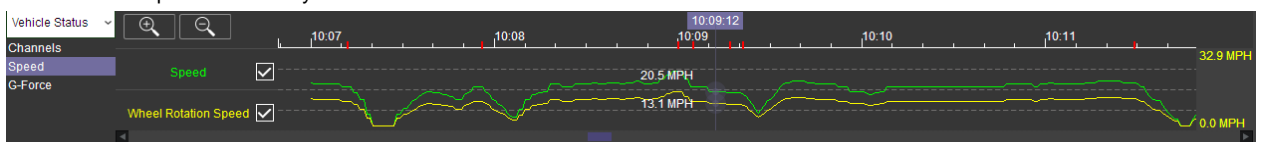


Speed Graph Figure 186

- G-Force is displayed as a triple graph with red, green and yellow lines where each colour represents the X, Y and Z axes respectively.




- These tickboxes can be ticked or unticked depending on the desired graphical information.

- 0.0 MPH The highest and lowest peaks of the current graph area are shown to the right of every graph.

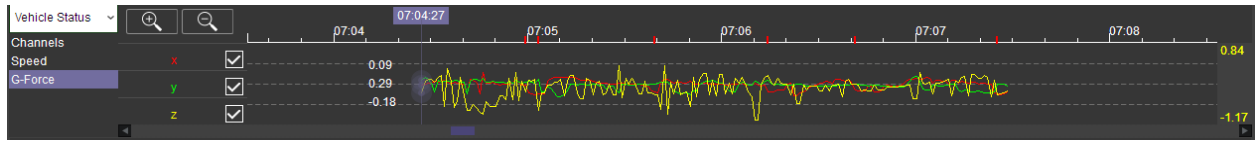

**G-Force Graph Figure 187**

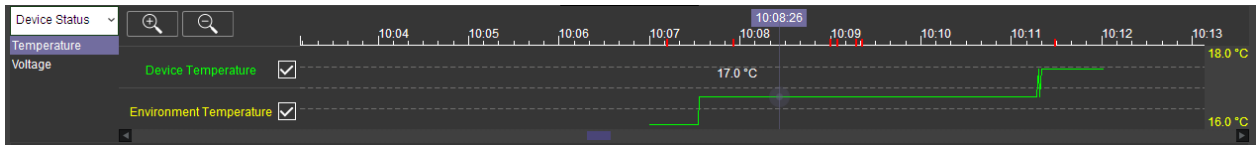


**Temperature Graph Figure 188**

### 9.6.3 Frame Information

The Frame Info panel (*Frame Information Figure 189*) provides information about firmware/MCU version, Register Info, vehicle tracking and vehicle information (temperature and voltage).

**FRAME INFORMATION** consists of:

- Firmware version
- MCU version
- Vehicle Registration
- G-Force
- GPS
- Speed
- Voltage
- Device Temperature

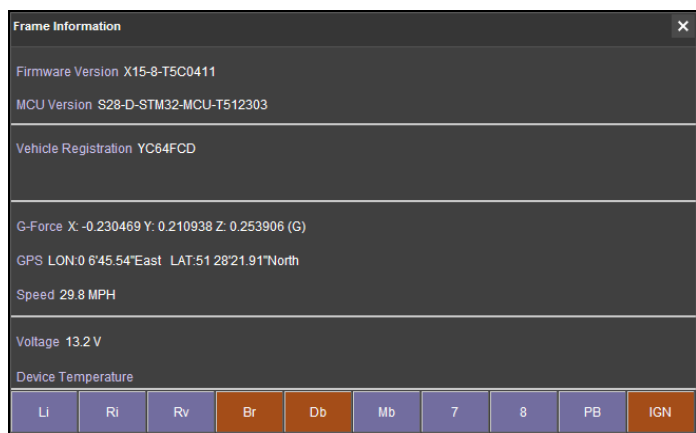

**Frame Information Figure 189**

### 9.6.4 Sensor Status

- The 2-character names are set in the OSD menu where users name each sensor. See *IO Trigger Figure 97* for more information.
- MDR-Dashboard 6.0 displays the status of the sensor triggers at the bottom of the Frame Info (area 6). *Sensor Status Figure 190* shows the ignition (IGN) and the sensor input named Br (Brake) triggered.
- PB (Panic button) and IGN (Ignition) are not configurable.
- By default, your MDR has been set up to show Li (Left Indicator), Ri (Right Indicator), Rv (Reverse camera) and BR (Brake) sensors in the Frame Information.





**Sensor Status Figure 190**


### 9.6.5 Map Tracking

The map (area 5) refreshes the position of the vehicle continuously during playback and displays the vehicle registration. Zooming in and out on the map can be done using the +/- buttons.

- There are two map view settings that can be turned on/off:
- Lock map to vehicle automatically
- Show Line/Hide Line

- Click the Lock Map button  to ensure that the vehicle is always shown in the centre of the map. If this is turned off, then the map can move freely regardless of the vehicle position.


- Click the Line button  which will turn the vehicle route track line on or off depending on this setting. It is advised to have this turned on.
- The red trace indicates the route that has been travelled while the blue represents the route the vehicle will travel. Google Maps Satellite View is also supported.

- A hazard symbol  on the map will show points where an alarm was triggered. If there are multiple alarms in close succession, a box

indicating the number of alarms will be shown on the map . Click on these icons to access additional information about the alarm.

- Video playback will move to the event point if this is clicked on.

Note: As an alternative, MS Bing maps can be chosen. Changing maps requires restarting the MDR-Player 6.0 which will be requested once the setting has been changed.

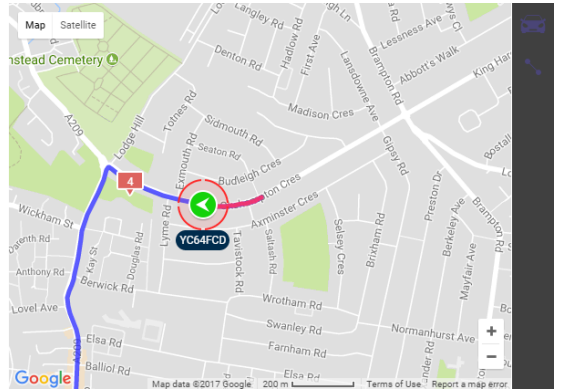


**Map Tracking Figure 191**


### 9.7 Loading from a USB flash drive or Folder


This procedure applies to recordings previously downloaded from the MDR and saved onto a USB flash drive or saved onto a PC.

- To read exported files, click on the Local Files tab found on the Data Source Access (area 1). See *Data Source Figure 192*.

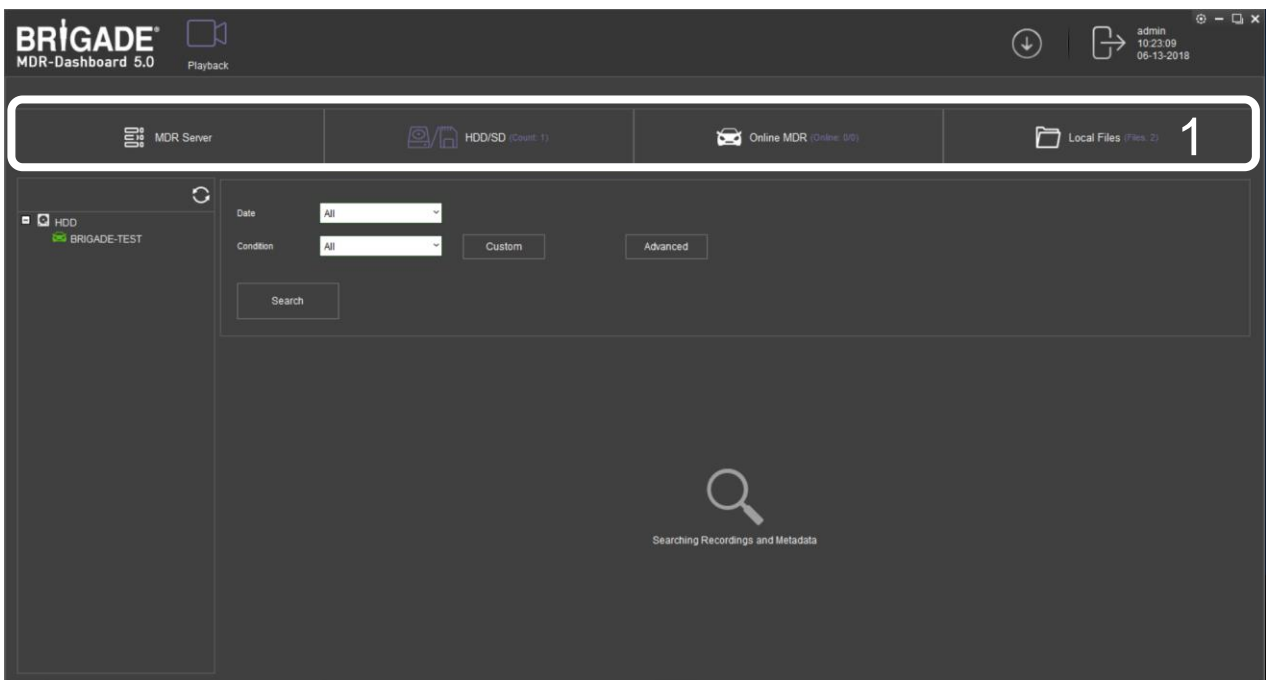


**Data Source Figure 192**


- Users click on the **Local file** tab as shown in *Local Files Tab Figure 193*.
- Click the **ADD** button as shown in *Directory Add Figure 194*. Browse to the relevant folder and click **SELECT FOLDER**.
- This brings up a Windows™ Explorer dialogue box (*Windows Explorer Folder Figure 195*) which allows users to select the folder that contains the recordings. Select the MDR Vehicle name, in this example 3-3.
- Once the folder has been successfully loaded, it will appear as shown in *Clipping Directory Figure 196*.
- If there was a directory specified previously, click the refresh icon  to get the directory to appear. This will be a green icon to indicate it is available for browsing.
- Double-click the vehicle icon. This will display **ALL** calendar events. A typical example of a calendar is shown in *HDD Calendar Figure 200*.
- The directory will now appear in the left pane as shown in *Clipping Directory Figure 196*.
- Multiple directories can be specified. Directories may be searched. See *Directory Search Figure 197*. Custom and Advanced searches can be configured. See *Windows Explorer Folder Figure 195* and *Advanced Search Settings Figure 199*.




**Local Files Tab Figure 193**




**Directory Add Figure 194**

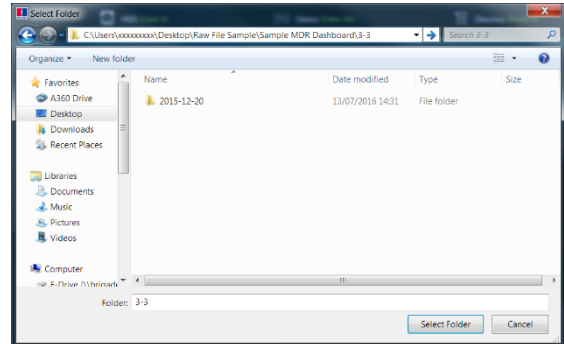


**Windows Explorer Folder Figure 195**

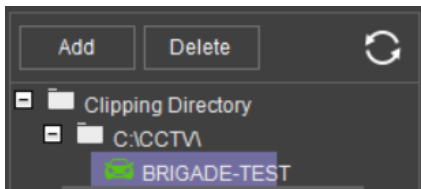


**Clipping Directory Figure 196**

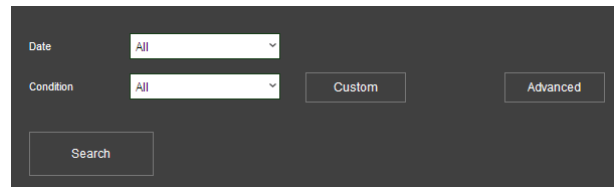

**Directory Search Figure 197**

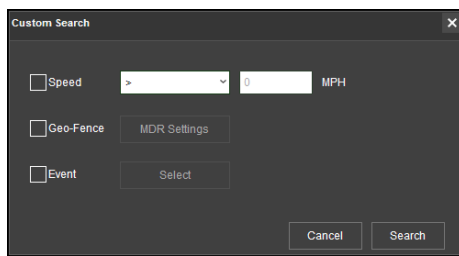


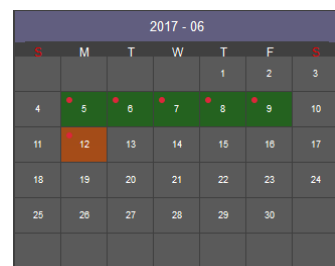
**Custom Search Figure 198**

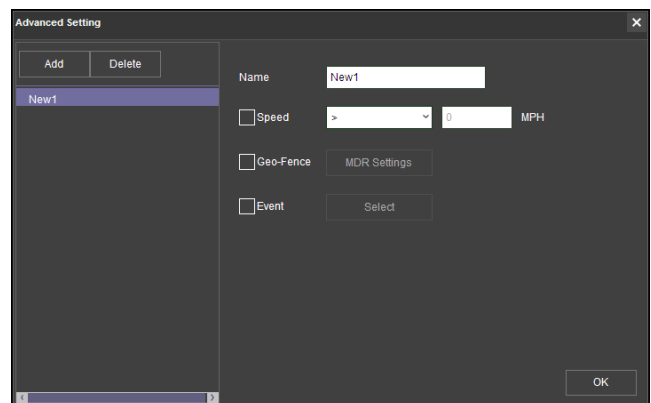


**Advanced Search Settings Figure 199**

## 9.8 Reading Data


- Double-click the vehicle icon . This will display ALL calendar events.
- Each colour represents:
  - Green dates represent normal recordings
  - Orange dates represent alarm recordings
  - Red dots represent metadata data
  - Blue outline represents the current date (today's date)
- Metadata is treated as separate data sets, store 30 recording days maximum (work on calendar dates)
- A typical example of a calendar is shown in *HDD Calendar Figure 200*.
- To refine the data displayed, users should setup the search criteria. Custom and Advanced searches can be created. *HDD Search Figure 201*.
- Ensure that the **DOWNLOAD METADATA** is always ticked. See *Metadata Setting Figure 202*. This will ensure that all metadata (graphical) is shown with playback video.
- Users double-click on the relevant calendar date. This will then display the pre-playback screen. See *Pre-playback Figure 203*. Users can choose which channels to view during playback.




**HDD Calendar Figure 200**

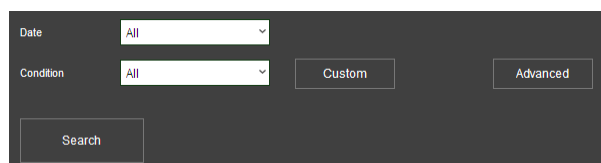

**HDD Search Figure 201**



**Metadata Setting Figure 202**

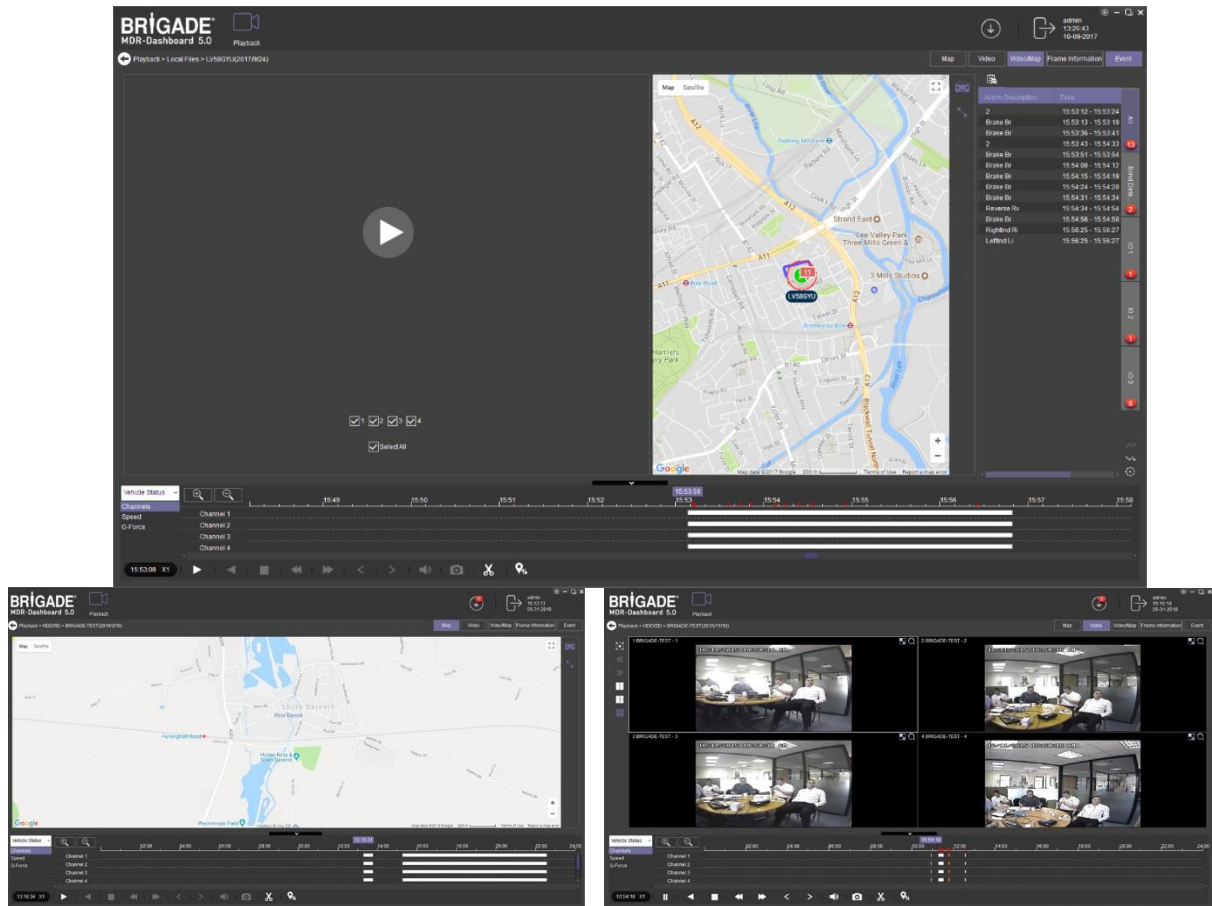



Pre-playback Figure 203

- Users can access different view settings such as **MAP**, **VIDEO** and **VIDEO/MAP**. See View Options Figure 204.
- Frame information and Event information can also be accessed from this panel. To return to the calendar view from the current playback, click the back arrow . See Return to Calendar Figure 205.



View Options Figure 204

- Choose which channels to playback.
- Click the Play button to display the data.



Return to Calendar Figure 205

Current Position of Playback and Playback Speed



Play/Pause

Slow Forward

Previous Frame

Sound Volume

Clip

MDR-Dashboard 6.0 Controls Panel Figure 206


- **Fast Forward** options (1x, 2x, 4x, 8x, 16x, 32x). Maximum **Slow Forward** options are 1/2, 1/4, 1/8, 1/16 and 1/32.
- Double-clicking an individual channel to make it full screen. There are other video viewing options as shown in *Video View Options Figure 207*. This is dependent on model (4 channels or 8 channels).
  - Full Screen
  - Previous Page
  - Next Page
  - Three Windows
  - Four Windows
  - Six Windows
  - 9 Windows




**Video View Options Figure 207**

## 9.9 Exporting Videos

- Click on the **CLIP** button . Only accessible during while video is being played or paused.
- Green clip markers appear (broken vertical lines). See *Clipping a Video Figure 208*.
- Select the start and end time for the clip by dragging and dropping to the desired time, users may also make fine adjustments to the times by typing. See *Clip Settings Figure 209*.
- Once satisfied click on the **OK** button
- The following window will appear to choose the channels, clipping time (when unhappy with the markers) and the kind of exporting function. There are three types of exporting:
  - Standard
  - Export
  - MP4
- The **STANDARD** option cuts the clip and creates a folder structure containing the video files in original proprietary format (H.264 / H.265) onto a local storage device (e.g. HDD).
- All footage needs to be saved in a named folder within C: Drive.
- Note: Users are not allowed to use the same location as the original folder. Once clipped, the files will be found in a folder named with the following format:  
`\\Company_Name-Vehicle_Number\YYYY-MM-DD\record`

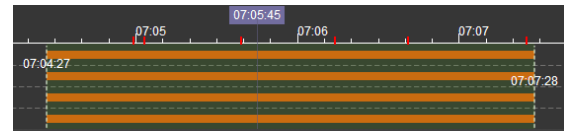


**Clipping a Video Figure 208**

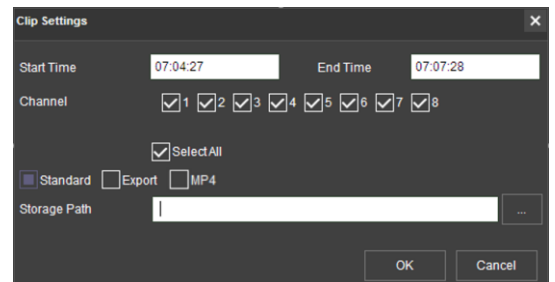

**Clip Settings Figure 209**

- The **EXPORT** option allows users to export clips into a single .exe file with an embedded MDR-Player 6.0. This option is the recommended solution as it contains metadata and the Clip. It is recommended that this be password protected and played without the need of any additional player software. If a password is not created, the file will not be accessible. **Maximum size of the file is 1GB to 1.5GB depending on system.**
- The **MP4** option creates .MP4 files playable by common players such as Windows Media Player (WMP™) and Video Lan Client (VLC). The advantages of this solution are the portability of the format. The disadvantage is the lack of protection and missing metadata. These files can be played and edited by anyone. The only information contained in the video image is selected by the OSD options.
- Users may monitor the progress of current/completed download tasks under in the downloads area. Click the button.
- See *Current Download Tasks Figure 210*. Task priority is a first come first serve basis. If another task has a higher priority, use to stop a task and the to start the priority task. If an error is made, tasks made be deleted using the

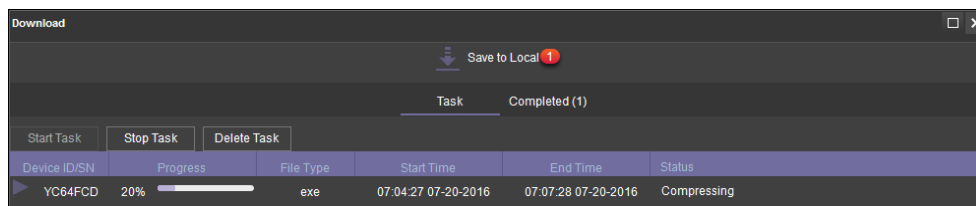


**Current Download Tasks Figure 210**

- Completed tasks automatically move to the Completed tab, see *Completed Download Tasks Figure 211*.
- Right-click a completed task to access a sub-menu as shown in *Completed Sub-menu Figure 212*.


Device ID/SN	Status	Start Time	End Time	File Type	Set Path
00BF000058	Completed	06:22:17 09-24-2021	06:22:27 09-24-2021	264	C:\USERS
00BF000058	Completed	00:00:00 09-24-2021	00:01:00 09-24-2021	exe	C:\USERS


**Completed Download Tasks Figure 211**

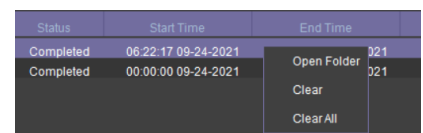


**Completed Sub-menu Figure 212**

## 9.10 Saving Snapshots

- Click the desired channel; this will be highlighted by a green outline.
- Click on the Snapshot button  in the Controls Panel.
- A pop-up window will be displayed on the bottom right corner of the desktop (next to the time/calendar). The snapshot location is also shown here (See *Snapshot pop-up Figure 213*).

- Click on the Snapshot Successful information  to access the **IMAGE FILTER**, this shows all historic locally stored snapshots. See *Snapshot Image Filter Figure 214*.

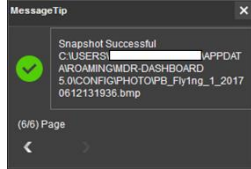


**Snapshot pop-up Figure 213**




**Snapshot Image Filter Figure 214**


## 9.11 User and System settings

- The current logged in username, date (Client PC) and time (Client PC) is displayed. See *User and System Area Figure 215*.




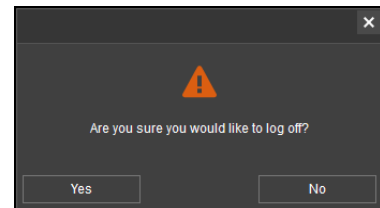
**User and System Area Figure 215**

- This area is used to logout. This is achieved by clicking on the logout icon . This brings up a confirmation window for logging out. Click **YES** or **NO** and thereafter the MDR-Dashboard 6.0 login screen will be displayed. See *Logout Screen Figure 217*.




**MDR-Dashboard 6.0 Settings Menu Figure 216**


- Click on the gear icon  to display a submenu containing **SYSTEM SETTINGS** and **ABOUT** options. See *MDR-Dashboard 6.0 Settings Menu Figure 216*.
- The **ABOUT** option will display the window shown in *About Figure 218*. This will show the current MDR-Dashboard 6.0 version.
- The **Check for Updates** option will take the user to the brigade website where relevant updates can be downloaded.



**Logout Screen Figure 217**

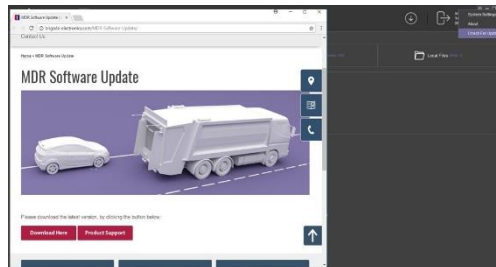


**Check for Updates Figure 192a**

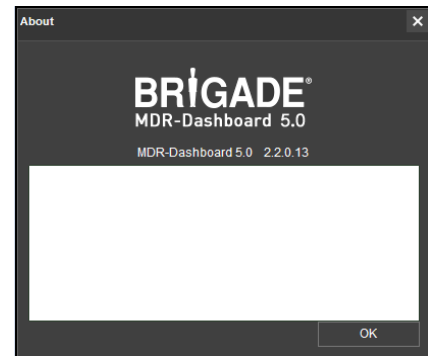

**About Figure 218**


- Refer to the **SYSTEM** window in System Settings Figure 221. This area is used to configure the following:
  - Path for Snapshots
  - Map Type – Google map or OS Map, local mode default set to OS Map
  - Language – English, Spanish, Russian, Portuguese, Polish, Italian, German, French, Dutch available
 Note: If the language can't be displayed properly, please follow steps below for troubleshooting:
  - Install Windows language pack  
Go to Windows Settings-> Time & language-> Region & language->Add a language-> Install the language you want to display
  - Change location  
Go to Control Panel-> Clock and Region-> Region-> Administrative ->Change system locale-> Change to the country/location which speaks the language.
- Speed Unit
- Temperature Unit
- Automatically switches to the main stream – Unused
- Loop Playback Video – this will play the entire selected video on repeat.  
This feature can be used for HDD or directory playback
- Auto-logout – Automatically logout the MDR-Dashboard 6.0 client after certain amount of time.

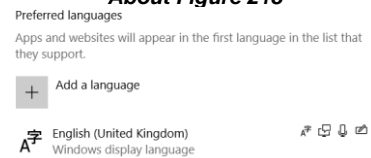

**Install Language Pack Figure 219**


- Auto-Close Video – Automatically stop liveview after certain amount of time, considering save data usage and avoid people accidentally leave the liveview always on.
- Skip Time Duration(seconds) – defines time skip duration when play back local files. User can use keyboard left and right key to forward or backward the time stamp while playing. The default amount is 10
- Alarm Settings Count (Server mode only) – shows the historical alarm and events in the alarm log area. The default amount is 200.
- Alarm Settings Time (Server mode only) – shows the alarm and events for the past time range setting in the alarm log area. The default amount is 30 minutes.

**Note:** Because Russian uses different characters from other languages, if you want to change the software to Russian, please download the Russian language pack from Windows first.

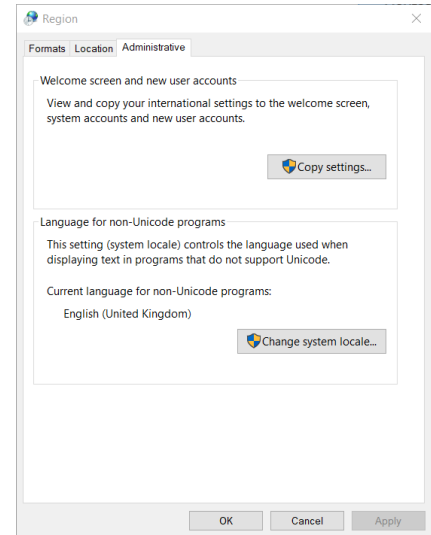


**Change Location Figure 220**


- System Settings is comprised of 2 windows – **System** and **Permission** Settings. System Settings are shown in System Settings Figure 221
- See the **PERMISSION SETTINGS** window shown in *Permission Settings Figure 222*. This area is used to setup local user logins.
- Only the **ADMIN** account can create new local user accounts.
- Any local user accounts are for users that will login using the **SAME PC** but require different levels of access.
- These accounts can be assigned passwords. This is also where the permissions for each local user are set. Passwords should be noted down by each user.

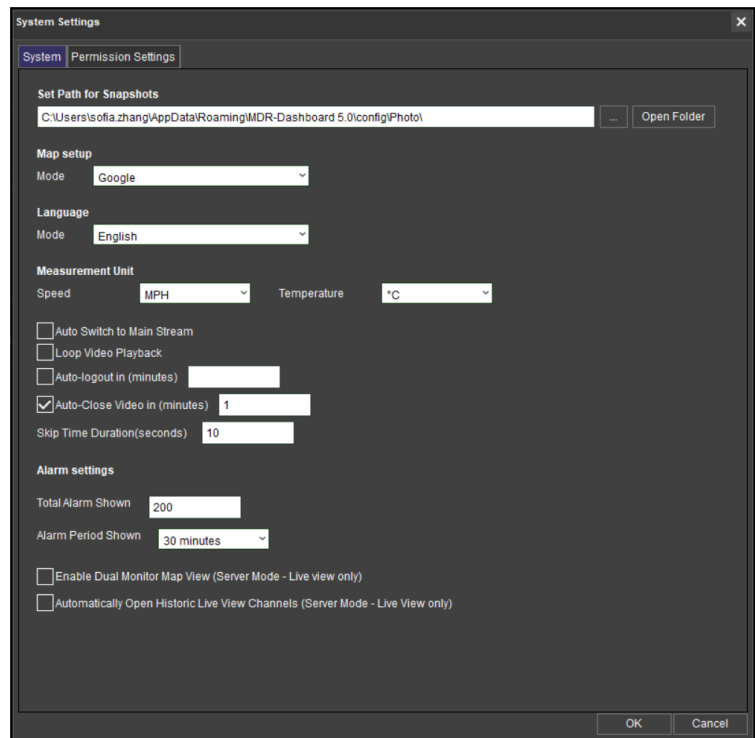

**System Settings Figure 221**

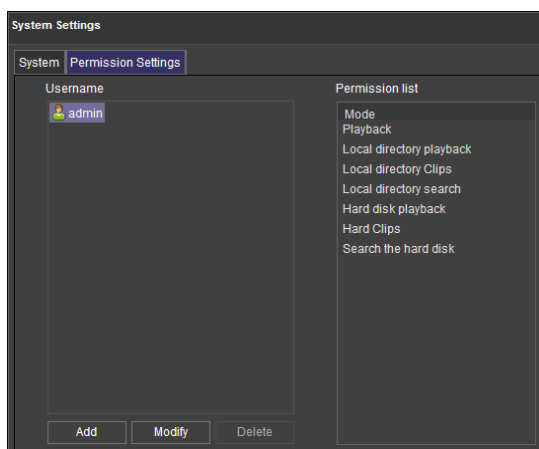

**Permission Settings Figure 222**

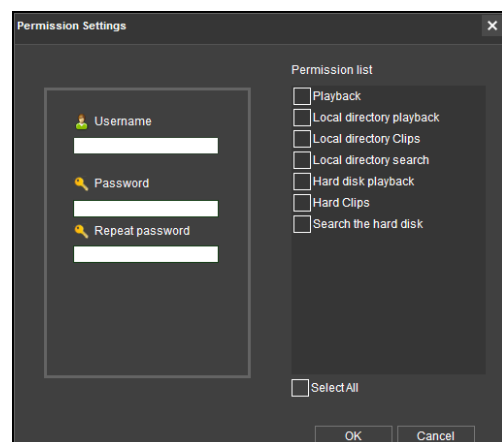

**Adding a Local User Figure 223**

## 10 MDR-Player 6.0

MDR-Player 6.0 is like MDR-Dashboard 6.0 visually and in operation. MDR-Player 6.0 is used mainly to playback executable video files (.exe). The system is compatible with a PC running Microsoft Windows™ 7, 8.x (32-bit or 64-bit version) and 10 operating systems. To understand the key feature differences between the software, please see the Table below:



MDR-Dashboard 6.0 vs MDR-Player 6.0


MDR-DASHBOARD 6.0	MDR-PLAYER 6.0
Installation Required	Direct Executable File
Playback Sources – Server HDD, Local HDD, Local SD Evidence, Remote Device and Directory Playback (Clippings)	Playback Sources – Exported files (password protected .exe) and Directory Playback (Clippings)
Live Mode, Playback Mode and Evidence Mode	Playback Mode
View, Clip and Export Recordings	View Recordings
Choice of Snapshot	Individual Snapshot
View Events and Logs	No option to view events and logs
Channel Blur and Zoom	No Channel Blur and Zoom

10.1 Exported MDR-Player 6.0

- The embedded MDR-Player 6.0 is a single executable file that can be password protected (user choice) which is generated by the MDR-Dashboard 6.0.
- The file contains an exported clip with the MDR-Player 6.0. By double-clicking on the .exe file, the MDR-Player 6.0 is launched and automatically displays the recordings with metadata. See *Exported MDR Icon Figure 224* and *Password Prompt Figure 225*.




Exported MDR Icon Figure 224

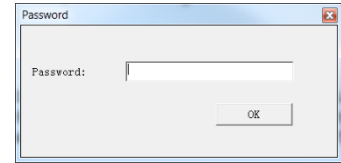

Password Prompt Figure 225

10.2 Setting up MDR-Player 6.0

- MDR-Player 6.0 does not require any installation. If you have already installed MDR Dashboard 6.0, MDR-Player 6.0 can be accessed in the start-up menu or via a shortcut found on the desktop.
- See *MDR-Player 6.0 Icon Figure 226*. Double click on the Brigade logo named MDR-Player 6.0 to start the program.

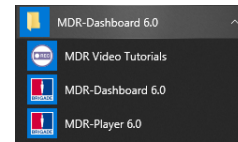


MDR-Player 6.0 Icon Figure 226

10.3 Basic Operations

MDR-Player 6.0 allows three ways of loading the data:

- From a clip with embedded MDR-Player 6.0 (as explained in section 10.1)
- Opening a file

Users may access the following information using the dropdown menu. See *Vehicle Status Figure 227*:

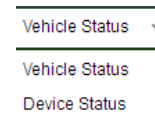


Vehicle Status Figure 227

- Channel
- Speed
- G-Force
- Temperature
- Voltage

The following interface will appear as shown below. *MDR-Player 6.0 Figure 228* illustrates a multiple camera view, a timeline with control buttons and a Google Maps view.

Note: To use the maps feature, an internet connection is required.

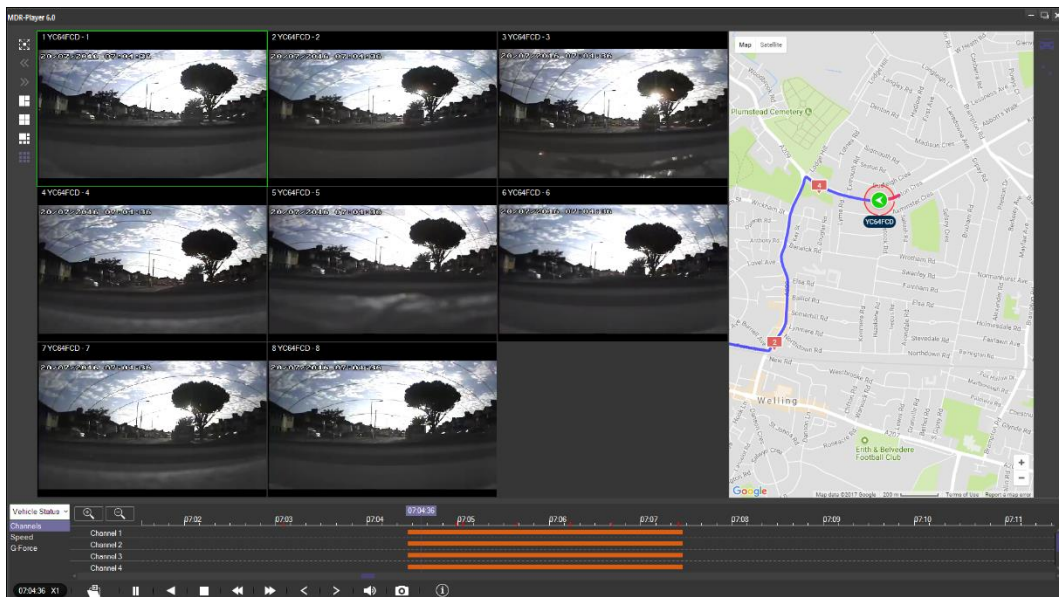


MDR-Player 6.0 Figure 228


The toolbar (*MDR-Player 6.0 Controls Panel Figure 229*) has the following options:


- Open File

- Pause
- Rewind
- Stop
- Slow Forward (x1/2 or x1/4)
- Fast Forward (x2 or x4)
- Previous Frame
- Next Frame
- Sound
- Snapshot – takes a screenshot of the selected channel which are stored in C:\Users\- Frame Information

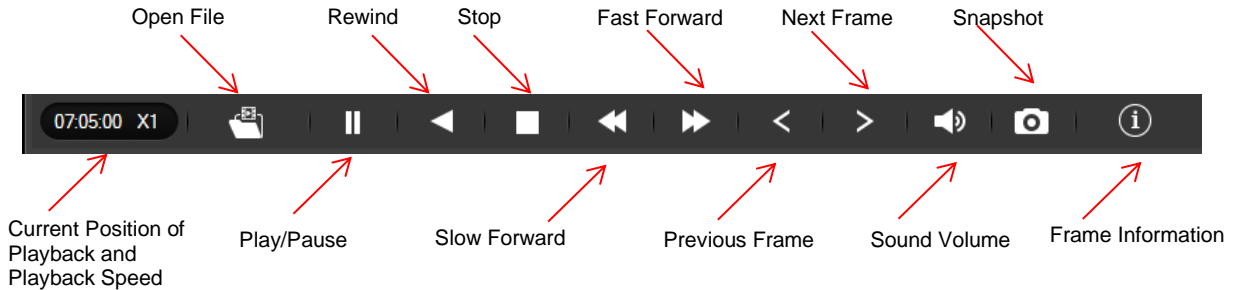


**MDR-Player 6.0 Controls Panel Figure 229**

To access local clippings (H.264) click the **OPEN FILE** icon . Selecting **Open File** (*Open File Figure 230*), a Windows™ Explorer browsing dialogue is displayed. Navigate to the folder where the **.h264 native files** are. If users select the file for one single channel, MDR-Player 6.0 will automatically load the other channels (if present) corresponding to the same time frame.

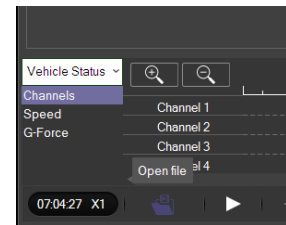


**Open File Figure 230**

Clippings (H.264 files) created with previous version MDR-Dashboard 1.0 can only be played with MDR-Player 1.0. Clippings created with MDR-Dashboard 6.0 can only be played using MDR-Player 6.0. Selecting **Open File** requires users to browse and select a **folder by date** as illustrated (*File Browser Figure 231*).

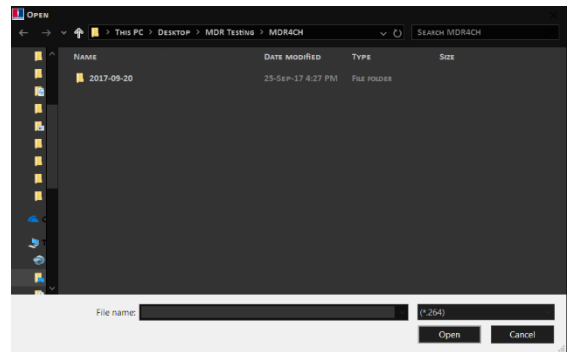


**File Browser Figure 231**


Once the data has loaded, users can play the videos. Double clicking on a single channel image would trigger this channel into full screen. Audio playback from channel 1 is played when multiple channels are displayed. Users can select a different audio source by single clicking another channel image. During playback, users can zoom in/out on the timeline by either using the +/- button or by using the mouse scroll wheel.

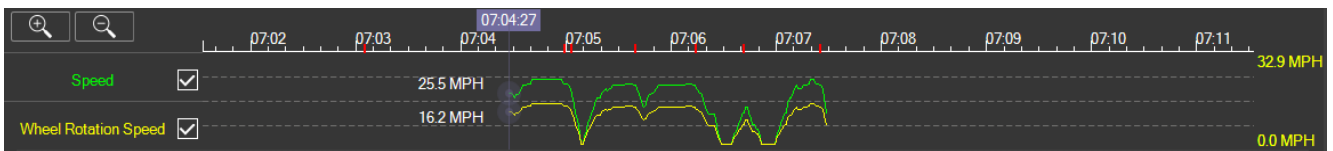


**Speed Graph Figure 232**

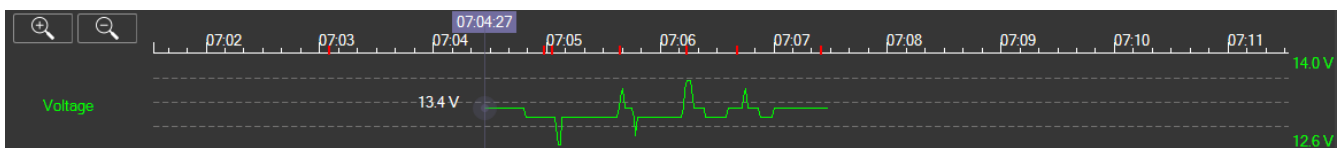


**Voltage Graph Figure 233**

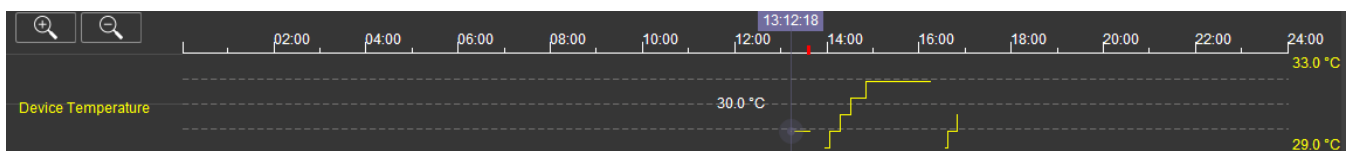

**Temperature Graph Figure 234**

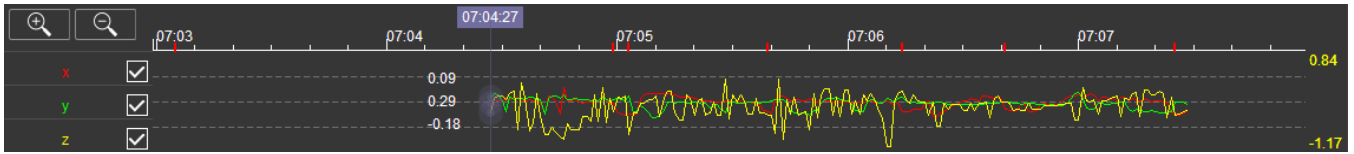

**G-Force Graph Figure 235**

Use the  icon to access frame information. Information such as sensor trigger status, GPS location, Firmware/MCU and video recording parameters are displayed (*Frame Information Figure 161*).

Firmware and MCU Versions

GPS Location

**Frame Information**

Firmware Version X15-8-T5C0411

MCU Version S28-D-STM32-MCU-T512303

---

Vehicle Registration YC64FCD

---

G-Force X: -0.171875 Y: 0.253906 Z: 0.292969 (G)

GPS LON: 0 6°46.15'East LAT: 51 28'21.67"North

Speed 30.5 MPH

---

Voltage 13.2 V

Device Temperature

Li	Rt	Rv	Br	Db	Mb	7	8	PB	IGN
----	----	----	----	----	----	---	---	----	-----



Trigger Status e.g., **Br** (Brake Trigger)

**Frame Information Figure 236**


In the maps (below) tracking information refreshes continuously while playing and displays the vehicle registration. Zooming in and out on the map can be done using the +/- buttons; or by using the mouse scroll wheel.

Note: The Hand tool allows users to move the map, but the image is periodically refreshed to keep the vehicle in the centre of the map. The red trace indicates the route that has been travelled while the blue represents the route ahead. Google Maps Satellite is also supported on the MDR-Player 6.0.

The map area has two options when viewing GPS data. When the icons are green, this implies that this feature is active.

- Lock map to vehicle automatically . This means that the vehicle will be centred in the map and users will be unable to move the map freely.
- Show Line/Hide Line  is used to show the tracking data of the vehicle's route.

There are also **zoom in** and **zoom out** buttons located on the bottom right of the map. 

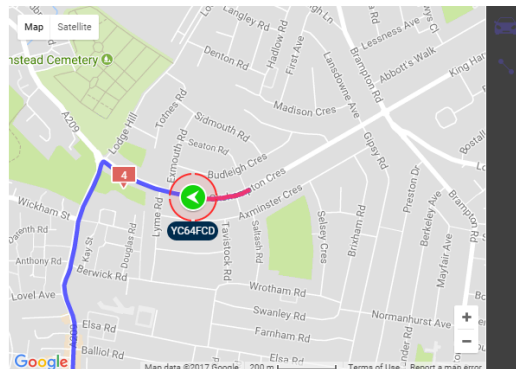

**MDR-Player 6.0 Map Figure 237**

# 11 Advanced Ethernet Configurations

This section is dedicated to an advanced feature for individuals with networking knowledge which enables users to:

- Live View of Cameras
- Playback and download of recordings
- View and download of logs
- Configure MDR unit settings

This feature is not recommended for field operations, diagnosis and configuration.

**Warning:** The web interface menu below does not match the OSD menu found on the MDR. Terminology may differ but the same settings can be found.

**Warning:** To achieve full functionality (snapshots, downloads, live view etc.) open Internet Explorer by running as Administrator for Windows 8 and Windows 10 operating systems.

Note: The configuration requires a Cat5e cable, a Microsoft Windows™ Operating system; a PC with an Ethernet RJ45 port and a wireless adapter with Internet Access (may be needed to download the plugin).

**Warning:** Playback, Live view and Maintenance features are dependent on your Internet Explorer version.




Internet Explorer Version Figure 238


## 11.1 Ethernet Setup

- Connect an Ethernet cable to the PC and Ethernet LAN port on the back of the MDR.
- The following steps apply to PCs running Windows 7 upwards. Before making changes to the PC's network settings, ensure all work is saved.
- Local Area Connection Properties Figure 239 shows the network configuration window. This dialog may be accessed by right clicking on "Open Network and

Sharing Centre" on the desktop. Select the appropriate network interface by double clicking.

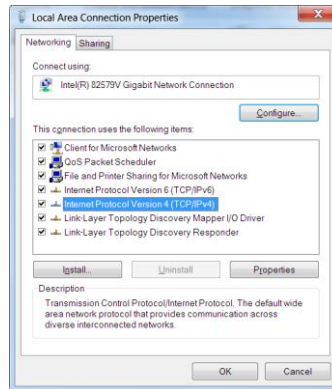

Local Area Connection Properties Figure 239

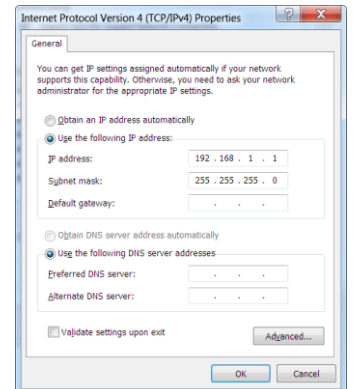


Internet Protocol Version 4 Figure 240

- Select the "Internet Protocol Version 4 (TCP/IPv4)" item and click "Properties". Internet Protocol Version 4 Figure 240 is displayed; an IP address should be entered in this box; 192.168.1.1 is shown in the example. (This address is on the same subnet as the MDR, which has a default IP address of 192.168.1.100).
- To locate the MDR IP, log into the MDR menu, go to Basic Setup → Ethernet and check the IP address.
- To change, type the new IP address and click save.



MDR Network Settings Figure 241

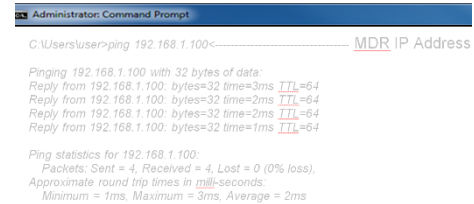


Results from Command Prompt Figure 242

- To test the PC connection to the MDR, open the Command prompt by typing cmd within the start-up menu. Ping the MDR IP address by typing ping 192.168.1.100. These results are shown in Results from Command Prompt Figure 242.
- Open an Internet Explorer web page and type the following http://192.168.1.100. A pop-up window will appear in Internet Explorer requesting permission to allow the installation/running of a plugin "N9M\_ACTIVEX". See Plugin Pop-up Figure 244.
- Allow the plugin and its installation.
- After the plugin is successfully installed, the login window (Web User Login Figure 245) will appear.
- Enter the appropriate password (same as MDR unit login) to grant the correct permissions, and then click LOGIN.




Internet Explorer Web Address Figure 243



Plugin Pop-up Figure 244

Note: If MDR unit password is disabled, click LOGIN after entering a username only.

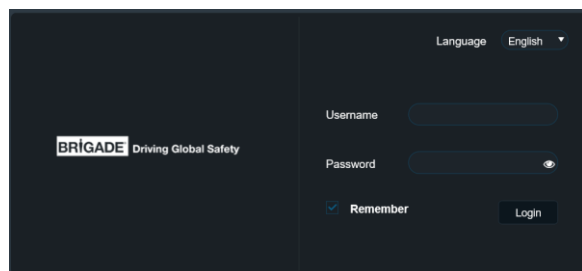

Web User Login Figure 245

## 11.2 Ethernet Operation

- Once logged in, 5 tabs will be displayed as follows: **PLAYBACK; LIVE VIEW; MAINTENANCE; LOG** and **SETUP**. See *Web Application Manager Figure 246*.
- PLAYBACK tab allows users to view and download recordings.
- Live view tab allows users to view the live cameras.
- MAINTENANCE shows you basic information, device module information, storage device information and version information.
- LOG is used to display and export logs.
- Setup is used to configure MDR settings such as basic setup, surveillance, events and alarms.
- PLAYBACK tab allows users to view and play recordings. Users can SEARCH by date, type, time, channel and the source of the recording.
- Clicking various calendar dates will automatically load video data in the timeline.
- Snaps are saved in the following path (Default):  
C:\Users\Administrator\NVR\192.XXX.XXX.XXX\CAPTURE\CHXX

**Note:** Please use admin account to operate, also use admin authority to open the IE web browser (right click run as administrator), or snaps will be saved in a Windows temp folder called:

C:\Users\XXXXX\AppData\Local\Microsoft\Windows\NetCache\Virtualized\C\Users\XXXXX\NVR\XXX.XXX.XXX.XXX\CAPTURE. This folder is invisible most of the time. Please follow online instructions to unhide those folders as needed.

- See the toolbar and the view options shown below:




**Playback Toolbar Figure 247**



**Playback View Options Figure 248**


- PLAYBACK will also show a record list based on your search which can be downloaded. You can access this by clicking on Record List found below the Search button.
- Tick which channels you would like to download then click Backup.
- Then a pop-up window will ask for that data type.
- Proprietary and AVI data is stored in the following path (Default):  
C:\Users\Administrator\NVR\192.168.1.100\BACKUP

**Note:** Please use computer admin profile to operate, also use admin authority to open the IE web browser (right click run as administrator)

- Live view is used to view live cameras. Audio is also accessible. The green outline indicates which channel's audio is playing.
- See view options below. Snaps are saved in the same path as above. Each channel settings can be adjusted individually such as brightness, colour, contrast and saturation using .
- You can switch between main stream and sub stream using options in *Live Stream Options Figure 253*.



**Live View Options Figure 251**




**Live Channel View Settings Figure 252**




**Live Stream Options Figure 253**




**Web Application Manager Figure 246**

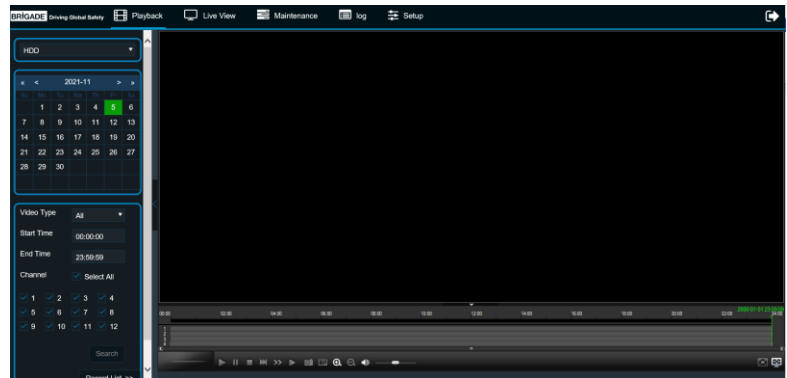

**Playback Figure 249**

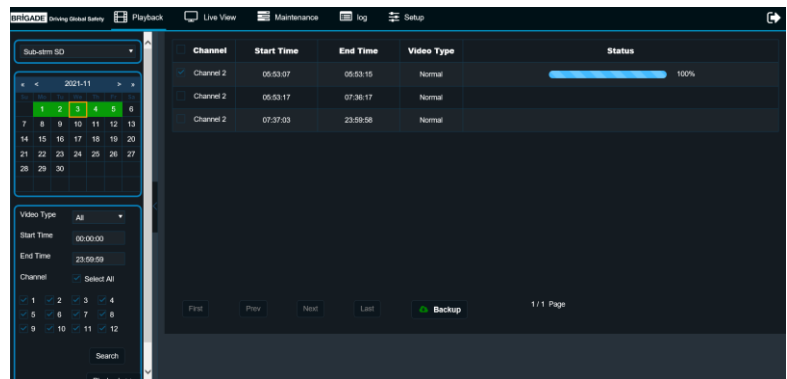


**Record List Figure 250**

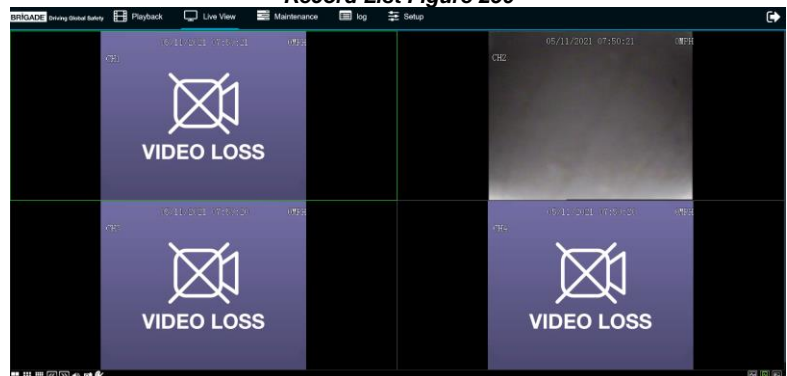

**Live View Figure 254**


### 11.3 Ethernet Maintenance

- Version Information displays firmware version, MCU version, IP camera firmware version, mobile network module firmware and Algorithm version (which is not in use currently).
- Device module displays information with regards to the mobile network, Wi-Fi and GPS module. See below:

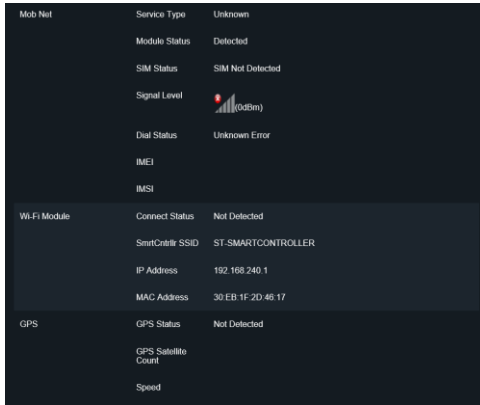


Ethernet Module Information Figure 255

- Storage Device** is used for varied features. It shows all storage devices, HDD, SD(Internal), SD(FPB) and FRONT USB. The free/total capacities are displayed.
- You can format a chosen storage device by clicking . See below for format confirmation window.
- Under the **Local Storage** section, you define the path used for snaps and video backups. By default, this is set to: C:\Users\Administrator\NVR\



Ethernet Format Confirmation Figure 257


- Environment** shows the device voltage, device temperature and ignition status. This is aligned with MDR OSD.
- Server Status** shows current configured server connection status. This is aligned with MDR OSD.
- Configuration** files can be exported or imported. Once you click export an Internet Explorer prompt will ask to save the file.
- Importing a configuration file, requires you to have a config file already stored locally and this is then sent to the MDR.
- Upgrade** support upgrade MDR FWM and Restart the unit. (R-Watch Upgrade is not in use)

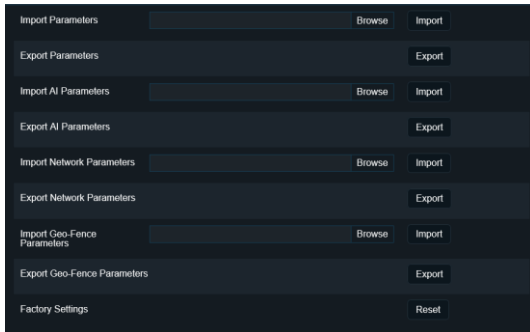


Ethernet Config Figure 259



Ethernet Version Information Figure 256

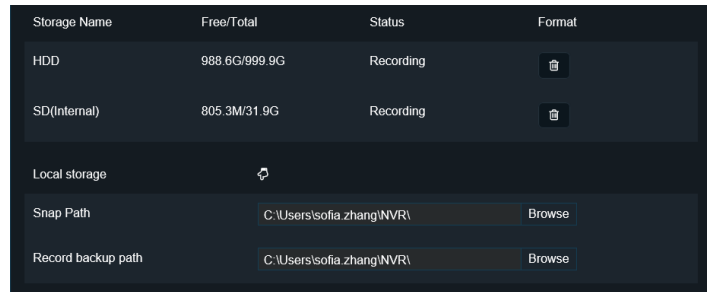


Ethernet Storage Devices Figure 258

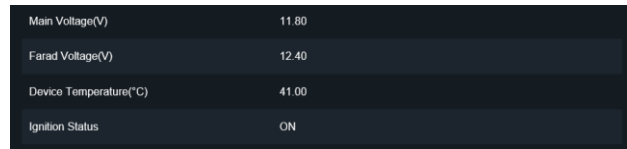

Ethernet Environment Figure 260




Ethernet Server Status Figure 261

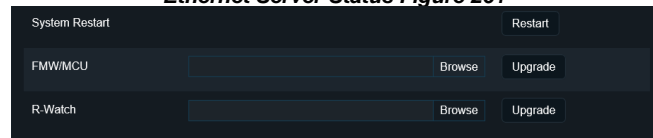

Ethernet Upgrade Figure 262

## 11.4 Ethernet Log

- Log is used to search, display and export logs from the MDR.
- Logs can be alarm logs, operation logs or locked logs.
- Alarm logs can be filtered further by type such as: IO, Panic, Speed, Video Loss, Blind detection, Motion detection, G-Force and Geo-Fence.
- Search results are displayed below containing information such as type, date, time and details.
- Exporting log files is done by clicking Export, this will then show an Internet Explorer prompt as shown below. Click Save. By default, this will save to the following path: C:\Users\Administrator\Downloads
- Exports are stored as .txt files which can be opened by a text editor such as Notepad™.

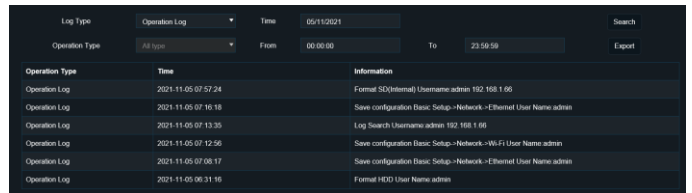

**Ethernet Logs Figure 264**



**Ethernet Log File Figure 263**

## 11.5 Ethernet Configuration

Ethernet configuration is a web version of the OSD map found on the MDR. Please refer to Chapter 5 Setup for further details. Ensure you click save after each change to ensure this gets sent to the MDR.







## 12 On-screen Display Map

**Note:** *GREEN ARIAL BLACK ITALICS* represents default settings

*Lucida Handwriting Font* represents mobile network and/or Wi-Fi menu options

### 12.1 Rec Search

#### 12.1.1 Rec Search

Rec Search	
TITLE	OPTION No 1
Source	<b>HDD</b>
 Drop down option	Sub-strm SD (not available for MDR 641 Series)
	Main Strm SD (Not available for MDR 641 Series)
Month (XXX)	 
Year (XXXX)	 
Date	Choose on calendar view (Orange) 
Next	----->

Search Options	
TITLE	OPTION No 1
Video Type	<b>ALL</b>
	Normal
	Alarm
	Lock
Channel	<b>AVAILABLE INDIVIDUAL</b>
	1-4 group
	5-8 group
	9-12 group
Search	----->

Search Options	
TITLE	OPTION No 1
	----->

Zoom Out			
Zoom In			
Earlier in day			
Later in day			
Channel options	<b>AVAILABLE INDIVIDUAL</b>		
Playback Start Time	Choose time using number pad		
Export	Back		
	Start time	XX.XX.XX	
	End time	XX.XX.XX	
	Cancel		
	Export ----->	<b>PROPRIETARY DATA</b>	Export Time
	AVI Data	File Size	
Playback (During Playback right-click removes OSD from view)	Show/Hide Volume menu		Remaining/Total
	Choose time using number pad		
	Volume Increase		
	Volume Decrease		
	Mute Volume		
	Next Channel		
	Previous Channel		
	Rewind x2 x4 x8 x16		
	Play / Pause		
	Fast Forward x2 x4 x8 x16		
	Slow Forward 1/2 1/4 1/8 1/16		
	Step		
	Back		

## 12.2 SYSTEM INFO ①

### 12.2.1 Version Info ②


Version Info	
TITLE	OPTION No 1
Device Name	MDR-644 Series / MDR-641 Series
Serial Num <sup>?</sup>	<b>XXXXXXXXXX (10 characters)</b>
MAC Address	<b>XX:XX:XX:XX:XX:XX (12 characters)</b>
Firmware Version	XXXXXXXXXXXX
MCU Version	MDRXXXXXXXXXX

### 12.2.2 Modules ③


#### 12.2.2.1 Mob Net

<i>Mob-Net</i>
----------------



<u>TITLE</u>	<u>OPTION No 1</u>
Connection Type	GPRS/EDGE
	CDMA
	EVDO
	WCDMA
	TDSCDMA
	FDD
	TDD
Module Status (Physical State)	EC25 Not Detected
SIM Status (Physical State)	SIM Detected
	SIM Not Detected
	SIM Available
	SIM Not Available
	SIM Busy
Dial Status	Dialled Up
	Failed Dial Up
	DIAL UNKNOWN ERROR
Signal Level	 (XXdBm)
IP Address	XXX.XXX.XXX.XXX
IMEI	XXXXXXXXXXXXXXXXXX (15 characters)
IMSI	XXXXXXXXXXXXXXXXXX (15 characters)



#### 12.2.2.2 Wi-Fi

<u>Wi-Fi</u>	
<u>TITLE</u>	<u>OPTION No 1</u>
Built-in Wi-Fi Status (Physical State)	Detected
	Not Detected
	Connecting
	Connection Failed
	Connected
	Obtaining IP Address (DHCP)
Signal Level	
IP Address	XXX.XXX.XXX.XXX
MAC Address	XX:XX:XX:XX:XX:XX (12 characters)
SmrtCntrlr Wi-Fi Status	Detected
	Not Detected
SmrtCntrlr SSID	Unique ID
SmrtCntrlr IP Address	XXX.XXX.XXX.XXX
SmrtCntrlr MAC Address	XX:XX:XX:XX:XX:XX (12 characters)

#### 12.2.2.3 GPS

<u>GPS</u>	
<u>TITLE</u>	<u>OPTION No 1</u>
GPS Status (Physical State)	Detected
	Not Detected
	No GPS Module
GPS Satellite Count	1 - 24
Speed	MPH/ KM/H

#### 12.2.3 Server Status

<u>Centre Server #</u>	
<u>TITLE</u>	<u>OPTION No 1 (up to 8 using   buttons)</u>
Server Status	<b>UNCONNECTED</b>
	Connected
Network Type	<b>Mob Net</b>
	Wi-Fi
	Ethernet
	Auto-adapt

Server Protocol Type	<b>MDR6</b>
Server IP Address	XXX.XXX.XXX.XXX
Port	XXXXX (usually 5 characters, depends on port specification)

### 12.2.4 Environment

Environment	
TITLE	OPTION No 1
Voltage (V)	XX.XX
Device Temperature (°C)	XX.XX
HDD Heater Status	Off
	On
Ignition Status	Off
	On

### 12.2.5 Storage

Storage	
TITLE	OPTION No 1
Storage Type	HDD
	SD (Internal)
	SD (FPB)
	FRONT USB
Status	Recording
	Normal
	Failed
Free/Total (in Megabytes, Gigabytes or Terabytes)	XXX.X/XXX.XG
Remain Time (in Days/Hours/Minutes)	X.X

### 12.2.6 History

History	
TITLE	OPTION No 1
Highest Speed	xx MPH/KM/H, dd/mm/yyyy, hh:mm:ss
Total Mileage	xxxx.xxxx MILE / KM
Lowest Voltage	xx.xV, dd/mm/yyyy, hh:mm:ss
Highest Voltage	x.xV, dd/mm/yyyy, hh:mm:ss
Lowest Temperature	xx.x F/C, dd/mm/yyyy, hh:mm:ss
Highest Temperature	xx.x F/C, dd/mm/yyyy, hh:mm:ss
Highest Information Clean	

### 12.3 LOG SEARCH

Log Search			
TITLE	OPTION No 1		
Month			
Year			
Date	Choose on calendar view (Orange) 		
Next	Start Time	hh:mm:ss	Using Number Pad.
	End Time	hh:mm:ss	
Search-→	Log Type	<b>OPERATION LOG</b>	Alarm Type---→
		Alarm Log---→	
	Locked Log		IO Alarm
			Panic Button
			Speed Alarm
			Video Loss

Motion
G-Force
Blind Detection
Geo-Fence
AI Alarm

## 12.4 SETUP <sup>⚙</sup>

### 12.4.1 Basic Setup <sup>📄</sup>

#### 12.4.1.1 Reg Info

##### 12.4.1.1.1 Vehicle Info

Vehicle Info	
TITLE	OPTION No 1
Vehicle Reg <a href="#">(Shows on MDR-Dashboard)</a>	XXXXXXXXXX (10 characters)
Vehicle Num <a href="#">(Shows on MDR-Dashboard)</a>	XXXXXXXXXX (10 characters)

##### 12.4.1.1.2 Driver Info

Driver Info	
TITLE	OPTION No 1
Driver Number <a href="#">(Not Shown in MDR-Dashboard)</a>	XXXXXXXXXX (10 characters)
Driver Name <a href="#">(MDR-Dashboard Evidence Area)</a>	XXXXXXXXXX (10 characters)

##### 12.4.1.1.3 Company Info

Company Info	
TITLE	OPTION No 1
Company Name <a href="#">(Shows on MDR-Dashboard)</a>	XXXXXXXXXXXXXXXXXXXX (16 characters)
Company Branch <a href="#">(Shows on MDR-Dashboard)</a>	XXXXXXXXXX (8 characters)

#### 12.4.1.2 Time Setup

##### 12.4.1.2.1 General



General	
TITLE	OPTION No 1
Date Format	<b>DAY/MONTH/YEAR</b>
	MONTH/DAY/YEAR
	YEAR-MONTH-DAY
Time Format	<b>24 HOURS</b>
	12 Hours
Time Zone	<b>(GMT) DUBLIN, EDINBURGH, LONDON</b>  (GMT/±HH:MM) "City[Cities]"

##### 12.4.1.2.2 Time Sync

Time Sync	
TITLE	OPTION No 1
Date/Time	Choose from calendar
	Use numpad to enter time
GPS	<b>ENABLED</b>
	Disabled
NTP sync <sup>?</sup>	Enabled ----->
	<b>DISABLED</b>
	time.nist.gov
Center Server	time.windows.com
	time.nw.nist.gov
	time-a.nist.gov
	time-b.nist.gov
	User-Defined----->
	Alpha-numeric keypad
	12.4.1.2.3 32 Character limit



##### 12.4.1.2.4 DST

DST	
TITLE	OPTION No 1
Enable	<b>ENABLED</b> ----->
	Disabled
	Start
	<b>MAR.</b> Choose Calendar Month = XXX
	1 <sup>ST</sup> ; 2 <sup>ND</sup> ; 3 <sup>RD</sup> ; 4 <sup>TH</sup> ; <b>LAST</b>
	<b>SUNDAY</b> Choose Day of Week

End		<b>02:00:00</b> Choose time hh:mm:ss
		<b>OCT.</b> Choose Calendar Month = XXX
		1 <sup>st</sup> , 2 <sup>nd</sup> , 3 <sup>rd</sup> , 4 <sup>th</sup> , <b>LAST</b>
		<b>SUNDAY</b> Choose Day of Week
		<b>02:00:00</b> Choose time hh:mm:ss

12.4.1.3 Power

12.4.1.3.1 On/Off

On/Off		OPTION No 1	
TITLE			
On/Off Mode <sup>?</sup>	<b>IGNITION</b>		
	Timer ----->	Timer From	Enter Start Time hh:mm:ss
	Ignition or Timer----->		Enter End Time hh:mm:ss
Non-stop <sup>?</sup>	Enabled (Disables Shutdown Delay)		
	<b>DISABLED</b>		
Shutdown Delay	<b>600 SECONDS</b> (0-86399) seconds	Using Number Pad	
Shutdown Recording Delay <sup>?</sup>	<b>600 SECONDS</b> (0-86399) seconds	Using Number Pad	

12.4.1.3.2 Voltage

Voltage		OPTION No 1	
TITLE			
Low Voltage Protection	Enabled----->	Low Voltage (8~11.5) V / (20~23.5) V	<b>11.0 V / 22.0 V</b>
	<b>DISABLED</b>	Start-up Voltage (12~14) V / (24~26) V	<b>12.0 V / 24.0 V</b>
		Observe Time (Period observed for it to be considered a low voltage event)	<b>300 SECONDS</b> (0-1800) seconds
		Shutdown Delay (When MDR enters Low Voltage, this delay will countdown after observe time completes)	<b>300 SECONDS</b> (0-1800) seconds
		Low Volt Upload (Uploads Low Volt Information to MDR Server, requires mobile network or Wi-Fi MDR model)	Enabled
			<b>DISABLED</b>

12.4.1.3.3 Sleep

Sleep		OPTION No 1	
TITLE			
Sleep Mode <sup>?</sup>	Enabled----->	Sleep Duration	<b>100</b> (0~100)Hours
		Periodic Wake-up	<b>5</b> (0~720)Min
	<b>DISABLED</b>		

12.4.1.4 User Setup

USER SETUP					
TITLE	OPTION No 1				
Menu Idle Time (Automatically Logout Period)	30 Seconds				
	1 Minute				
	<b>3 MINUTES</b>				
	5 Minutes				
	10 Minutes				
	Never				
Username	admin	Enabled -->	Edit ----->	Username	XXXXXXXXXX (10 characters)
	user			User Group	Admin
User Group	Admin			New Password	XXXXX...XXXXX (16 characters)
	Normal User			Confirm New Password	
Add <sup>?</sup> (Active if a maximum of 2 user accounts exist)	Username				

	User Group
	Password
	Confirm Password
Check Password <sup>?</sup>	<b>ENABLED</b>
	Disabled

Delete (user only)

#### 12.4.1.5 HDD Key

HDD Key	
TITLE	OPTION No 1
Storage Name	<b>HDD</b> SD(Internal)
Storage Protected Enable	Enabled----->
	New Password XXXXXXXX (8 Characters)
	Old Password XXXXXXXX (8 Characters)
	<b>DISABLED</b>

#### 12.4.1.6 Network

##### 12.4.1.6.1 Ethernet

Ethernet		
TITLE	OPTION No 1	
DHCP Mode <sup>?</sup>	Enabled----->	<b>OBTAIN DNS AUTO</b>
	Use following DNS ----->	Preferred DNS Server <b>008.008.008.008</b>
		Alternate DNS Server <b>008.008.004.004</b>
	<b>DISABLED</b>	
Static IP	<b>ENABLED</b> ----->	IP Address <b>192.168.001.100</b>
		Subnet Mask <b>255.255.255.000</b>
		Gateway <b>192.168.001.254</b>
	Use following DNS ----->	Preferred DNS Server <b>008.008.008.008</b>
		Alternate DNS Server <b>008.008.004.004</b>
	Disabled	

##### 12.4.1.6.2 Ports

Ports	
TITLE	OPTION No 1
Web Port (IE access to MDR using Ethernet)	<b>80</b>
RTSP Port	<b>554</b>

##### 12.4.1.6.3 Wi-Fi

Wi-Fi						
TITLE	OPTION No 1					
Enable	<b>OFF</b>					
	On ----->	SSID	XXXXX...XXXXX (32 characters)			
		Encryption -->	None			
			WEP ----->	WPA/WPA2-PSK - ----->	Password	XXXX...XXXX (32 characters)
			WPA2_Enterprise ----->			
		Static IP	Enabled ----->	IP Address	XXX.XXX.XXX.XXXX	
			<b>DISABLED</b>	Subnet Mask	XXX.XXX.XXX.XXXX	
			Gateway	XXX.XXX.XXX.XXXX		
	SmartController	SSID	XXXXX...XXXXX (32 characters)			
		Encryption ----->	None			
WEP ----->			WPA ----->	None	XXXX...XXXX (32 characters)	

##### 12.4.1.6.4 Mob Net

Mob Net	
TITLE	OPTION No 1

MTU	<b>1500</b> (1~1500)
Enable	<b>OFF</b>
	On
Server Type	No Service
	GPRS/EDGE
	CDMA
	EVDO
	WCDMA
	TDSCDMA
	FDD
	TDD
Network Type	<b>Mix</b>
	4G
	3G
APN	XXXX...XXXX (32 characters)
Username	XXXX...XXXX (32 characters)
Password	XXXX...XXXX (32 characters)
Access Number	<b>*99#</b>
Certification	<b>NONE</b>
	PAP
	CHAP
	Mix
Active Mode	<b>ALWAYS</b>
	Phone/SMS ----->

Number1	XX...XX (16 characters)
Number2	XX...XX (16 characters)
Number3	XX...XX (16 characters)

12.4.1.6.5 Server

<b>Server</b>			
<u>TITLE</u>	<u>OPTION No.1</u>		
Centre Server	<b>Server 1</b> ---->	Add/ Delete	
	Server 2 ---->	Add/ Delete	
	Server 3 ---->	Add/ Delete	
	Server 4 ---->	Add/ Delete	
	Server 5 ---->	Add/ Delete	
	Server 6 ---->	Delete	
ON	<b>Enabled</b> --->	Protocol Type -->	<b>MDR6</b>
	DISABLED	Network Mode -->	Ethernet
			Wi-Fi
			<b>MOB NET</b>
			Auto Adapt
		MDR Server IP	XXX.XXX.XXX.XXXX
		MDR Server Port	<b>TCP</b> <b>5556</b>
		Media Server IP	XXX.XXX.XXX.XXXX
		Media Server Port	<b>TCP</b> <b>5556</b>

12.4.1.7 Application

12.4.1.7.1 FTP Server

<b>FTP Server</b>	
<u>TITLE</u>	<u>OPTION No.1</u>
FTP Enable	Disabled
	<b>Enabled</b>
Server	<b>192.168.1.200</b>
port	<b>21</b>
Username	<b>admin</b>
Password	XXXX...XXXX (32 characters)

12.4.1.8 Other Setup

12.4.1.8.1 Algorithm

Algorithm	
TITLE	OPTION No 1
ADAS Camera Install Height	<b>153</b> (50 ~ 400)CM
Unit Type	<b>CM</b>
	Inch
AI Voice Enable(All)	<b>ENABLED</b>
	Disabled
R-Watch Voice Enable(All)	<b>ENABLED</b>
	Disabled

12.4.1.8.2 Calibration







Calibration	
TITLE	OPTION No 1
Channel	<b>1</b>
	2
	3
	4
	5
	6
	7
	8
	9
	10
	11
	12
Channel Uses	<b>NONE</b>
	ADAS
	DSM
Mode Type	<b>NORMAL</b>
	Calibration

12.4.2 Surveillance



12.4.2.1 Live View

12.4.2.1.1 Preview

Preview				
TITLE	OPTION No 1			
Live Audio	Enabled			
	<b>DISABLED</b>			
Image Setup	Setup ----->	BRI (Brightness)	<b>31</b> 	
		CON (Contrast)	<b>31</b> 	
		COL (Colour)	<b>31</b> 	
		SAT (Saturation)	<b>31</b> 	
		Channel	Choose from 1 to 12	
		Mirror/Normal (Mirrors Live and Recorded Data)		
		Flip Vertical (Flips Live and Recorded Data)		
		Copy to	<b>ALL</b> Choose from 1 to 12	Copy
		Margins	Setup ----->	
				Margin-Top

		Margin-Bottom	<b>20</b>	 
		Margin-Left	<b>45</b>	 
		Margin-Right	<b>45</b>	 
Start-up Screen	Single			
	<b>QUAD</b>			
	9-Split			
Channel	Choose from 1-12	<b>ENABLED</b>		
		Disabled		

12.4.2.1.2 Autoscan

Autoscan				
TITLE	OPTION No 1			
Autoscan Enable (Max 32)	Enabled ----->	Add Screen ----->	Mode	<b>1 X 1</b>
	<b>DISABLED</b>			2 X 2
			Layout	Assign channels to each area
			Duration	<b>5 SECONDS</b> (1-300 seconds)
		 Edit Screen----->	Mode	<b>1 X 1</b>
				2 X 2
			Layout	Assign channels to each area
			Duration	<b>5 SECONDS</b> (1-300 seconds)
		 Delete		

12.4.2.1.3 Live OSD

Live OSD		
TITLE	OPTION No 1	
Date/Time	<b>ENABLED</b>	
	Disabled	
Vehicle Reg	Enabled	
	<b>DISABLED</b>	
Alarm	<b>ENABLED</b> (in MDR-641 Series)	
	<b>DISABLED</b> (in MDR-644 Series)	
Vehicle Num	Enabled	
	<b>DISABLED</b>	
Recording State	<b>ENABLED</b>	
	Disabled	
Speed	<b>ENABLED</b>	
	Disabled	
GPS	Enabled	
	<b>DISABLED</b>	
Channel name	<b>ENABLED</b>	
	Enabled	
G-Force	Enabled	
	<b>DISABLED</b>	
Position	Setup	Drag OSD items to desired positions on screen

12.4.2.2 Record



12.4.2.2.1 General

General	
TITLE	OPTION No 1
Video Format	<b>PAL-AHD</b>
	NTSC-AHD



HDD/SD Overwrite	By Days----->	<b>1</b> (1-31 Day)	
	<b>BY CAPACITY</b>		
	Never		
Locked File Retention (?)	<b>7</b> (1-31 Day)		
Alarm Pre-recording	<b>ENABLED</b> ----->	<b>30 SECS</b>	
	Disabled	1 Min	
		3 Min	
		5 Min	
		10 Min	
		15 Min	
		30 Min	
		1 Hour	
Enable Live View	<b>ENABLED</b>	<b>All Channels</b>	
SD Record Mode (not available for MDR-641 Series)	<b>SUB-STREAM</b> ----->	Sub-Stream CH	Choose from 1-12
	HDD (Main Stream)	Mirror CH	Choose from 1-12
	Alarms (HDD)	Alarm CH	Choose from 1-12
	None		
SD Write Resource Ratio (not available for MDR-641 Series)	xx.x%		
Recording Storage (not available for MDR-641 Series)	<b>INTERNAL SD</b>		
	FPB SD		

12.4.2.2.2 HDD

HDD					
TITLE	OPTION No 1				
Channel	Choose from all available channels				
Channel Name	<b>CH1...CHX</b>				
Enable Recording	<b>ENABLED</b>				
	Disabled				
Resolution (options auto-adjust based on available camera inputs)	CIF				
	WCIF				
	HD1				
	WHD1				
	<b>D1</b>				
	WD1 (960H)				
	720p (AHD/IP)				
	960p (AHD/IP)				
Encode Standard	<b>H264</b>				
	H264				
Frame Rate	<b>20</b> - Choose from 1 to 30				
Quality	<b>2</b> - Choose from 1 (Best) to 8	xxxKbps (Transmission speed for this channel)			
Record Mode (?)	<b>IGNITION</b>			 Delete	
	Timer ----->	Schedule->	Choose from Sun to Sat		Start Time hh:mm:ss
	Alarm				End Time hh:mm:ss
Audio	<b>ALWAYS AUDIO</b>			Video Type->	Normal
	No Audio				
	Alarm Audio				Alarm
Alarm Quality	<b>1</b> Choose from 1 (Best) to 8				
Encode Mode	<b>CBR</b>				
	VBR				
Audio Coding Format	ADPCM				
	G711U				
	G711A				


Percentage of Main Stream	xx.x%
Copy to	<b>ALL</b>
	Choose from all available channels

12.4.2.2.3 SD

SD	
TITLE	OPTION No 1
Channel	Choose from all available channels
Enable	Disabled
	<b>ENABLED</b>
Encoded Standard	<b>H264</b>
	H264
Audio	No Audio
	<b>ALWAYS AUDIO</b>
Resolution (options auto-adjust based on available camera)	<b>CIF</b>
	HD1
	D1
Frame Rate	<b>5</b> Choose from 1 to 30
Quality	<b>2</b> Choose from 1 (Best) to 8
Copy to	<b>ALL</b>
	Choose from all available channels



xxxKbps (Transmission speed for this channel)


12.4.2.2.4 Record OSD

Record OSD	
TITLE	OPTION No 1
Date/Time	<b>ENABLED</b>
	Disabled
Vehicle Reg	<b>ENABLED</b>
	Disabled
Channel Name	<b>ENABLED</b>
	Disabled
G-Force	Enabled
	<b>DISABLED</b>
Speed	<b>ENABLED</b>
	Disabled
GPS	Enabled
	<b>DISABLED</b>
Vehicle Num	Enabled
	<b>DISABLED</b>
Alarms	<b>ENABLED</b>
	Disabled
Position 	Setup ----->

Drag OSD items to desired positions on screen

12.4.2.3 IPC Setup

IPC Setup								
TITLE	OPTION No 1							
Channel 1 . . . . X	Enable -->	IP And Port xxx.xxx.xxx.xxx:xxxx	Search -> 	MAC Address	Enabled --->	IP Address		
				Disabled				
				Protocol type	<b>MDR6</b> ---->		Port 9006	
				ONVIF ---->	Port 9007			
			Network Setup -> 	Remote Device	<b>DEFAULT</b>			
				DSM				
				Protocol Type	<b>MDR6</b>			
				ONVIF				
			IP Address	xxx.xxx.xxx.xxx				

				Port	<b>9006</b>
				Username	<b>admin</b>
				Password	XXXXXXXXXXXXXXXXXX
			Outside	Enabled	<b>DISABLED</b>
		<b>DISABLED</b>			
Local Address	10.100.100.	<b>1</b> (Choose from 1 to 253)			

### 12.4.3 Events I/O

#### 12.4.3.1 General

##### 12.4.3.1.1 Peripherals

Peripherals	
TITLE	OPTION No 1
Remote Panel	<b>OFF</b> (in MDR-644 Series) <b>ON</b> (in MDR-641 Series)

##### 12.4.3.1.2 Speed

SPEED					
TITLE	OPTION No 1				
Unit	KM/H <b>MPH</b>				
Source	<b>GPS</b> CAN (not currently available, for future use)				
Speed Pulse ----->	Calibration Mode	Input Manually	Start	xx:xx:xx	
		<b>Auto Correct</b> --->	Finish ----->	Calculate	
	Pulse Ratio	Per Mile / Per KM	Correct		

##### 12.4.3.1.3 Mileage

Mileage		
TITLE	OPTION No 1	
Total Mileage	X.XXXX Mile/KM	
Actual Mileage	<b>0</b> (0-1500000 ) Mile/KM	
Mileage Setup	Confirm	Are you sure you would like to set the mileage value?
	Clear	Are you sure you would like to set the total mileage to zero?

##### 12.4.3.1.4 Unit





Unit	
TITLE	OPTION No 1
Temperature	<b>CELSIUS(°C)</b> Fahrenheit(°F)

##### 12.4.3.1.5 CAN (not currently available, for future use)

CAN	
TITLE	OPTION No 1
Name	CAN1
Type	<b>NULL</b> J1939
Baud Rate	<b>125</b> 50 100 250 500 100

12.4.3.2 Snapshots

12.4.3.2.1 Time Snap

Time Snap		OPTION No 1		
TITLE	OPTION No 1			
Time Snap	Enabled -----> 	Add ----->	New No. gets added	
	<b>DISABLED</b>			
No. 1 – 8 (maximum)	Start Time (Time of Day)	Using NumPad: 	hh:mm:ss	
	End Time		hh:mm:ss	
	 Delete	Disabled for No. 1		
	 Snap Link Setup ->	Channel	Choose from 1 to 12	
	Snap Enable ----->	Enabled -----> <b>DISABLED</b>	Resolution CIF WCIF HD1 WHD1 <b>D1</b> WD1 720p 960P 1080p	
	Copy to	<b>ALL</b> Choose from 1 to 16		
		Quality	<b>1</b> Choose from 1(Best) to 8	Upload Type <b>FTP DISABLED</b> FTP Enabled
		Snap Count	<b>1</b> (1~3) pcs	
		Snap Interval	<b>5</b> (5~3600) seconds	

12.4.3.2.2 IO Snap

IO Snap		OPTION No 1		
TITLE	OPTION No 1			
Alarm Snap	Snap Link Setup----->	Channel	Choose from 1 to 12	
		Snap Enable ----->	Enabled -----> <b>DISABLED</b>	
		Copy to	<b>ALL</b> Choose from 1 to 16	
			Resolution CIF WCIF HD1 WHD1 <b>D1</b> WD1 720p 960P 1080p	
		Quality	<b>1</b> Choose from 1(Best) to 8	Upload Type <b>FTP DISABLED</b> FTP Enabled
		Snap Count	<b>1</b> (1~3) pcs	
		Snap Interval	<b>5</b> (5~3600) seconds	
Mob App/Web Snap (IE access to MDR)	Snap Link Setup ----->	Channel	Choose from 1 to 12	
		Snap Enable ----->	Enabled -----> <b>DISABLED</b>	
		Copy to	<b>ALL</b> Choose from 1 to 16	
			Resolution CIF WCIF HD1 WHD1 <b>D1</b> WD1 720p 960P 1080p	
		Quality	<b>1</b> Choose from 1(Best) to 8	Upload Type <b>FTP DISABLED</b> FTP Enabled
		Snap Count	<b>1</b> (1~3) pcs	
		Snap Interval	<b>5</b> (5~3600) seconds	

Upload Type	<b>FTP DISABLED</b>
	FTP Enabled
Quality	<b>1</b> Choose from 1(Best) to 8
Snap Count	<b>1</b> (1~3) pcs

## 12.4.4 Alarms

### 12.4.4.1 General

#### 12.4.4.1.1 Speed Alarm

Speed Alarm			
TITLE	OPTION No 1		
Overspd	Enabled--->	Alarm Type	<b>ALARM</b>
	<b>DISABLED</b>	Event	
Trigger	Early Difference		<b>10</b> MPH
	Speed		<b>80</b> MPH
	Duration Time		<b>10</b> (0~255) seconds
	Alarm Off-Delay		<b>10</b> (0~10) seconds
Alarm Link Setup	----->	Channel	<b>Tick AVAILABLE CHANNELS</b>
		Audio	<b>Tick AVAILABLE CHANNELS</b>
		Audio Duration	NONE
			1 Min
			3 Min
			5 Min
			<b>10 MIN</b>
			15 Min
		30 Min	
		Post Record	NONE
			1 Min
			3 Min
			5 Min
			<b>10 MIN</b>
	15 Min		
	30 Min		
	Lock	Enabled	<b>DISABLED</b>
Alarm O/P Link	1 ----->	Alarm O/P Duration	<b>0</b> (0~255) seconds
	2----->		
Channel Link	<b>NONE</b>		
	Single ----->	Setup ----->	Edit Screen Layout
	Double----->	Setup ----->	Edit Screen Layout
	Three----->	Setup ----->	Edit Screen Layout
	Quad ----->	Setup ----->	Edit Screen Layout
Buzzer	Enabled		
	<b>DISABLED</b>		
Buzzer Duration	Always		
	Timer----->		<b>10</b> (05 - 60 seconds)
Alarm Snap	Enabled		
	<b>DISABLED</b>		

#### 12.4.4.1.2 Panic Alarm

Panic Alarm			
TITLE	OPTION No 1		
Panic Btn	<b>ENABLED</b> ->	Alarm Type	<b>ALARM</b>
	Disabled	Event	
		Trigger	Activation Period <b>1</b> (1~255) seconds

	Alarm Off-Delay <sup>?</sup>	<b>10</b> (0~10) seconds	
Alarm Link Setup	----->	Channel	<b>TICK AVAILABLE CHANNELS</b>
		Audio	<b>TICK AVAILABLE CHANNELS</b>
		Audio Duration	NONE
			1 Min
			3 Min
			5 Min
			<b>10 MIN</b>
			15 Min
		30 Min	
		Post Record	NONE
	1 Min		
	3 Min		
	5 Min		
	<b>10 MIN</b>		
	15 Min		
	30 Min		
	Lock	Enabled	<b>DISABLED</b>
Alarm O/P Link	1 ----->	Alarm O/P Duration	<b>0</b> (0~255) seconds
	2----->		
Channel Link	<b>NONE</b>		
	Single ----->	Setup ----->	Edit Screen Layout
	Double----->	Setup ----->	Edit Screen Layout
	Three----->	Setup ----->	Edit Screen Layout
	Quad ----->	Setup ----->	Edit Screen Layout
Buzzer	Enabled		
	<b>DISABLED</b>		
Buzzer Duration	Always		
	Timer----->	<b>10</b> (05 - 60 seconds)	
Alarm Snap	Enabled		
	<b>DISABLED</b>		

12.4.4.1.3 IO Alarm

IO Alarm		OPTION No 1		
TITLE	OPTION No 1			
IO #	<b>ENABLED</b> →	Alarm Type	Alarm	
	Disabled		<b>EVENT</b>	
		Trigger	Sensor Name	IO1
			OSD Name	Li
			Sensor Uses	<b>NONE</b>
				Right Steering
				Left Steering
				Astern
				Seat Belt
				Privacy
Trigger Source	<b>VOLTAGE</b>			
	CAN (not in use)			
IO Set	Low			
	<b>HIGH</b>			
	Alarm Off-Delay	<b>1</b> (0~10) seconds		
Alarm Link Setup	----->	Channel	<b>UNTICK AVAILABLE CHANNELS</b>	
		Audio	<b>UNTICK AVAILABLE CHANNELS</b>	

Audio Duration	NONE
	1 Min
	3 Min
	5 Min
	<b>10 MIN</b>
	15 Min
	30 Min
Post Record	NONE
	1 Min
	3 Min
	5 Min
	<b>10 MIN</b>
	15 Min
	30 Min
Lock	Enabled
	<b>DISABLED</b>

Alarm O/P Link	1 ----->	Alarm O/P Duration	0 (0~255) seconds
	2 ----->		
Channel Link	<b>NONE</b>		
	Single ----->	Setup ----->	Edit Screen Layout
	Double ----->	Setup ----->	Edit Screen Layout
	Three ----->	Setup ----->	Edit Screen Layout
	Quad ----->	Setup ----->	Edit Screen Layout
Buzzer	Enabled		
	<b>DISABLED</b>		
Buzzer Duration	Always		
	Timer ----->	<b>10</b> (05 - 60 seconds)	
Alarm Snap	Enabled		
	<b>DISABLED</b>		

Copy	IO #	<b>ALL</b> ----->	Copy
		Choose from 1 to 8 IO-->	

#### 12.4.4.2 Video

##### 12.4.4.2.1 Video Loss

Video Loss		OPTION No 1	
TITLE	OPTION No 1	Alarm Type	Event
Video Loss	<b>ENABLED</b> →	<b>ALARM</b>	Event
	Disabled		
Trigger Setup	Video Loss Setup	Channel	<b>TICK AVAILABLE CHANNELS</b>
		Effective Time	<b>5</b> (0~10) seconds
Alarm Link Setup	----->	Channel	<b>Tick 12 CHANNELS</b>
		Audio	<b>Tick 12 CHANNELS</b>
Audio Duration	----->	NONE	
		1 Min	
		3 Min	
		5 Min	
		<b>10 MIN</b>	
		15 Min	
		30 Min	
Post Record	----->	NONE	
		1 Min	
		3 Min	

		5 Min	
		<b>10 MIN</b>	
		15 Min	
		30 Min	
	Lock	Enabled	
		<b>DISABLED</b>	
Alarm O/P Link	1 ----->	Alarm O/P Duration	<b>0</b> (0~255) seconds
	2----->		
Channel Link	<b>NONE</b>		
	Single ----->	Setup ----->	Edit Screen Layout
	Double----->	Setup ----->	Edit Screen Layout
	Three----->	Setup ----->	Edit Screen Layout
	Quad ----->	Setup ----->	Edit Screen Layout
Buzzer	<b>ENABLED</b>		
	Disabled		
Buzzer Duration	<b>ALWAYS</b>		
	Timer----->	5 (05 - 60 seconds)	
Alarm Snap	Enabled		
	<b>DISABLED</b>		

12.4.4.2.2 Motion Det

Motion Det		OPTION No 1	
TITLE	OPTION No 1		
MD	Enabled--->	Alarm Type	<b>ALARM</b>
	<b>DISABLED</b>	Event	
M.D Setup	Channel Enable (1 to 12)	Enabled ----->	Sensitivity
			1 (Most)
			2
			3
			4
			<b>5</b>
			6
			7
			8
			Area Setup
			Activated
			<b>SHUTDOWN DELAY</b>
			Ignition On
			Both
		<b>DISABLED</b>	
	Alarm Off-Delay	<b>10</b> (0~10) seconds	
Alarm Link Setup	----->	Channel	<b>TICK AVAILABLE CHANNELS</b>
		Audio	<b>TICK AVAILABLE CHANNELS</b>
		Audio Duration	NONE
			1 Min
			3 Min
			5 Min
			<b>10 MIN</b>
			15 Min
			30 Min
		Post Record	NONE
			1 Min
			3 Min
			5 Min
			<b>10 MIN</b>
			15 Min



		30 Min	
	Lock	Enabled	
		<b>DISABLED</b>	
Alarm O/P Link	1 ----->	Alarm O/P Duration	0 (0~255) seconds
	2----->		
Channel Link	<b>NONE</b>		
	Single ----->	Setup ----->	Edit Screen Layout
	Double----->	Setup ----->	Edit Screen Layout
	Three----->	Setup ----->	Edit Screen Layout
	Quad ----->	Setup ----->	Edit Screen Layout
Buzzer	Enabled		
	<b>DISABLED</b>		
Buzzer Duration	Always		
	Timer----->	10 (05 - 60 seconds)	
Alarm Snap	Enabled		
	<b>DISABLED</b>		

12.4.4.2.3 Blind Det

Blind Det				
TITLE	OPTION No 1			
BD	Enabled---->	Alarm Type	<b>ALARM</b>	
	<b>DISABLED</b>	Event		
B.D Setup	Channel (1 to 12)	Enabled ----->	Sensitivity	<b>High</b>
				Middle
				Low
			Duration Time	5 (0~255) seconds
			Delay Time	5 (0~255) seconds
	Alarm Off-Delay	10 (0~10) seconds		
		<b>DISABLED</b>		
Alarm Link Setup	----->	Channel	<b>TICK AVAILABLE CHANNELS</b>	
		Audio	<b>TICK AVAILABLE CHANNELS</b>	
		Audio Duration	NONE	
			1 Min	
			3 Min	
			5 Min	
			<b>10 MIN</b>	
			15 Min	
		30 Min		
		Post Record	NONE	
1 Min				
3 Min				
5 Min				
	<b>10 MIN</b>			
	15 Min			
	30 Min			
Lock	Enabled			
	<b>DISABLED</b>			
Alarm O/P Link	1 ----->	Alarm O/P Duration	0 (0~255) seconds	
	2----->			
Channel Link	<b>NONE</b>			

	Single ----->	Setup ----->	Edit Screen Layout
	Double----->	Setup ----->	Edit Screen Layout
	Three----->	Setup ----->	Edit Screen Layout
	Quad ----->	Setup ----->	Edit Screen Layout
Buzzer	Enabled		
	<b>DISABLED</b>		
Buzzer Duration	Always		
	Timer----->	<b>10</b> (05 - 60 seconds)	
Alarm Snap	Enabled		
	<b>DISABLED</b>		

#### 12.4.4.2.4 Privacy Mode

Privacy Mode							
TITLE	OPTION No 1	Alarm Type	<b>Event</b>				
BD	Enabled--->		Alarm				
	<b>DISABLED</b>						
		Setup	Channel (1 to 12)	Enabled Channel 2----->	Privacy Method	<b>IO</b>	
						Ignition OFF	
					Exit Method	<b>Speed 5</b> (1-120MPH)	
						IO	
						Ignition ON	
					Enable AI Mp3 Voice	<b>DISABLED</b>	
						Enabled	
					Alarm Voice Enable	<b>ENABLED</b>	
						Disabled	
					Effective Time	<b>10</b> (0-65535 Seconds)	
							<b>DISABLED</b>

#### 12.4.4.3 Advanced

##### 12.4.4.3.1 G-Force

G-Force							
TITLE	OPTION No 1	Alarm Type	<b>ALARM</b>				
G-Force	Enabled----->		Event				
	<b>DISABLED</b>						
Calibrate	X = 0	G-Force Trigger	Threshold Value	X	<b>5.5 G</b>		
	Y = 0			Y	<b>5.5 G</b>		
	Z = 0			Z	<b>5.5 G</b>		
			Alarm Off-Delay	<b>10</b> (0~10) seconds			
		Alarm Link Setup	----->	Channel	<b>TICK AVAILABLE CHANNELS</b>		
				Audio	<b>TICK AVAILABLE CHANNELS</b>		
				Audio Duration	NONE		
					1 Min		
					3 Min		
					5 Min		
					<b>10 MIN</b>		
					15 Min		
				30 Min			
		Post Record		NONE			
			1 Min				
			3 Min				
			5 Min				

		10 MIN	
		15 Min	
		30 Min	
	Lock	Enabled	
		<b>DISABLED</b>	
Alarm O/P Link	1 ----->	Alarm O/P Duration	0 (0~255) seconds
	2----->		
Channel Link	<b>NONE</b>		
	Single ----->	Setup ----->	Edit Screen Layout
	Double----->	Setup ----->	Edit Screen Layout
	Three----->	Setup ----->	Edit Screen Layout
	Quad ----->	Setup ----->	Edit Screen Layout
Buzzer	Enabled		
	<b>DISABLED</b>		
Buzzer Duration	Always		
	Timer----->	10 (05 - 60 seconds)	
Alarm Snap	Enabled		
	<b>DISABLED</b>		

12.4.4.3.2 Geo-Fencing

Geo-Fence	
TITLE	OPTION No 1
Enable	<b>ON</b>
	Off

Alarm Link Setup	----->	Channel	<b>UNTICK AVAILABLE CHANNELS</b>
		Audio	<b>UNTICK AVAILABLE CHANNELS</b>
		Audio Duration	NONE
			1 Min
			3 Min
			5 Min
			<b>10 MIN</b>
			15 Min
		30 Min	
		Post Record	NONE
			1 Min
			3 Min
			5 Min
			<b>10 MIN</b>
			15 Min
		30 Min	
		Lock	Enabled
			<b>DISABLED</b>
Alarm O/P Link	1 ----->	Alarm O/P Duration	0 (0~255) seconds
	2----->	Alarm O/P Duration	0 (0~255) seconds
	Non-Stop (?)	<b>DISABLED</b>	
		Enabled	

Channel Link	<b>NONE</b>		
	Single ----->	Setup ----->	Edit Screen Layout
	Double----->	Setup ----->	Edit Screen Layout
	Three----->	Setup ----->	Edit Screen Layout
	Quad ----->	Setup ----->	Edit Screen Layout

Buzzer	Enabled	10 (05 - 60 seconds)
	<b>DISABLED</b>	
Buzzer Duration	Always	
	Timer----->	
Alarm Snap	Enabled	
	<b>DISABLED</b>	

12.4.4.3.3 HDD Error

HDD/SD Error			
TITLE	OPTION No 1		
HDD/SD Error	<b>ENABLED</b> ->	Alarm Type	<b>ALARM</b>
	Disabled		Event
		HDD Error Setup	Alarm Off-Delay 5 (0~10) seconds
		Alarm Link Setup	-----> Channel <b>TICK AVAILABLE CHANNELS</b>
			Audio <b>TICK AVAILABLE CHANNELS</b>
			Audio Duration
			NONE
			1 Min
			3 Min
			5 Min
			<b>10 MIN</b>
			15 Min
			30 Min
			Post Record
			NONE
			1 Min
			3 Min
			5 Min
			<b>10 MIN</b>
			15 Min
			30 Min
			Lock
			Enabled
			<b>DISABLED</b>
		Alarm O/P Link	1 -----> Alarm O/P Duration 0 (0~255) seconds
			2----->
		Channel Link	<b>NONE</b>
			Single -----> Setup -----> Edit Screen Layout
			->
			Double-----> Setup -----> Edit Screen Layout
			->
			Three-----> Setup -----> Edit Screen Layout
			->
			Quad -----> Setup -----> Edit Screen Layout
			->
		Buzzer	<b>ENABLED</b>
			Disabled
		Buzzer Duration	<b>ALWAYS</b>
			Timer-----> 10 (05 - 60 seconds)
		Alarm Snap	Enabled
			Disabled

12.4.4.4 Advanced

12.4.4.4.1 ADAS

ADAS			
TITLE	OPTION No.1		
LDW	<b>ENABLED</b>	Alarm Type	<b>ALARM</b>
	Disabled		Event
FCW	<b>ENABLED</b>	Alarm Type	<b>ALARM</b>
	Disabled		Event
FCW	<b>ENABLED</b>	Alarm Type	<b>ALARM</b>
	Disabled		Event
		Trigger	Level Speed Range 20 – 50 MPH

	Secondary Speed Range	>= 50MPH			
Sensitivity	<b>MIDDLE</b>				
	Low				
	High				
	User Defined-- →	8 Seconds (0 - 4) Seconds			
Alarm Link Setup	-----→	Channel	<b>Tick 12 CHANNELS</b>		
		Audio	<b>Tick 12 CHANNELS</b>		
		Audio Duration	1 Min		
			3 Min		
			5 Min		
			<b>10 MIN</b>		
			15 Min		
		Post Record	1 Min		
			3 Min		
			5 Min		
	<b>10 MIN</b>				
	15 Min				
	Lock	Enabled			
		<b>DISABLED</b>			
Alarm O/P Link	1 -----→	Alarm O/P Duration	0(0~255) seconds		
	2-----→				
Channel Link	<b>NONE</b>				
	Single -----→	Setup -----→		Edit Screen Layout	
	Double-----→	Setup -----→		Edit Screen Layout	
	Three-----→	Setup -----→		Edit Screen Layout	
	Quad -----→	Setup -----→		Edit Screen Layout	
Buzzer	<b>ENABLED</b>				
	Disabled				
Buzzer Duration	<b>ALWAYS</b>				
	Timer-----→	10 (05 - 60 seconds)			
Alarm Snap	Enabled				
	Disabled				
Alarm Snap Set	Snap Mode	<b>MANY</b>			
	Number of Snap	1 choose from 1 - 3			
	Snap Interval	5 Choose from 5-3600 Seconds			
	Channel (Choose from 1 - 12)	<b>DISABLED</b>			
		Enabled	FTP	<b>DISABLED</b>	
		Resolution	Enabled		
			<b>D1</b>		
			CIF		
			HD1		
			QCIF		
			QVGA		
			VGA		
			WCIF		
			WHD1		
			WD1		
			960P		
			WQCIF		
			720P		
			Q1081P		

	1080P
Quality	<b>1(Best)</b>
	2
	3
	4
	5
	6
	7
	8

## 12.4.5 Maintenance

### 12.4.5.1 Config

#### 12.4.5.1.1 Config

Config	
TITLE	OPTION No 1
Config File Export	Export
Config File Import	Import
AI Config File Export	Export
AI Config File Import	Import

#### 12.4.5.1.2 Network

Network	
TITLE	OPTION No 1
Network File Export	Export
Network File Import	Import

#### 12.4.5.1.3 Geo-Fence

Geo-Fence	
TITLE	OPTION No 1
Geo-Fence File Export	Export
Geo-Fence File Import	Import

### 12.4.5.2 Metadata

#### 12.4.5.2.1 Data Export

Data Export				
TITLE	OPTION No 1			
<b>ALL</b>	<b>ENABLED</b> ----->	File Type	<b>SNAPSHOTS</b>	Export
			GPS Data	
	G-Force Info			
	Mob Net Dial Log			
	Alarm Log			
	Operation Log			
	BlackBox Data			
	Debug Log Information			
	Disabled			
Export Time	Enabled ----->	Start time	Date	yyyy-mm-dd
			Time	hh:mm:ss
		End time	Date	yyyy-mm-dd
			Time	hh:mm:ss
		File Type	<b>SNAPSHOTS</b>	Export
			GPS Data	
			G-Force Info	
			Mob Net Dial Log	
			Alarm Log	
			Operation Log	
BlackBox Data				
Debug Log Information				
	Disabled			

#### 12.4.5.3 Upgrade

Upgrade		
TITLE	OPTION No 1	
FMW/MCU	Upgrade	Are you sure to Upgrade?

IPC Upgrade (IPC must be connected)	Upgrade	All	Enabled	Upgrade
			Disabled	
		Choose from the available IP Cameras	Enabled	Upgrade
			Disabled	
R-Watch	Upgrade	Choose from the available R-Watch	Enabled	Upgrade
			Disabled	

12.4.5.4 Storage

Storage				
TITLE	OPTION No 1			
Storage Type	HDD			
	SD (Internal)			
	FPB SD			
	FRONT USB			
Free/Total	XXXX.X G			
Format	HDD	Format or Not?		
	SD (Internal)			
	FPB SD			
	FRONT USB	Format type	FAT32	Are you sure you would like to Format FRONT USB?
			MDR6	Less than 4GB
				Greater than 4GB

12.4.5.5 Reset



Reset		
TITLE	OPTION No 1	
Factory Settings	Restore	Are you sure to restore all the settings?
System Restart	Restart	Are you sure to Restart?

12.5 LOGOUT 

12.5.1 Logout Prompt

Logout Prompt	
TITLE	OPTION No 1
Are you sure to Logout?	<b>YES</b>
	No

# 13 Help Button


Main Menu	Sub Menu	Page	Tab Menu	Title	Open	Text	Close
SYSTEM INFO	-	Version Info	-	Serial Num		For Mobile Network / Wi-Fi MDR models: Serial Numbers is shown under MDR	
SETUP	Basic Setup	Time Setup	Time Sync	NTP sync		Only for Mobile network or Wi-Fi MDR units.	
SETUP	Basic Setup	Power	On/Off	On/Off Mode		Timer mode must not be used for extended periods of time - this will damage your vehicle's battery.	
SETUP	Basic Setup	Power	On/Off	Non-stop		Non - stop allows the MDR to record infinitely. Enabling this will disable Shutdown Delay Warning. Using the MDR for prolonged periods of time without ignition (vehicle running) can drain the vehicle's battery.	
SETUP	Basic Setup	Power	Sleep	Sleep Mode		Enable sleep mode to allow MDR automatic wake up after a certain period of time to support MDR-Dashboard client auto-download feature. Sleep Duration: Sleep duration before MDR completely shutdown after ignition off. Periodic Wake-up: After entered minutes of sleep, MDR will turn on automatically to start auto-download task.	
SETUP	Basic Setup	User Setup	-	Check Password		By ticking this box the MDR will check the complexity of your login password. If the password is default or too simple a window will pop up after the MDR has started up and will ask you to change its password to be more complex. This will show every time the MDR starts up, a mouse is required to remove the notification each time.	
SETUP	Basic Setup	Network	Ethernet	DHCP Mode		Automatically obtains IP address from network.	
SETUP	Surveillance	Record	General	Locked File Retention		This will ensure that alarms that are set as locked files will be stored for this time period. Locked files are automatically deleted once this period is over, regardless of remaining storage capacity.	
SETUP	Surveillance	Record	HDD	Record Mode		Timer prevents an MDR from turning Off - higher priority than on/off timer. This timer CANNOT control when an MDR turns ON.	
SETUP	Surveillance	Record	HDD	Record Rate		<b>I.Frame</b> MDR will record using one frame per second in order to save storage, but once an alarm is triggered, the MDR will record with the current frame rate. <b>Normal</b> MDR will record using the correct frame rate.	
SETUP	Surveillance	Record	Record OSD	Position		Choice of a maximum of 6 options.	
SETUP	Alarms	Advanced	Geo-Fence	Alarm Link Setup		Non-Stop allows the sensor output infinitely as long as the MDR is within the Geo-Fence region. Note: the region can be set in MDR-Dashboard 6.0 software.	
SETUP	Alarms	Advanced	Panic Btn	Alarm-Off Delay		Alarm Off-Delay means that, if the same type of alarm triggers twice within the Alarm Off-Delay period, this will be considered as a single alarm.	



## 14 Mounting Dimensions

### 14.1 MDR-641XX-X-XX-XXX(XX)


For mounting hole dimensions please refer to the MDR-BKT-02 drawing.

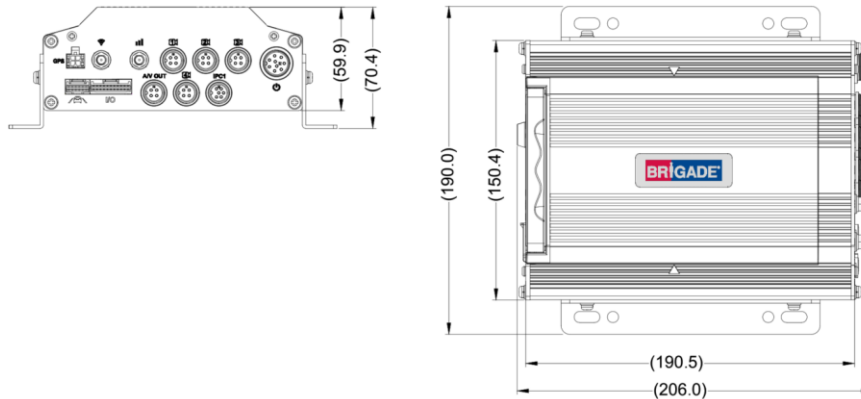

<u>Bracket Position</u>	<u>MDR height from ground</u>
1 (higher one on bracket)	17.5 mm
2 (lower one on bracket)	11.5 mm

### 14.2 MDR-644XX-X-XX-XXX(XX)

For mounting centre holes please refer to MDR-BKT-01 drawing.

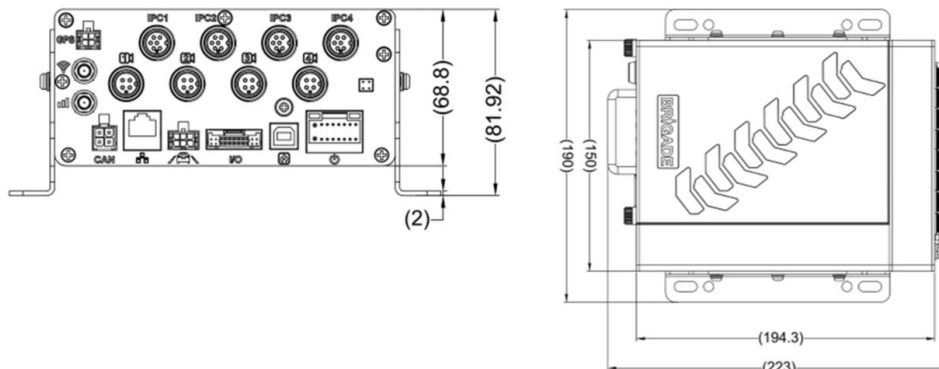

<u>Bracket Position</u>	<u>MDR height from ground</u>
1 (highest on bracket)	29 mm
2	20 mm
3	12.5 mm
4 (lowest on bracket)	4.5 mm

## 15 Appendices

### 15.1 Video Quality Table

Using Brigade's Resource calculator, the below tables have been compiled. Please note the following:

- The values below are for reference only
- Streaming bandwidth can vary considerably according to the level of variations in the image. Static images are more efficiently compressed than dynamic ones
- Frame rates are assumed to be set to maximum which is 25fps for PAL and 30fps for NTSC

Quality level	1 (Highest)	2	3	4	5	6	7	8 (Lowest)	
Video Streaming Data Rate (Kbps) depending on resolution (H.264)	1080P (AHD)	8192	6390	5505	4068	3712	2818	1919	1024
	960P (AHD)	7987.2	6240	5366.4	4492.8	3619.2	2745.6	1872	998.4
	720P (AHD)	6144	4800	4128	3456	2784	2112	1440	768
	WD1	2662.4	1996.8	1664	1331.2	1170	1040	936	832
	D1	2048	1536	1280	1024	900	800	720	640
	WHD1	1996.8	1664	1331.2	998.4	832	728	650	585
	HD1	1536	1280	1024	768	640	560	500	450
	WCIF	1331.2	998.4	832	665.6	572	455	405.6	364

	CIF (Lowest)	1024	768	640	512	440	350	312	280
Video Streaming Data Rate (Kbps) depending on resolution (H.265)	1080P (AHD)	5734	4473	3847	3221	2596	1970	1344	717
	960P (AHD)	5591	4368	3756	3145	2533	1922	1310	699
	720P (AHD)	4301	3360	2890	2419	1949	1478	1008	538
	WD1	1597	1198	998	799	702	624	562	499
	D1	1331	998	832	666	630	560	504	448
	WHD1	1198	998	799	599	499	437	390	351
	HD1	998	832	666	538	448	392	400	360
	WCIF	799	599	499	399	343	273	243	218
	CIF (Lowest)	717	538	448	358	352	280	250	224

## 15.2 MDR Storage Calculator

For typical recording sizes for a one-hour duration and HDD recording times in hours versus storage capacity, please use the MDR storage calculator: <https://brigade-electronics.com/mdr-hub/>.

## 15.3 User Log Description

Reason	Example	Description
MDR Ignition	08:48:16 Power on Last power-off cause: Normal poweroff	MDR powers on and show the reason for the last shutdown: normal ignition off or time off
	10:10:19 Power on Last power-off cause: Low voltage reboot	MDR powers on and show the reason for the last shutdown: low voltage shutdown
	11:02:38 Power on Last power-off cause:ACC sleep	MDR powers on and show the reason for the last shutdown: Sleep session
	15:28:51 Low voltagePower off	
	22:30:55 ACCPower off	Ignition off, MDR shutdown
	22:33:43 HDD lockPower off	MCU lock open, MDR shutdown
MDR Recording	08:48:25 Channel1 Main record on	
	08:48:25 Channel1 Alarm record on	
	08:48:25 Channel1 Sub-record on	
MDR Setup Changed	08:50:15 Save configuration Surveillance->Live View->Preview User Name:admin	
	09:10:07 Save configuration Surveillance->Live View->Live OSD User Name:admin	
	10:05:13 Save configuration Alarms->Video->Motion Det User Name:admin	
	10:12:37 Save configuration Alarms->General->IO Alarm User Name:admin	
	10:30:13 Save configuration Surveillance->Record->HDD User Name:admin	
	10:34:59 Save configuration Basic Setup->Network->Server User Name:admin	
	10:35:34 Save configuration Surveillance->Record->SD User Name:admin	
	14:25:51 Reboot User Name:admin	
	15:21:40 Save configuration IPC Setup User Name:admin	
	15:28:50 Exporting User Name:admin	Export config file
	15:35:00 Importing User Name:admin	Import config file
	00:47:21 Format HDD User Name:admin	
	03:58:23 Adjust time:[2022-03-27 02:00:00] -> [2022-03-27 03:00:00]	
	Alarms	09:10:07 09:11:15 Channel4 Motion Det.
09:12:38 09:11:15 IO1		
09:15:17 09:11:15 Enter Polygon Area[test(1)]		Geo- Fence alarm triggered, area name: test, area type: polygon
09:16:07 09:18:15 SD card failure		
10:04:55 10:05:05 Channel2 Video loss		
11:42:54 11:42:54 Low-voltage alarm		
12:04:17 12:04:54 Blind Det.		

## 15.4 MDR-Dashboard 6.0 Silent Installation

MDD-Dashboard 6.0 supports silent installation using PowerShell switches. Follow the steps below to complete a silent installation:

Copy the installer to a directory, such as: C:\install\MDR-Dashboard\_6.0\_2.3.1.0.83.exe

Enter the PowerShell window

Run the command: C:\install\MDR-Dashboard\_6.0\_2.3.1.0.71.exe /VERYSILENT /SP-

You can also put the command in the batch file intall.bat and double-click install.bat to run it. An example is shown below

```
ECHO.
```

```
ECHO Installing MDR-Dashboard 6.0
```

```
ECHO Please wait...
```

```
start /wait %systemdrive%\install\MDR-Dashboard_6.0_2.3.1.0.71.exe /VERYSILENT /SP-
```

```
ECHO
```

```
ECHO Killing MDR-Dashboard_6.0_2.3.1.0.71.exe process
```

```
taskkill.exe /F /IM MDR-Dashboard_6.0_2.3.1.0.71.exe
```

```
ECHO
```

\*If wanting to update the software, users can run "C:\MDR-Dashboard\unins000.exe /VERYSILENT /SP-" command to uninstall previous version first, then proceed to install the new version. Please be aware that during the uninstall process, there will be a prompt window to click yes/no to keep or delete history user configuration information.

## 15.5 MDR-Dashboard 6.0 Additional PowerShell Switches

SP-	Disables the "This will install... Do you wish to continue?" prompt at the beginning of the setup. This will have no effect if the DisableStartupPrompt [Setup] section directive was set to yes.
/SILENT, /VERYSILENT	Instructs Setup to be silent or very silent. When Setup is silent the wizard and the background window are not displayed but the installation progress window is. When a setup is very silent this installation progress window is not displayed. Other prompts display as normal, for example error messages during installation are displayed and the startup prompt is (if you haven't disabled it with DisableStartupPrompt or the "/SP-" command line option explained above) If a restart is necessary and the "/NORESTART" command isn't used (see below) and Setup is silent, it will display a Reboot now? messagebox. If it is very silent it will reboot without prompting.
/NORESTART	Instructs Setup not to reboot even if it is necessary.
/LOADINF="filename"	Instructs Setup to load the settings from the specified file after having checked the command line. This file can be prepared
using the "/SAVEINF=" command as explained below. /SAVEINF="filename"	Instructs Setup to save installation settings to the specified file.
/DIR="x:\dirname"	Overrides the default directory name displayed on the Select Destination Directory wizard page. A fully qualified pathname must be specified. If the [Setup] section directive DisableDirPage was set to yes, this command line parameter is ignored.
/GROUP="folder name"	Overrides the default folder name displayed on the Select Start Menu Folder wizard page. If the [Setup] section directive DisableProgramGroupPage was set to yes, this command line parameter is ignored.
/NOICONS	Instructs Setup to initially disable the Don't create any icons check box on the Select Start Menu Folder wizard page.
/COMPONENTS="comma separated list of component names"	Overrides the default components settings. Using this command line parameter causes Setup to automatically select a custom

## 15.6 Events Table

The following table illustrates the type of events recorded. This is illustrated in the event list search of the MDR and MDR-Dashboard 6.0.

Event Type	Event Name	Description
Video Loss	VL	Video loss alarm (e.g., the camera has been either deliberately or inadvertently disconnected).
Blind Detection	BD	Blind camera alarm (e.g., the camera has been intentionally obstructed or a large object is obstructing the entire view).
Motion Detection	MD	Motion detection for video capturing when vehicles are unattended.
Triggers	Name of the Trigger (e.g., IO1, IO2 etc. or PB for Panic Button)	GPIO (general purpose input/output) trigger sensor alarm.
Speed Alarm	H-Speed	Overspeed can be flagged and recorded.
Geo-Fence	Geo-Fence	Geo-Fence alarm can be flagged and recorded when vehicle in / out a set area.
G-Force	G-Force	Excessive G-Force can be flagged and recorded.
HDD/SD Error	HDD/SD Error	Storage (HDD, SSD, SD card) damage can be flagged.

## 16 Testing and Maintenance

### 16.1 Operator Instructions

This information is addressed to the operator of the vehicle where a Brigade MDR 600 Series System is installed:

- 1) The Brigade MDR 600 Series is intended to be used as a mobile digital recorder. Drivers and operators should not interact with the MDR setup menu. The remote control should be strictly used by technically trained operators when the vehicle is stationary.
- 2) Testing and inspection of the system should be carried out in accordance with this manual. The driver or operator is responsible for ensuring the Brigade MDR 600 Series System is working as intended.
- 3) Operators using this equipment are strongly recommended to check the system's operation at the beginning of every shift.
- 4) Improved safety can be achieved when used in conjunction with Brigade's camera-monitor systems. This may allow triggering camera views and providing additional vehicle information during manoeuvring. It is necessary to read, understand and follow all instructions received with the Brigade MDR 600 Series System.
- 5) The Brigade MDR 600 Series System for digital recording is intended for use on commercial vehicles and machinery equipment. Correct installation of the system requires a good understanding of vehicle electrical systems and procedures along with a proficiency in installation.
- 6) Keep these instructions in a safe place and refer to them when maintaining and/or reinstalling the product.

## 16.2 Maintenance and Testing

This information is addressed to the operator for maintenance and testing of a vehicle with the Brigade MDR 600 Series System installed. This is also to familiarise the operator with the features and behaviour of the system. More frequent inspections should be performed in cases where:

- The vehicle is operating in a particularly dirty or harsh environment.
- The operator has reason to suspect the system is not working or has been damaged.

Procedure:

- 1) Clean the camera lens and housing of any accumulation of dirt, mud, snow, ice or any other debris.
- 2) Visually inspect the cameras and MDR unit and verify that they are securely attached to the vehicle and are not damaged.
- 3) Visually inspect the system's cables and verify that they are properly secured and not damaged.
- 4) Ensure the area in front of the cameras is clear of obstacles and has the right coverage area to view objects.

If any of the following tests fail, follow the appropriate sections of this instruction guide or contact Brigade if still in doubt.

- 5) Activate the Brigade MDR 600 Series System and verify the LEDs (on the MDR unit front) are illuminated, it should take approximately 60 seconds for HDD recordings to start after a file-system check.
- 6) This test can only be performed when the MDR video output is displayed on a Brigade monitor. Ensure that both the SD card and HDD are recording. Recording is shown with an SD card symbol and HDD symbol.
- 7) Other tests can be performed depending on the configuration. For instance, if Video Loss is activated, any disconnected or malfunctioning camera is detected.
- 8) Sensor trigger activation can also be diagnosed. For instance, if a trigger is setup to turn a channel on full screen or set an alarm. This will be identified by the channel occupying the full screen or a red-letter A (if a Brigade monitor is connected).
- 9) GPS, G-Sensor, Supply Voltage and Heater functioning can be accessing SYS INFO using the mouse (if a Brigade monitor is connected).

## 17 General Antenna Guidelines

- (a) Ensure that the cable is:
  - properly secured but ensure that the cable is not strained or distorted
  - routed in such a way as to avoid sharp bends
  - not run in parallel with vehicle wiring wherever possible
  - routed as far away as possible from any electronic module
- (b) Excess coaxial cable should not be coiled up as this may affect the tuning of the antenna as well as producing electrical interference. Excess cable should be laid out over a larger area to avoid potential coiling.
- (c) Before connection to the equipment the antenna system should be DC tested at the equipment end of the coaxial cable for continuity and to ensure there is no short circuit.
- (d) Antenna positions should be planned to achieve best separation between antennas while maintaining a suitably sized ground plane for each one. Each antenna should be separated by at least 50cm where possible. This includes antenna already fitted to the vehicle, e.g., radio, phone and GPS devices. Antenna should be tightly installed preferably on roof or a place near the window to guarantee signal strength. Please do not put antenna in a enclosed or half-enclosed space around metal which may obstruct reception.
- (e) Record and playback a short section to check recordings do not have or cause interference. EMC issues may cause interference to in-car entertainment equipment or other vehicle electrical equipment. Also, the antenna may pick up noise received from the vehicle or other fitted role equipment such as light bars, GPS processors and other digital (computing) equipment and present it to the radio equipment as interference. Repositioning may be required.

## 18 Troubleshooting

### 18.1 MDR Unit


Scenario	Detection	Resolution
Loss of recording data	<ol style="list-style-type: none"> <li>1. Error light will be visible on the MDR unit LED panel</li> <li>2. Error light will be shown on the Remote panel</li> <li>3. If the sound buzzer is activated or a sound buzzer is connected to one of the trigger outputs, an audible alarm can alert drivers</li> </ol>	<ol style="list-style-type: none"> <li>1. SD card is used to recover data – see the manual for recording options</li> <li>2. Require the LED panel of the MDR or a remote panel to always be visible to driver</li> <li>3. The sound buzzer should be activated and configured to alert drivers to errors.</li> </ol>
System Power loss	<ol style="list-style-type: none"> <li>1. Error light will be visible on the MDR unit LED panel and power LED will turn off</li> </ol>	<ol style="list-style-type: none"> <li>1. Vehicle Battery should be replaced if it is suspected of malfunctioning</li> <li>2. Low Voltage protection feature should be turned on</li> <li>3. Fuses may be blown and may need to be replaced</li> </ol>
Data Corruption due to Power loss	<ol style="list-style-type: none"> <li>1. Error light will be visible on the MDR unit LED panel and power LED will turn off</li> </ol>	<ol style="list-style-type: none"> <li>1. MDR is powered for few minutes after power loss to enable closure of recording files</li> </ol>
Video Loss	<ol style="list-style-type: none"> <li>1. Video loss LED will turn on which is found on the MDR and the Remote panel</li> <li>2. If the sound buzzer is activated or a sound buzzer is connected to one of the trigger outputs, an audible alarm can alert drivers</li> </ol>	<ol style="list-style-type: none"> <li>1. If possible, cables should not be installed in an area where these can be tampered with</li> <li>2. Ensure cable connectors are secure before driving</li> </ol>
No recording on SD or HDD / SSD	<ol style="list-style-type: none"> <li>1. Error light will be visible on the MDR unit LED panel</li> <li>2. Error light will be shown on the Remote panel</li> <li>3. If the sound buzzer is activated or a sound buzzer is connected to one of the trigger outputs, an audible alarm can alert drivers</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure that the Overwrite feature is turned on</li> <li>2. Install larger capacity HDD / SSD or 256GB SD card</li> </ol>
MCU failure	<ol style="list-style-type: none"> <li>1. Visible Physical Damage and unable to connect on PC</li> </ol>	<ol style="list-style-type: none"> <li>1. Retain a backup MCU for a vehicle</li> <li>2. Ensure supplied USB cable is used</li> <li>3. Ensure PC is fully up to date with Windows updates and drivers are installed</li> </ol>
Failure due to Environment	<ol style="list-style-type: none"> <li>1. Error light will be visible on the MDR unit LED panel</li> <li>2. Error light will be shown on the Remote panel</li> <li>3. HDD recording cannot begin (HDD LED not ON)</li> </ol>	<ol style="list-style-type: none"> <li>1. Driver should wait a few minutes for the internal heater to heat the HDD to above 10°C – this will then start to record</li> </ol>
Docking Station Failure	<ol style="list-style-type: none"> <li>1. No visible power LED is on</li> </ol>	<ol style="list-style-type: none"> <li>1. Ensure the MCU KEY is locked</li> <li>2. Ensure that wires that are being used are protected by heat shrink</li> </ol>
HDD inconsistent functionality (HDD Repair)	<ol style="list-style-type: none"> <li>1. Error light will be visible on the MDR unit LED panel</li> <li>2. Error light will be shown on the Remote panel</li> </ol>	<ol style="list-style-type: none"> <li>1. Customers must follow the MCU removal procedure as stipulated in the manual</li> </ol>

### 18.2 MDR Fireproof Box

- When you connect a Fireproof box to the MDR. This needs to be enabled in the OSD. Go to Surveillance > Record > SD > FPB SD.
- The MDR may restart to engage this new hardware device.
- All new fireproof boxes must be formatted before use.
- Please follow the below steps to do this:
  - Format as FAT32 first so the correct storage capacity displays
  - Then format as MDR6 so the MDR can record to this storage
- The process above will never have to be repeated
- Finally confirm storage under system information, it should show under SD(FPB) as 31.2GB.



FPB SD Enable Figure 265

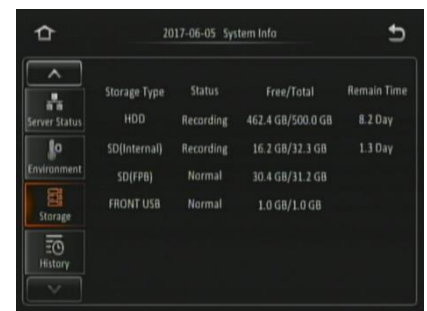

FPB SD Storage Capacity Figure 266

## 19 Specifications

### Features

Video System	MDR-641: PAL / NTSC / AHD MDR-644: PAL / NTSC / AHD / TVI
Video Input	MDR-641: 4x Channels for analogue cameras - Select Connector 1x Channels for IP cameras - Select Connector MDR-644: 4x Channels for analogue cameras - Select Connector 4x Channels for IP cameras - Select Connector 4x Channels for IP cameras via Ethernet Connector, requires PON switch
Video Output	1x Channel - Select Connector
Video Compression	H.264 / H.265
Setup or Control	USB Mouse and PC via browser (Ethernet)
Display Split	Single, Quad or 9-Split
Audio Input	MDR-641: 4x Channels for analogue cameras - Select Connector 1x Channels for IP cameras - Select Connector MDR-644: 4x Channels for analogue cameras - Select Connector 4x Channels for IP cameras - Select Connector 4x Channels for IP cameras via Ethernet Connector, requires PON switch
Audio Output	1x Channel - Select Connector
On-Screen Display	GPS information, alarm, temperature, acceleration, voltage, firmware version, MCU version, device information, network information, storage information
Operation Interface	OSD Graphical User Interface
Image View	Normal View, Mirror View or Flip Vertical per channel
Installation Direction	Any mounting direction (Internal HDD anti-vibration mount) except for MDR-641 with CMR HDD which must be installed horizontally.
Image Frame Rate Minimum - Maximum	1-25 FPS (PAL); 1-30 FPS (NTSC); 1-30 FPS (IP Camera dependent)
Image Resolution	PAL: WD1 (960x576), D1 (704x576), WHD1 (960x288), HD1 (704x288), WCIF (480x288), CIF (352x288) NTSC: WD1 (960x480), D1 (704x480), WHD1 (960x240), HD1 (704x240), WCIF (480x240), CIF (352x240) AHD: HD (1280x720), FULL HD (1920x1080) IP Camera: HD (1280x720), FULL HD (1920x1080) configurable for each channel
Image Quality	1-8 Adjustable Levels (1 is the Best)
Recording Mode	Normal, Alarm, Timer
Power-up Time to Recording	60 Seconds minimum
Mirror Recording	MDR-641: No MDR-644: Yes, on SD Card
Playback of Recordings	1 Channel at a time using MDR video output to monitor Configurable Channels using MDR-Dashboard 6.0 / MDR-Player 6.0 / MDR 6.0 Apps / SmartController Apps / PC via browser (Ethernet)
File Search Mode Options via OSD	Date/Time/Channel/File Type
Built-in Heater (Power / Ambient Temperature Threshold for On/Off)	At -25°C HDD / SSD records after approx. 11 minutes At any temperature the SD card starts recording after a minimum of 60 seconds from power-up
Built-in GPS	GPS location tracking, speed detection and sync time
Built-in Buzzer	MDR-641: No MDR-644: Yes
Built in G-Sensor	Yes
Network Protocols Supported	TCP/IP, UDP, DHCP (client only), TFTP, FTP (server and client), HTTP/HTTPS (server and client), SNTP (server and client) ONVIF (server and client), RTSP (server and client)

### Network Interface

Mobile Standards	Worldwide Excluding North America Models: 2G/3G/4G [Variants that contain "G" or "GW" in its model number] North American Models: 3G/4G [Variants that contain "G" or "GW" in its model number]
Mobile Operating Bands	Worldwide Excluding North America Models: 4G (FDD LTE): B1, B3, B7, B8, B20, B28A, all bands with receive diversity 3G (WCDMA/HSPA+/HSPA/DC-HSPA+): B1, B8, all bands with receive diversity 2G (GPRS/GSM/EDGE): 900/1800 MHz [Variants that contain "G" or "GW" in its model number]  North American Models: 4G (FDD LTE): B2, B4, B5, B12, B13, B14, B66, B71, all bands with diversity 3G (WCDMA/HSPA+/HSPA/DC-HSPA+): B2, B4, B5, all bands with diversity [Variants that contain "G" or "GW" in its model number]
Mobile Data Services	Worldwide Excluding North America Models: GPRS: UL 85.6 kbit/s; DL 107 kbit/s EDGE: UL 236.8 kbit/s; DL 296 kbit/s WCDMA: UL 384 kbit/s; DL 384 kbit/s HSUPA: UL 5.76 Mbit/s DC-HSPA: DL 42 Mbit/s LTE FDD: UL 50 Mbit/s; DL 150 Mbit/s [Variants that contain "G" or "GW" in its model number]

	North American Models: WCDMA: UL 384 kbit/s; DL 384 kbit/s HSUPA: UL 5.76 Mbit/s DC-HSPA: DL 42 Mbit/s LTE FDD: UL 50 Mbit/s; DL 150 Mbit/s [Variants that contain "G" or "GW" in its model number]
SIM Card Type	DATA ENABLED [Variants that contain "G" or "GW" in its model number]
SIM Card Size	Standard [Variants that contain "G" or "GW" in its model number]
Wi-Fi Standard	802.11a/b/g/n/ac for 2.4GHz and 5GHz [Variants that contain "W" or "GW" in its model number]
Maximum Wi-Fi Transmission Rate	130Mbps for 20MHz, 150Mbps for 40MHz, 433 Mbps for 80 MHz channel operations [Variants that contain "W" or "GW" in its model number]
Wi-Fi Security Standards	WEP 64/128, WPA, WPA2, TKIP, AES, WAPI [Variants that contain "W" or "GW" in its model number]

#### Windows Software

File Download via	USB 3.0 (Mobile Caddy Unit) using MDR-Dashboard 6.0, USB 2.0 Flash drive with FAT32 format (Docking Station),
-------------------	--

#### Mobile Applications

Android Operating System	Brigade MDR 6.0 MDR SmartController
iOS Operating System	Brigade MDR 6.0 MDR SmartController

#### Connections/Interfaces

Network Ethernet	MDR-641: No MDR-644: RJ45 port (10/100M) (For IP camera 4-port PON switch or MDR configuration using Ethernet Menu on PC)
USB-A Interface Front Docking Station	USB 2.0 x 1 used for exporting, upgrading and configurations USB Flash Drives: Maximum 256GB, 5V and 500mA (3.5" external desktop or bigger HDDs are not supported due to power supply is exceeded)
USB-B Interface Rear Docking Station	MDR-641: No MDR-644: USB 2.0 x 1 - Connect to Fireproof Box
USB-A Interface Mobile Caddy Unit	MDR-641: USB 3.0 x1 – Connect to MCU Reader
USB-B Interface Mobile Caddy Unit	MDR-644: USB 3.0 x 1 - Connect to PC
Serial Interface	MDR-641: RS232 x 1 Connector (can be transferred to RS485 to support Remote Panel) MDR-644: RS485 x 1 Connector (Remote Panel) via multi-pin connector
Input/Output, Power Output	MDR-641: 8x Trigger Inputs, 2x Trigger Outputs, 1x 5V OUT, 1x GND, 1x Speed Signal and 1x Speed GND via multi-pin connector MDR-644: 8x Trigger Inputs, 2x Trigger Outputs, 1x 12V OUT, 1x GND, 1x Speed Signal and 1x Speed GND via multi-pin connector
CAN Bus	Not currently available, for future use

#### Mechanical Specification

Dimensions typ. Assembly (W x H x D in mm) including brackets	MDR-641: 190mm x70mm x 206mm MDR-644: 190mm x 82mm x 223mm
Weight of Installed Unit	MDR-641: approx. 2.1kg MDR-644: approx. 2.7kg

#### Electrical Interface

Operating Voltage (min. / typ. / max.)	8.5V /12V / 32V (without any cameras and any accessories)
Current Consumption (min. / typ. / max. per mode)	MDR-641: 0.30A (stable @ 24V) / 0.53A (stable @ 12V) (without cameras and MCU heater off) 0.45A (stable @ 24V) / 1.02A (stable @ 12V) (camera IR off and HDD heater off) 0.91A (stable @ 24V) / 1.80A (stable @ 12V) (camera heaters on and MCU heater on) Tested with BE-800C cameras  MDR-644: 0.42A (stable @ 24V) / 0.74A (stable @ 12V) (without cameras and MCU heater off) 0.73A (stable @ 24V) / 1.40A (stable @ 12V) (camera IR off and HDD heater off) 2.6A (stable @ 24V) / 5.35A (stable @ 12V) (camera heaters on and MCU heater on) Tested with BE-800C cameras
Inrush Current (min. / typ. / max. per mode)	MDR-641: Inrush Current (min. / typ. / max. per mode) 0.89A (inrush @ 24V) / 1.40A (inrush @ 12V) (without cameras and MCU heater off) 1.40A (inrush @ 24V) / 2.80A (inrush @ 12V) (camera heaters off and MCU heater off) 1.83A (inrush @ 24V) / 3.88A (inrush @ 12V) (camera heaters on and MCU heater on) Tested with BE-800C cameras  MDR-644:

	1.61A (inrush @ 24V) / 3.36A (inrush @ 12V) (without cameras and MCU heater off) 1.73A (inrush @ 24V) / 3.65A (inrush @ 12V) (camera heaters off and MCU heater off) 2.71A (inrush @ 24V) / 6.07A (inrush @ 12V) (camera heaters on and MCU heater on) Tested with BE-800C cameras
Trigger Inputs	8x (approx. 9.0V threshold input voltage)
5V Output	1x 4.2V @ 1.74A Maximum Load (MDR-641 only)
12V Output	1x 12V @ 2.45A Maximum Load (MDR-644 only)
Alarm Outputs	MDR-641: 2x 11.0V at 293mA Maximum Load MDR-644: 2x 11.5V at 500mA Maximum Load
Maximum Camera Supply Current	600mA


Test and Environmental Specification

RoHS2 Compliance	Yes
REACH Compliance	Yes
Operating Temperature Range	CMR: -40°C to +50°C SSD: -40°C to +70°C
Storage Temperature Range	-40°C to +85°C
Vibration Rating	SSD: 3.1G CMR: 1.5G
Shock Rating	51G
Ingress Protection	IP30
Operating Relative Humidity	10% to 90%



## 20 Approvals

CE  
UKCA  
UNECE Regulation No. 10 Revision 5 ("E-marking")  
FCC  
IC

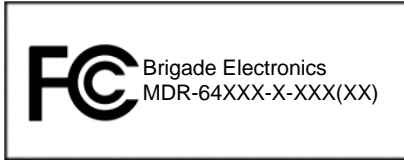

### FCC Statement:

This device complies with part 15, 22, 24, 27 & 90 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Wi-Fi FCC ID: 2ACOE-WG217

Mobile Network FCC ID: XMR201808EC25AF

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

### ISED Statement:

This equipment complies with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Wi-Fi IC ID: 20742-WG2175ES

Mobile Network IC ID: 10224A-2018EC25AF

*Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.*

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

*Cet appareil contient des émetteurs / récepteurs exempts de licence qui sont conformes au (x) RSS (s) exemptés de licence d'Innovation, Sciences et Développement économique Canada. L'opération est soumise aux deux conditions suivantes:*

*(1) Cet appareil ne doit pas provoquer d'interférences.*

*(2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.*

### EU & UKCA Declaration of Conformity:

Hereby, Brigade Electronics Group PLC declares that the radio equipment type Mobile Digital recorder system with model numbers MDR-644XX-X-XXX and MDR-641XX-X-XXX are in compliance with Directive 2014/53/EU and Regulation S.I. 2017/1206.

The full text of the EU and UKCA declaration of conformity are available at the following internet address: [www.brigade-electronics.com](http://www.brigade-electronics.com)

## 21 Glossary

- 3G** – Third Generation  
**4G** – Fourth Generation  
**AC** – Adaptor Cable  
**ADPCM** – Adaptive Differential Pulse-code Modulation  
**G711U** – Narrowband audio codec  
**G711A** - Narrowband audio codec  
**Alarms** – An “EVENT” that has been configured (in the MDR unit settings) to be an alarm. Alarms are identified as orange video channel data on the playback timeline. These are displayed in the real-time alarm log in the MDR-Dashboard and MDR Mobile Apps. Alarms can generate email alerts and trigger automatic downloads (dependant on MDR-Dashboard configuration).  
**AHD** – Analog High Definition  
**Automatic Download** – A download that is set up in the MDR-Dashboard to automatically download data related to an occurring “Alarm” or “Event” between user-defined times. Configured under Download in MDR-Dashboard.  
**APN** – Access Point Name  
**AVI** – Audio Video Interleaved  
**BD** – Blind Detection  
**CBR** – Constant Bit Rate  
**CE** – Conformité Européenne  
**CH** – Channel  
**CHAP** – Challenge Handshake Authentication Protocol  
**CIF** – Common Intermediate Format (¼ D1 format)  
**CPU** – Central Processing Unit  
**CU** – Control Unit  
**D1** – D1 is full standard resolution for 25FPS (PAL) and 30FPS (NTSC)  
**DHCP** – Dynamic Host Configuration Protocol  
**DS** – Docking Station  
**DST** – Daylight Saving Time  
**EDGE** – Enhanced Data GSM Environment  
**EIA** – Electronic Industries Alliance  
**Events** – An activation of an input e.g., Sensor input (trigger 1-8), G Sensor, Over speed etc. Events are identified as red vertical lines on the playback timeline. These are not shown in the real-time alarm log.  
**EXP** – Expansion  
**FCC** – Federal Communications Commission  
**FPB** – Fireproof box  
**FTP** – File Transfer Protocol  
**GB** – Gigabyte  
**GHz** – Gigahertz  
**GND** – Ground  
**GPIO** – General Purpose Input/output  
**GPRS** – General Packet Radio Service  
**GPS** – Global Positioning System  
**GSC** – G-sensor Cable  
**G-Sensor** - measure of acceleration/shock of the vehicle  
**GSM** – Global System for Mobile Communications  
**GUI** - Graphical user interfaces  
**H.264** – Video compression standard  
**H.265** - Video compression standard  
**HD1** – Half Definition compared to Full Definition (See D1)  
**HD** – High Definition  
**HDD** – Hard Disk Drive  
**HSDPA** – High Speed Downlink Packet Access  
**HSPA** – High Speed Packet Access  
**HSUPA** – High Speed Uplink Packet Access  
**HTTP** – Hypertext Transfer Protocol  
**HTTPS** – Hypertext Transfer Protocol Secure  
**IC** – Industry Canada  
**ID** – Identification  
**IO** – Input/output  
**iOS** – iPhone Operating System (Apple Inc.)  
**IP** – Internet Protocol  
**IR** – Infra-red  
**IT** – Information technology  
**Km/h** – Kilometres per hour  
**LAN** – Local Area Network  
**LED** – Light Emitting Diode  
**MAC** – Media Access Control  
**MB** – Megabyte  
**MCU** – Mobile Caddy Unit  
**MD** – Motion Detection  
**MDR** – Mobile Digital Recorder  
**MHz** – Megahertz  
**MPH** – Miles per hour  
**NET** – Network  
**NTSC** – National Television System Committee  
**ONVIF** – Open Network Video Interface Forum  
**OSD** – On-screen Display  
**PAL** – Phase Alternating Line  
**PAP** – Password Authentication Protocol  
**PC** – Personal Computer  
**PN** – Part Number  
**PTZ** – Pan, Tilt and Zoom  
**PWR** – Power  
**REC** – Record  
**RES** – Resolution  
**RP** – Remote Panel  
**RPC** – Remote Panel Cable  
**RTSP** – Real Time Streaming Protocol  
**S/N** – Serial Number  
**Scheduled Download** – A download that is manually setup from in the MDR-Dashboard (to be downloaded when the selected MDR connects to the server). Configured under Server in MDR-Dashboard.  
**SD** – Secure Digital  
**SIM** – Subscriber Identity Module  
**SMTP** – Simple Mail Transfer Protocol  
**SNTP** – Simple Network Time Protocol  
**SPD** – Speed  
**SQL** – Structured Query Language  
**SSL** – Secure Sockets Layer  
**TB** – Terabyte  
**TCP** – Transmission Control Protocol  
**TFTP** – Trivial File Transfer Protocol  
**TIA** – Telecommunications Industry Association  
**TRIG** – Trigger  
**UDP** - User Datagram Protocol  
**UKCA** - UK Conformity Assessed  
**UNECE** – United Nations Economic Commission for Europe  
**USB** – Universal Serial Bus  
**V** – Voltage  
**VBR** – Variable Bit Rate  
**VGA** – Video Graphics Array  
**VIC** – Video Input Cable  
**VL** – Video Loss  
**VOC** – Video Output Cable  
**W** – Watt, standard unit of power  
**WCDMA** – Wide Code Division Multiple Access  
**Wi-Fi** – Wireless Fidelity  
**WEP** - Wired Equivalent Privacy  
**WPA** - Wi-Fi Protected Access  
**WPA2-PSK** - Wi-Fi Protected Access II  
**WPA2-Enterprise** - Wi-Fi Protected Access II Enterprise

## 22 Disclaimer

Mobile digital recorder systems are an invaluable driver aid but do not exempt the driver from taking every normal precaution when conducting a manoeuvre. No liability arising out of the use or failure of the product can in any way be attached to Brigade or to the distributor.

### Dénégation

Les enregistreurs numériques portables sont une aide précieuse pour le conducteur, mais celui-ci doit toutefois prendre toutes les précautions nécessaires pendant les manœuvres. Brigade ou ses distributeurs n'assument aucune responsabilité résultant de l'utilisation ou d'un défaut du produit.

### Haftungsausschluss

Mobile Datenaufzeichnung Systeme sind für den Fahrer eine unschätzbare Hilfe, ersetzen aber beim Manövrieren keinesfalls die üblichen Vorsichtsmaßnahmen. Für Schäden aufgrund der Verwendung oder eines Defekts dieses Produkts übernehmen Brigade oder der Vertriebshändler keinerlei Haftung.

### Condizioni di Utilizzo

I sistemi di registrazione digitale mobile costituiscono un prezioso ausilio alla guida, ma il conducente deve comunque assicurarsi di prendere tutte le normali precauzioni quando esegue una manovra. Né Brigade né il suo distributore saranno responsabili per eventuali danni di qualsiasi natura causati dall'utilizzo o dal mancato utilizzo del prodotto.

### Aviso legal

Sistemas móviles grabadora digital son una ayuda inestimable driver pero no exime al conductor de tomar todas las precauciones normales al realizar una maniobra. Ninguna responsabilidad que surja del uso o fallo del producto puede de alguna manera acoplarse a la brigada o al distribuidor.

### Declinação de responsabilidade

Celular gravador digital de sistemas são uma inestimável driver de auxílio, mas não isentam o driver de tomar todas normal precaução ao realizar uma manobra. Nenhuma responsabilidade decorrente da utilização ou falha do produto pode de qualquer maneira ser anexado ao de bombeiros ou para o distribuidor.

### Verwerping

Mobiele digitale recorder systemen zijn een waardevolle hulp voor de bestuurder, maar stelt de bestuurder niet vrij van de normale voorzorgsmaatregelen bij het uitvoeren van een manoeuvre. Geen aansprakelijkheid voortvloeiend uit het gebruik of falen van het product kan op één of andere manier aan Brigade of aan de distributeur worden toegekend.

### Отказ от обязательств

Системы видеорегистрации оказывают водителю неоценимую помощь при маневрировании, но не освобождают его от обязанности соблюдения обычных мер предосторожности. В ином случае компания Brigade или дистрибьютор не несет ответственность, возникающую в ходе использования или по причине неисправности данного продукта.

### Hatırlatma

Mobil Sayısal Kayıt Cihazları sürücünün önemli bir yardımcısı olmakla birlikte, manevra esnasında sürücü bir kaza olmaması için her türlü önlemi almalıdır. Brigade veya bölgesel dağıtıcıları yapılacak yanlış bir uygulama ve sonucunda oluşabilecek maddi ve/veya manevi kayıplardan sorumlu tutulamaz.

### Uwaga

Systemy mobilnych cyfrowych rejestratorów są niezastąpioną pomocą dla kierowcy, ale jego posiadanie nie zwalnia kierowcy z zachowania szczególnej ostrożności podczas manewrów. Żadna kolizja drogowa ani jej skutki nie mogą obciążać producenta urządzenia oraz jego dystrybutorów.

Specifications subject to change. Sous réserve de modifications techniques. Änderungen der technischen Daten vorbehalten. Specifiche soggette a variazioni. Las especificaciones están sujetas a cambios. Wijzigingen in specificaties voorbehouden. As especificações estão sujeitas a alterações. Спецификация может изменяться. Brigade Electronics belirttiği özellikleri haber vermeksizin istediği zaman değiştirebilir. Specyfikacja techniczna może ulec zmianie.

